



Susol
Super Solution

Air Circuit Breakers

LS IS



Susol ACB

LS Industrial Systems Made It!



Super Solution

Contents :

Overview	4
External configuration	14
Internal configuration	16
Ordering	18
Ratings	22
Trip relays	26
Accessories	52
Electrical diagram	80
Dimensions	82
Technical information	
• Insulation voltage	104
• Temperature derating	105
• Operating conditions	106
• Protective coordination	108
Standards & Approval	113
Time chart	114
Ordering sheet	117

Susol
ACB

Premium Susol ACB meets your demands for high breaking capacity,

fully line-up, and optimized panel size.

Various accessories and connection methods realize user-friendly handling.


Susol ACB provides you with total solutions with an advanced trip relay
for measurement, diagnosis, analysis, and communication as well as protective
functions for absolute protective coordination and electric power monitoring system.

LS Industrial System *Super Solution series*



■ Susol series circuit breakers are suitable for

- Protection of power distribution
- Protection of motor & its control device
- Controlling and disconnecting circuits

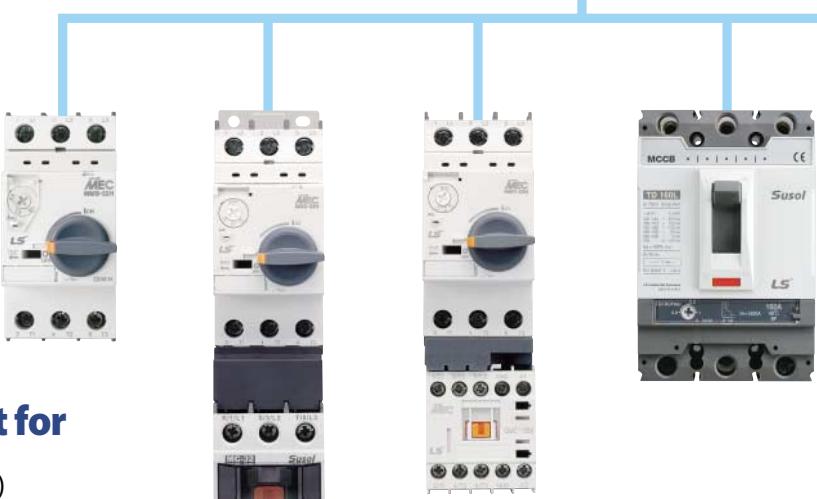

■ Optimum technical support for

(Cascading, Discrimination, Type 2 coordination)

- Selecting economical protection system
- Quarantee safety of the installation
- Reducing the stress on components and damage
- Guarantee service continuity

Susol Manual Motor Starters



Susol Air Circuit Breakers



Susol Molded Circuit Breakers



Susol Magnetic Contactors & Overload Relays

Full line-up & Compact

Up to 6300A, Susol ACB provides fully lined-up 3 frame.

For each frame, there is just one size, which is smaller and more compact.

It makes it possible for you to design the optimized volume panel.

630~2000AF



630~4000AF



W = 334mm

W = 412mm

85kA **100kA**

AH-06~20D

06	630AF
08	800AF
10	1000AF
13	1250AF
16	1600AF
20	2000AF

Icu=Ics=85kA/500Vac
W=334(3p), 419(4p)mm

AH-06~40E

06	630AF	20	2000AF
08	800AF	25	2500AF
10	1000AF	32	3200AF
13	1250AF	40	4000AF
16	1600AF		

Icu=Ics=100kA/500Vac
W=412(3p), 527(4p)mm

4000~6300AF



150kA

- The highest breaking capacity:
150kA (6300AF at 500Vac)
- 3 ampere frame sizes:
2000/4000/6300AF
- N phase current conducting capacity: 100%

AH-40~63G

40	4000AF
50	5000AF
63	6300AF

Icu=Ics=150kA/500Vac
W=785(3p), 1015(4p)mm

Trip Relay (OCR)

Trip relays are classified according to function.


Trip relays are classified according to their usages and functions to maximize customers' satisfaction. Classified trip relays and easy installation.

- Protection: overload, short current, ground fault, earth leakage, under voltage, over voltage, under frequency, over frequency, reverse power, unbalance, etc
- Measurement: voltage, ampere, power, energy, frequency, power factor, Harmonics, etc.
- Event & fault recording: Max. 256 events & faults
- Communication: Modbus/RS-485, Profibus-DP



Susol ACB Trip Relay functioning world-best protection can be interlocked with mechanism. It makes the breaking capacity of ACB improved and ACB's life enhanced, and provides advanced functions - measurement, diagnosis, analysis, and communication.

Susol ACB Trip relay

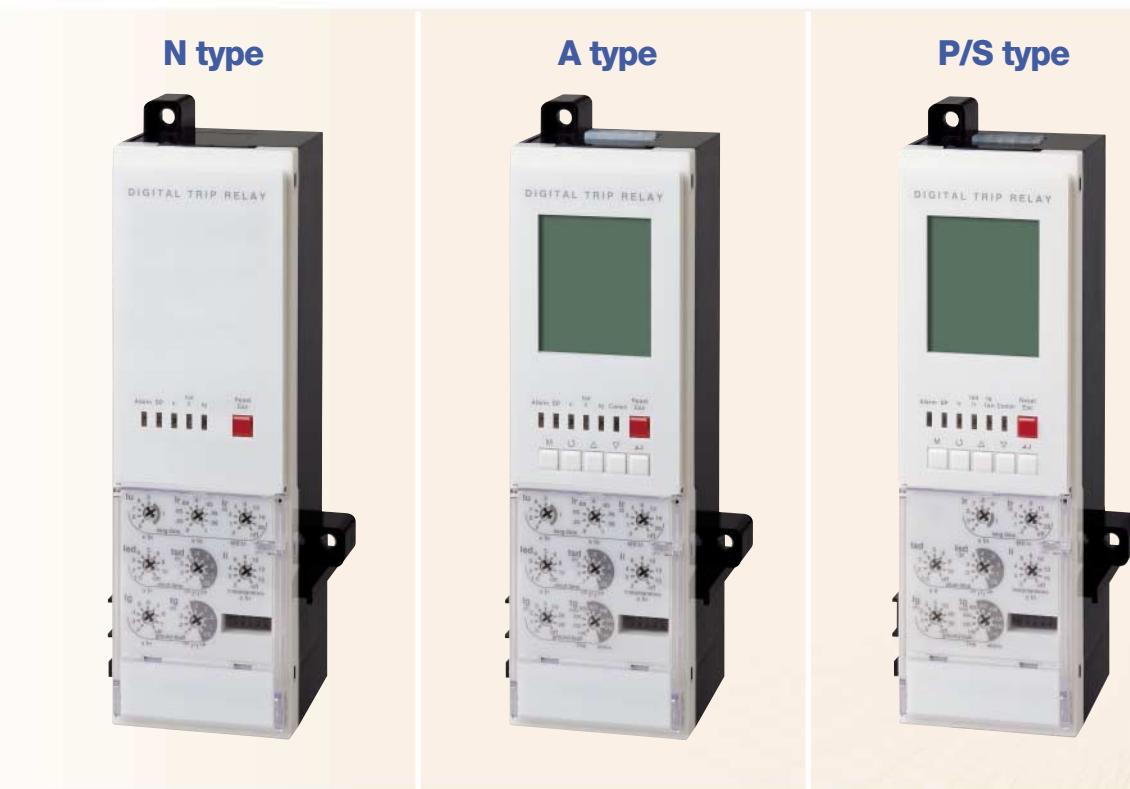

N type

A type

P/S type



- L/S/I/G/Thermal
- Self Power
- RTC Timer mounted
- Fault information (LED)

- L/S/I/G/Thermal
- ZSI
- Remote Reset
- Modbus/RS-485
- Profibus-DP
- Self Power
- AC/DC 100~250V
- DC 24~60V
- RTC Timer mounted
- Fault Recording (10EA)

- L/S/ I/G/Thermal(Continuous)
- UV/OV/OF/UF/rP/Vun/lun
- Measurement: V/A/W/Wh/F/PF
- Harmonics (63th), Waveform (S Type)
- ZSI
- Remote Reset
- Modbus/RS-485
- Profibus-DP
- AC/DC 100~250V
- DC 24~60V
- RTC Timer mounted
- Event Recording (256EA)
- Fault Recording (256EA)
- Fault Wave (S Type)

Trip relays series



N Type (Normal)

- Self-power + Current protection



P Type (Power Meter)

- A type + Power Meter + Voltage / Frequency / Unbalance protection



A Type (Ammeter)


- Current Meter + Current protection + DO control + Communication



S Type (Supreme)

- P type + Harmonics analysis (63 th) + Fault wave recording


Accessories

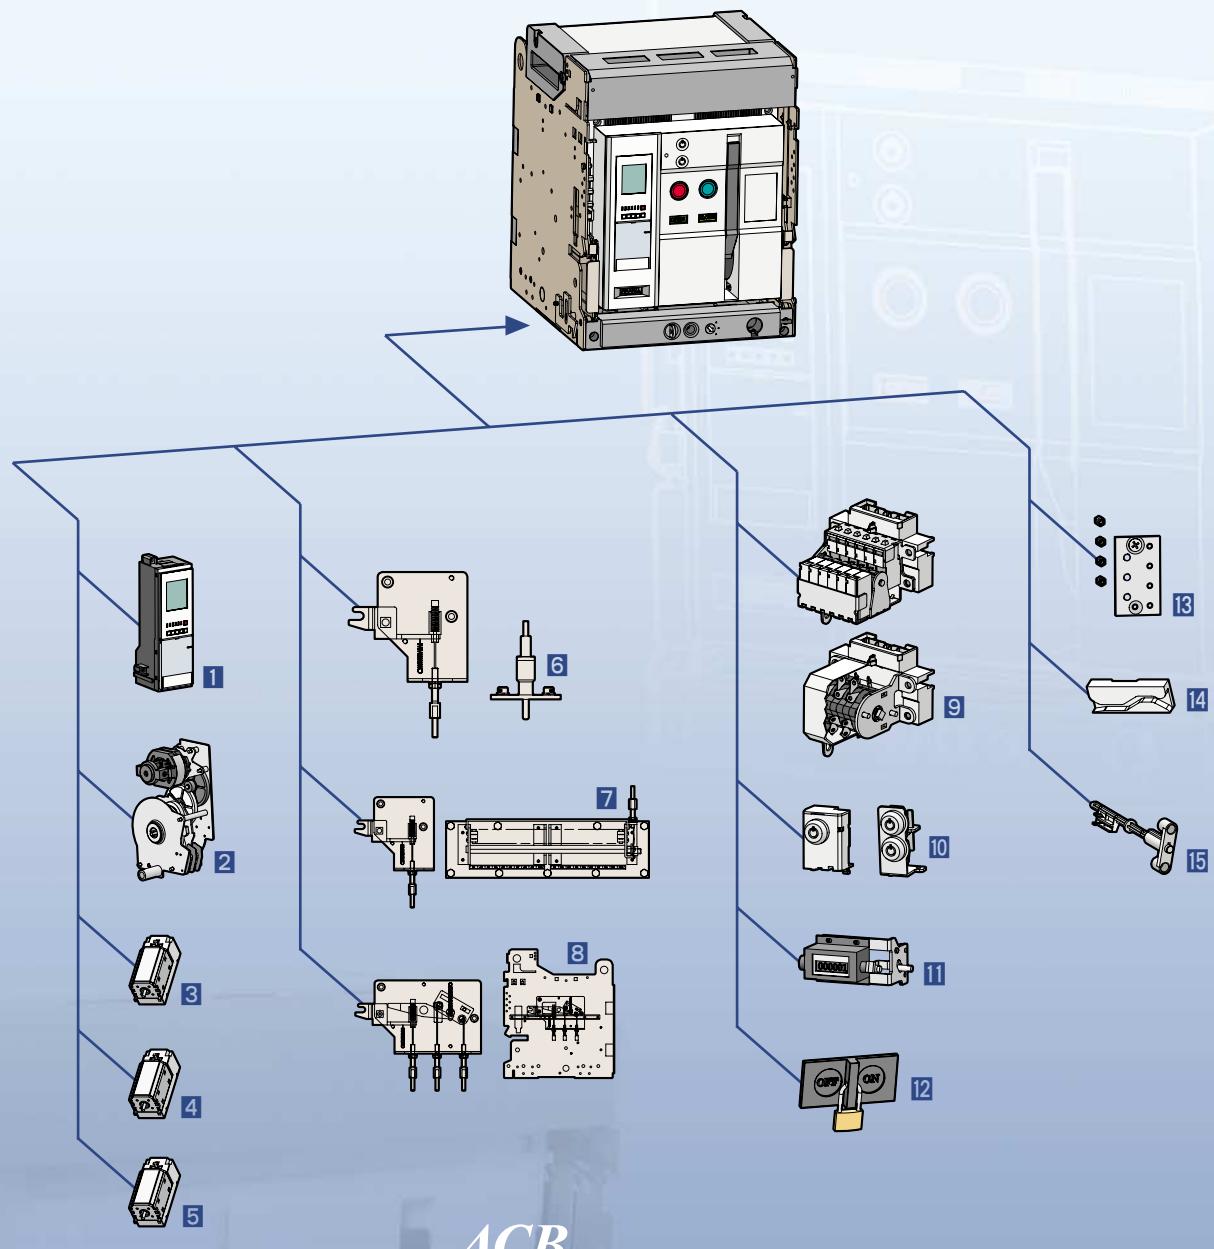

ACB

- 1 Trip Relay (OCR)
- 2 Motor (M)
- 3 Closing Coil (CC)
- 4 Shunt Coil (SHT)
- 5 Under Voltage Trip Device (UVT)
- 6 Door Interlock (DI)
- 7 MOC (Mechanically Operated Cell Switch)
- 8 Mechanical Interlock (MI)

- 9 Auxiliary Switch (AX)
- 10 Key Lock (K1), Double Key Lock (K3)
- 11 Counter (C)
- 12 On/Off Button Lock (B)
- 13 Miss Insertion Preventing Device (MIP)
- 14 Automatically Discharge Mechanism (ADM)
- 15 Manual Reset Button (MRB)

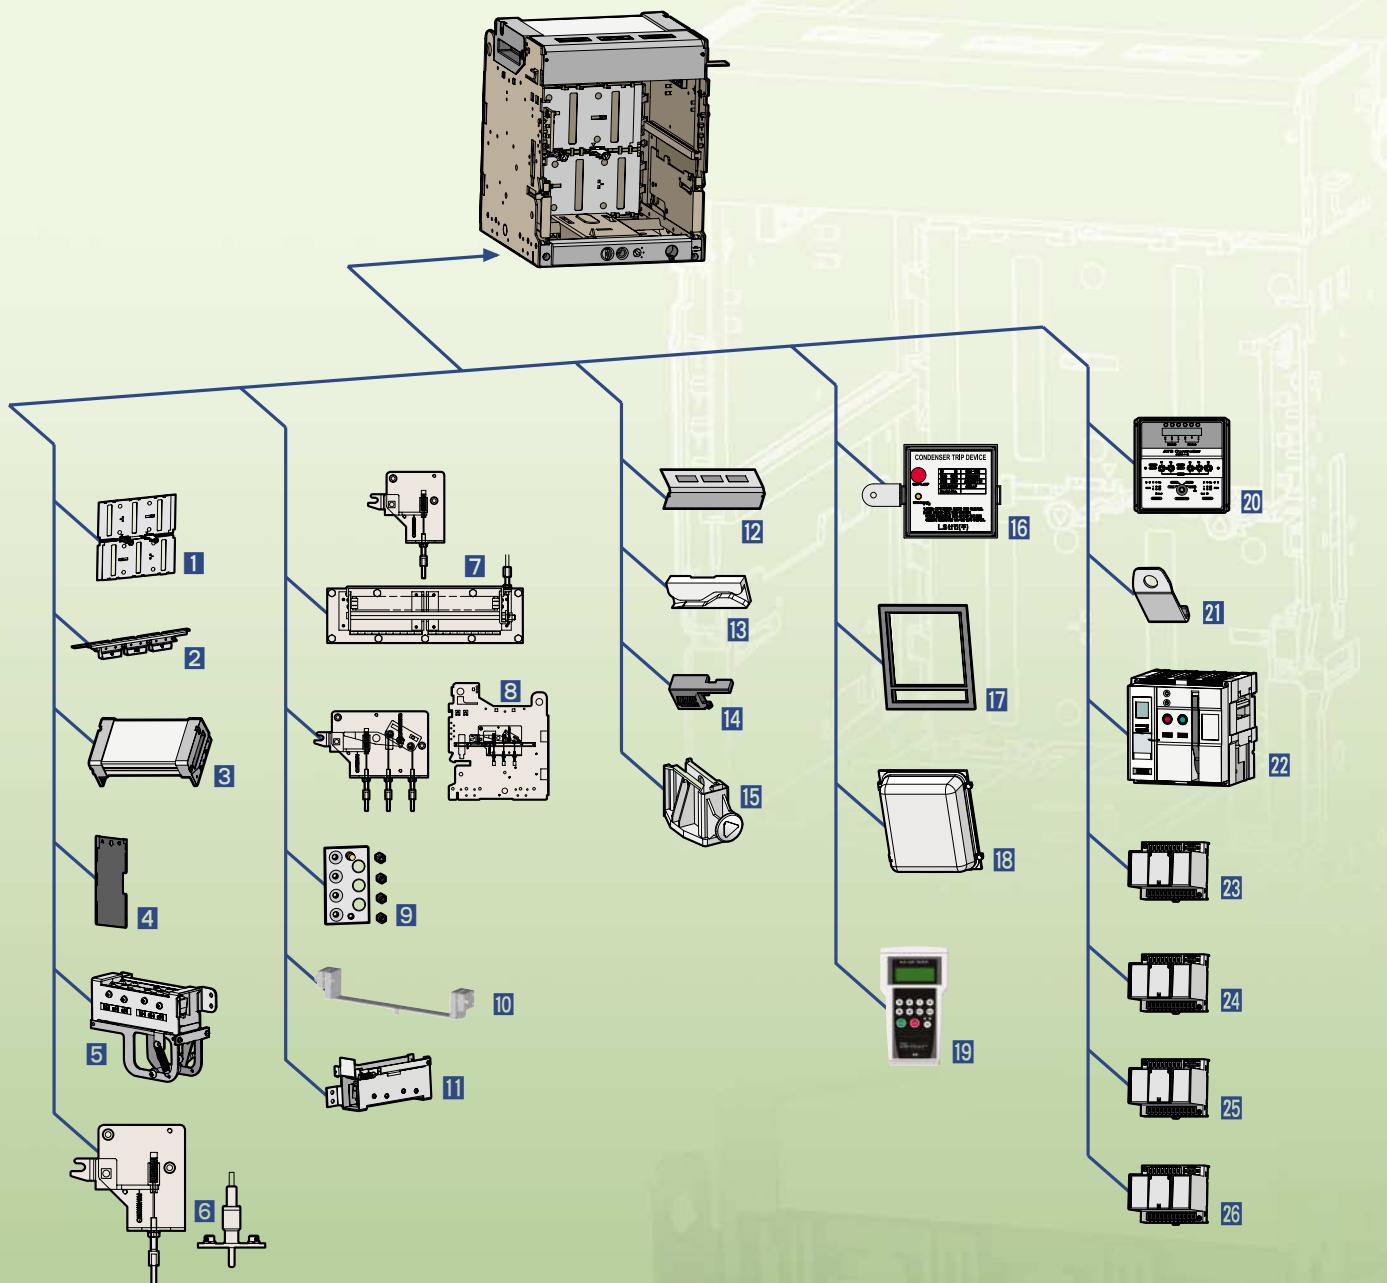

Cradle

1 Safety Shutter (ST)

2 Manual Connector

3 Zero Arc Space (ZAS)

4 Insulation Barrier (IB)

5 Cell Switch (CEL)

6 Door Interlock (DI)

7 MOC (Mechanical
Operated Cell switch)

8 Mechanical Interlock (MI)

9 Miss Insertion Prevent Device (MIP)

10 Body Supporter (BSP)

11 Shorting "b" Contact (SBC)

12 Safety Control Cover (SC)

13 Automatically Discharge
Mechanism.(ADM)

14 Racking Interlock (RI)

15 Safety Shutter Lock (STL)

Other

16 Condenser Trip Device (CTD)

17 Door Frame (DF)

18 Dust Cover (DC)

19 OCR Tester (OT)

20 ATS Controller (ATS)

21 Lifting Hook (LH)

22 Dummy ACB


23 UVT Time Delay Controller (UDC)

24 Profibus-DP Communication module

25 Remote I/O

26 Temperature Alarm

Connection and Installation

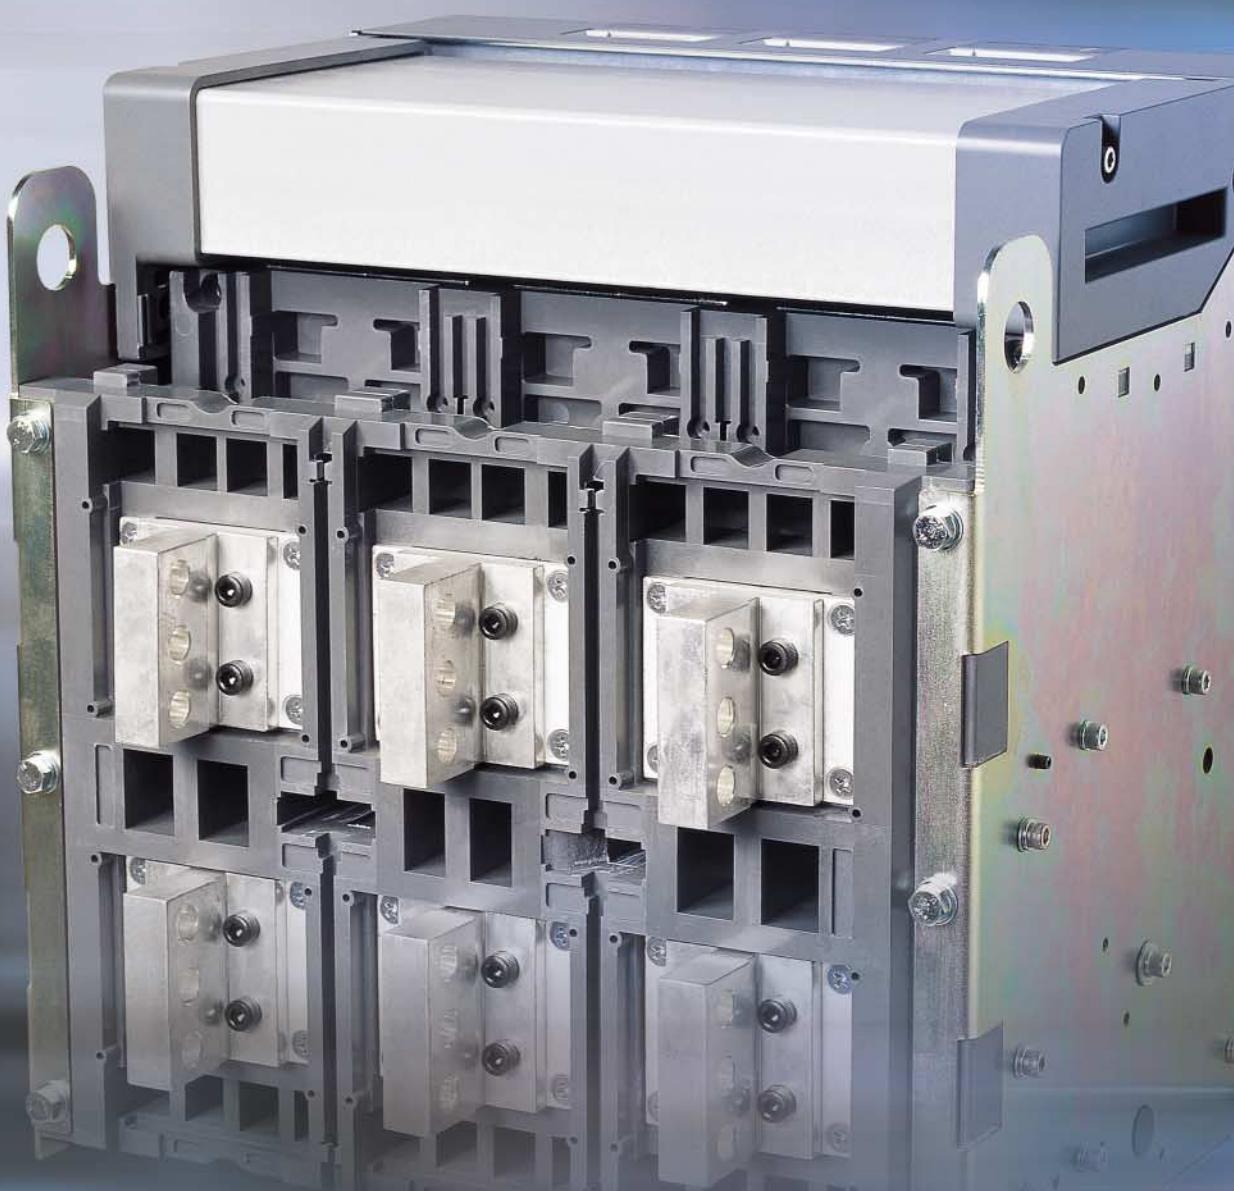

Diversified terminal connection methods of the ACB main circuit for users.

Multiple connections

Various installation methods

Standard connection



Horizontal type



Vertical type



Front type

Mixed connection



Horizontal / Vertical type



Vertical / Horizontal type



Horizontal / Front type



Vertical / Front type



Front / Horizontal type



Front / Vertical type

- Front connection type is available to be connected regardless of the depth of main circuit terminal, and it is suited for the panel required for limited installation space.
- The vertical and horizontal type terminal are module types which can easily compose the vertical and horizontal terminals by rotating 90°
Vertical and horizontal terminals are different each other for over 3200AF ACBs
- Please refer to the rating lists (Page 22~25) because the installation method is various according to the rated current.

External configuration

Susol • Metasol


Fixed type ACB




Terms

- ① Trip relay
- ② Counter
- ③ ON button
- ④ OFF button
- ⑤ Series name
- ⑥ Charge handle
- ⑦ Rated name plate
- ⑧ Charge/Discharge indicator
- ⑨ ON/OFF indicator
- ⑩ Corporation logo
- ⑪ Arc cover
- ⑫ Terminal cover
- ⑬ Cradle
- ⑭ Draw-out handle
- ⑮ Position indicator
- ⑯ Handle storage space
- ⑰ Pad lock button
- ⑱ Arc chute
- ⑲ Control cover
- ⑳ Fixed type bracket


Draw-out ACB (Cradle)

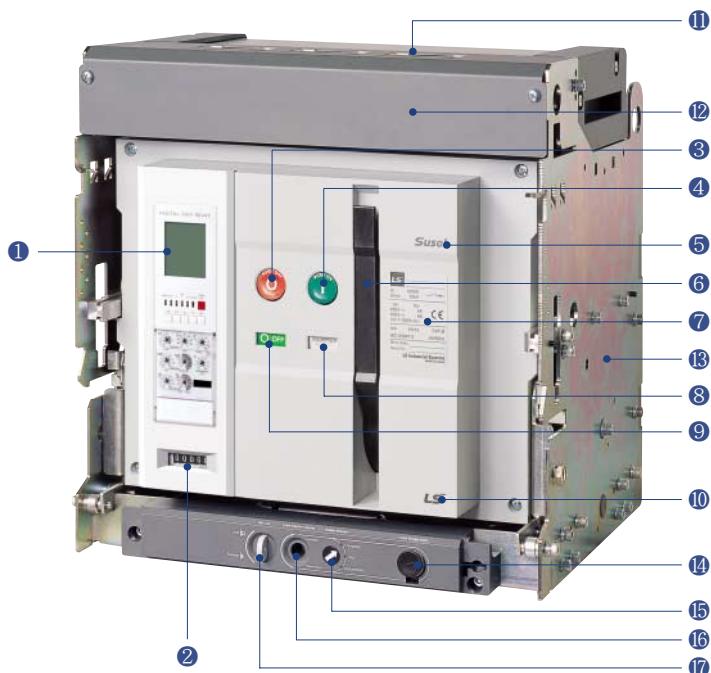

Cradle (Internal)

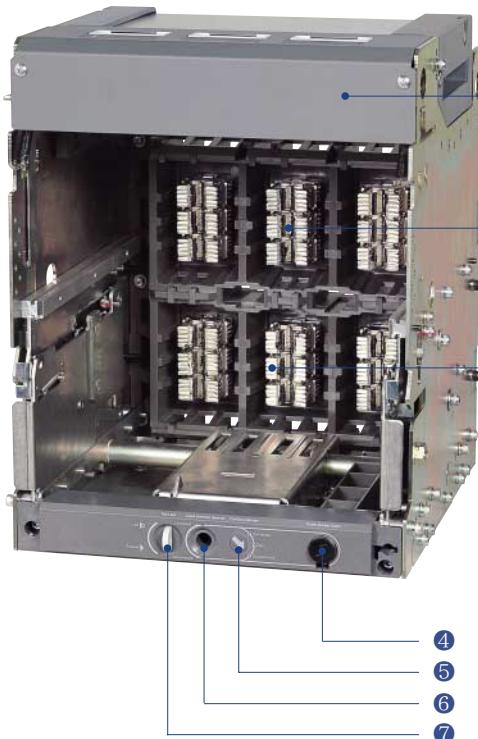

Cradle (Rear)

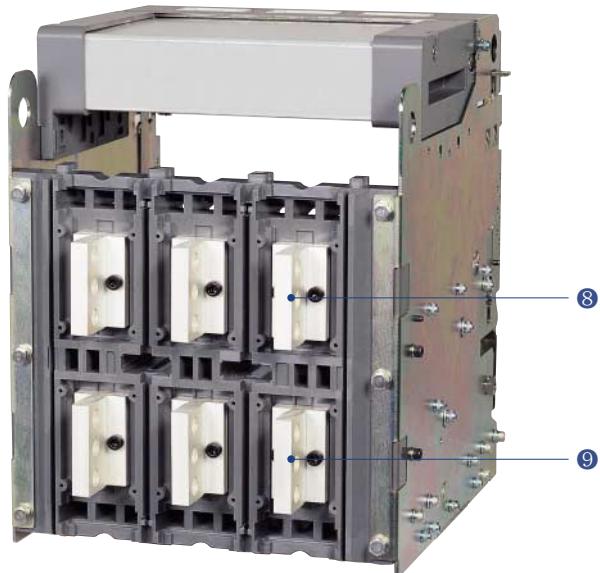


Terms

- | | |
|-------------------------------------|------------------------------------|
| ① Terminal cover of control circuit | ⑥ Handle storage space |
| ② Cradle finger (Line side) | ⑦ Pad lock button |
| ③ Cradle finger (Load side) | ⑧ Connecting conductor (Line side) |
| ④ Draw-out handle | ⑨ Connecting conductor (Load side) |
| ⑤ Position indicator | |


Main nameplate

[Acronym explanation]

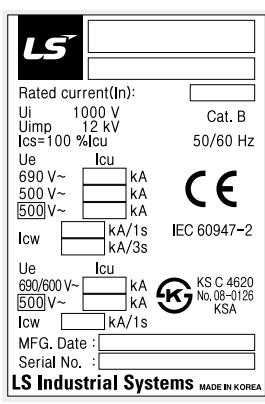

- Ui: Rated insulation voltage
- Uimp: Impulse withstand voltage
- Ue: Rated operational voltage (AC base)
- Icu: Ultimate breaking capacity
- Ics: Service breaking capacity
- Icw: Short time withstand current
- MFG. Date: Manufacturing date

[Secondary nameplate]

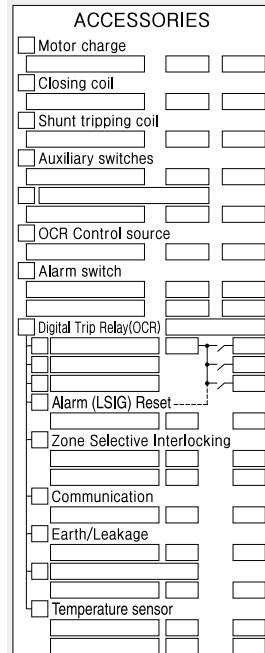


Explanation of terminologies

- Motor charge Control power and terminal No.
- Closing coil
- Shunt tripping coil
- Auxiliary switches: Contact specification and terminal No.
- Under voltage trip: UVT terminal No.
- OCR control source: Trip relay control power
- Alarm switch: Alarm and terminal No.
- Digital trip relay: Switching diagram
- Z.S.I: Input/Output terminal No.
- Reset: LED/LCD reset
- Communication: Communication and terminal No.
- Voltage module: Phase voltage and symbol
- Earth/Leakage: Ground fault / Earth leakage input terminal No.

Internal configuration


Susol • Metasol

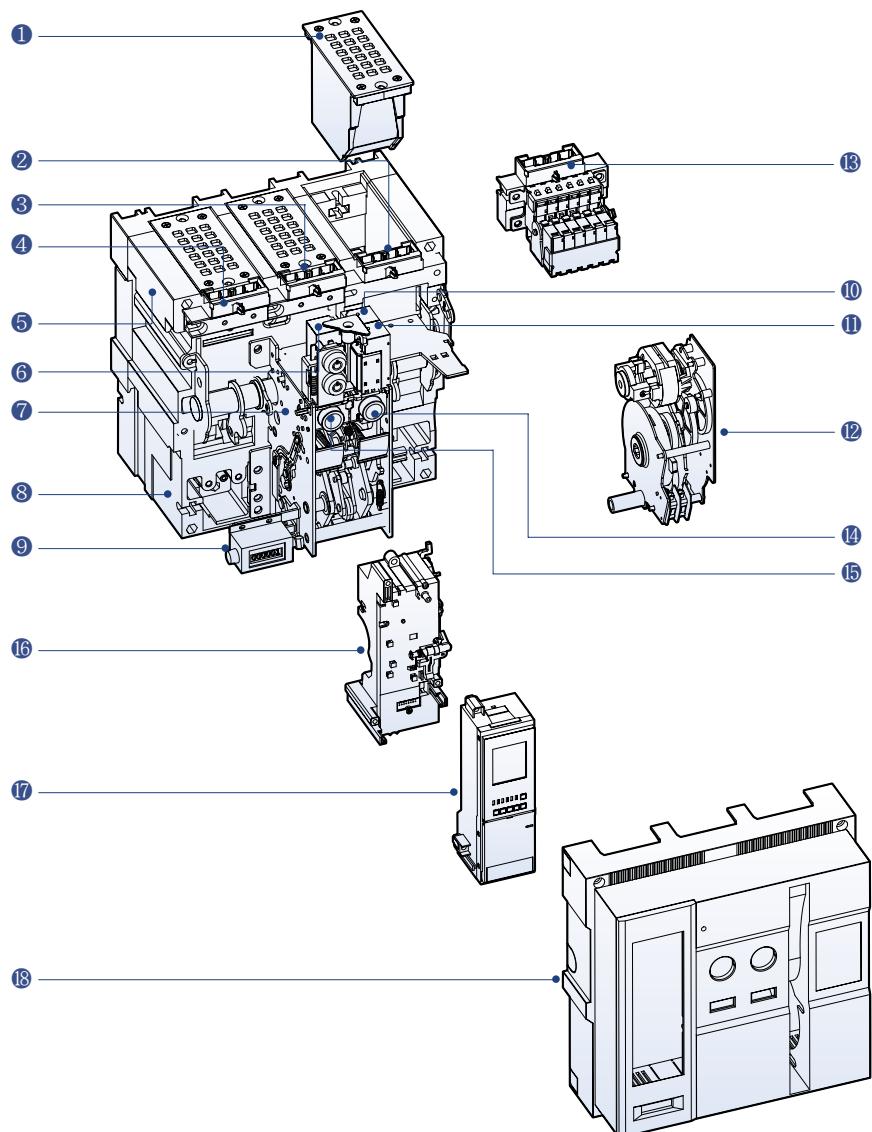

Terms



- ① Arc chute
- ② Aux. switch control terminal
- ③ Control power supply terminal
- ④ Trip relay control terminal
- ⑤ Carrying grip
- ⑥ Trip coil or UVT coil
- ⑦ Mechanism
- ⑧ Main body
- ⑨ Counter
- ⑩ Trip coil
- ⑪ Closing coil
- ⑫ Motor Ass'y
- ⑬ Aux. switch
- ⑭ ON button
- ⑮ OFF button
- ⑯ MTD base
- ⑰ Trip relay
- ⑱ Front cover



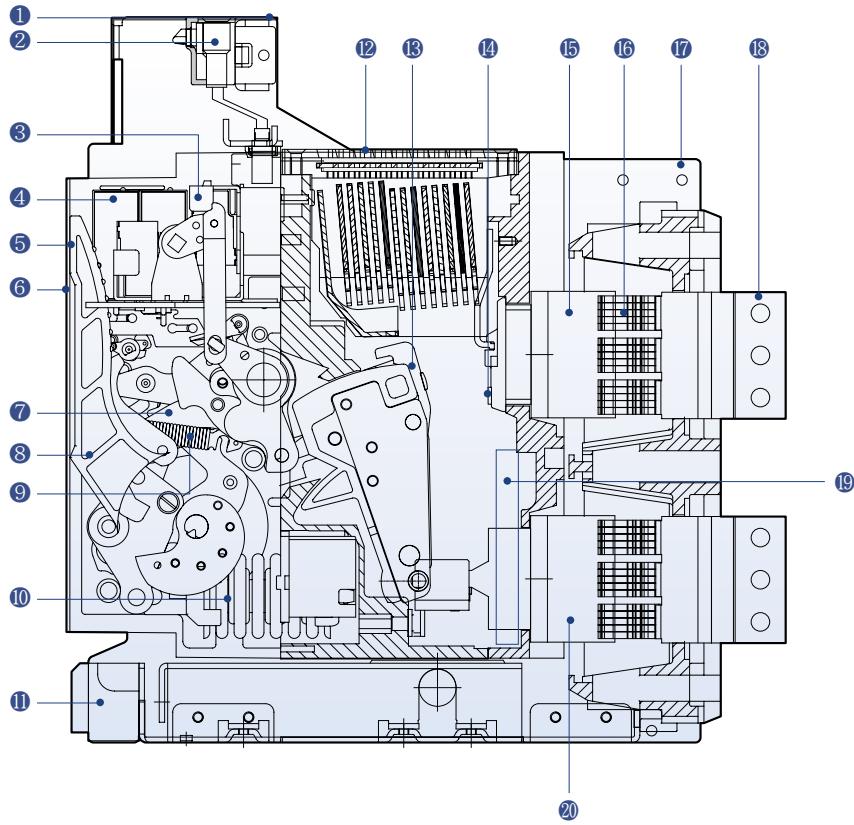

Terms


- ① Control circuit terminal block
- ② Control terminal
- ③ Auxiliary switches
- ④ Closing, Trip, UVT coil
- ⑤ Trip relay
- ⑥ Front cover
- ⑦ Mechanism
- ⑧ Charge handle
- ⑨ Trip spring
- ⑩ Closing spring
- ⑪ Draw-in/out device
- ⑫ Arc extinguishing part
- ⑬ Moving contact
- ⑭ Fixed contact
- ⑮ Conductor on line side
- ⑯ Cradle finger
- ⑰ Cradle
- ⑱ Connecting conductor
- ⑲ Power supply CT
- ⑳ Conductor on load side

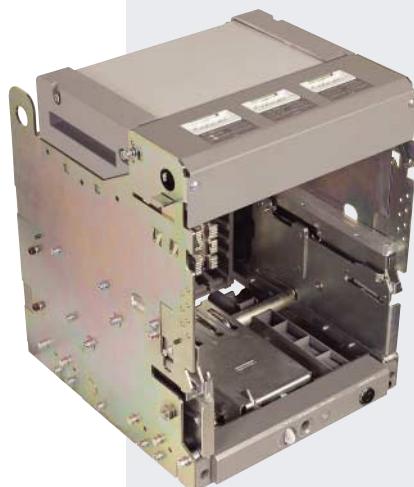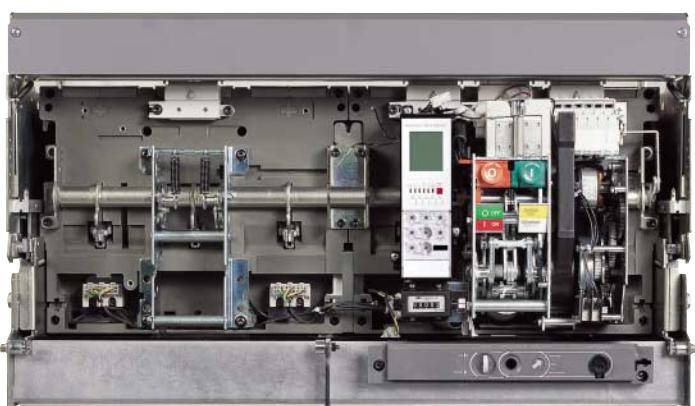

Ordering

Susol • Metasol

ACB & Accessories

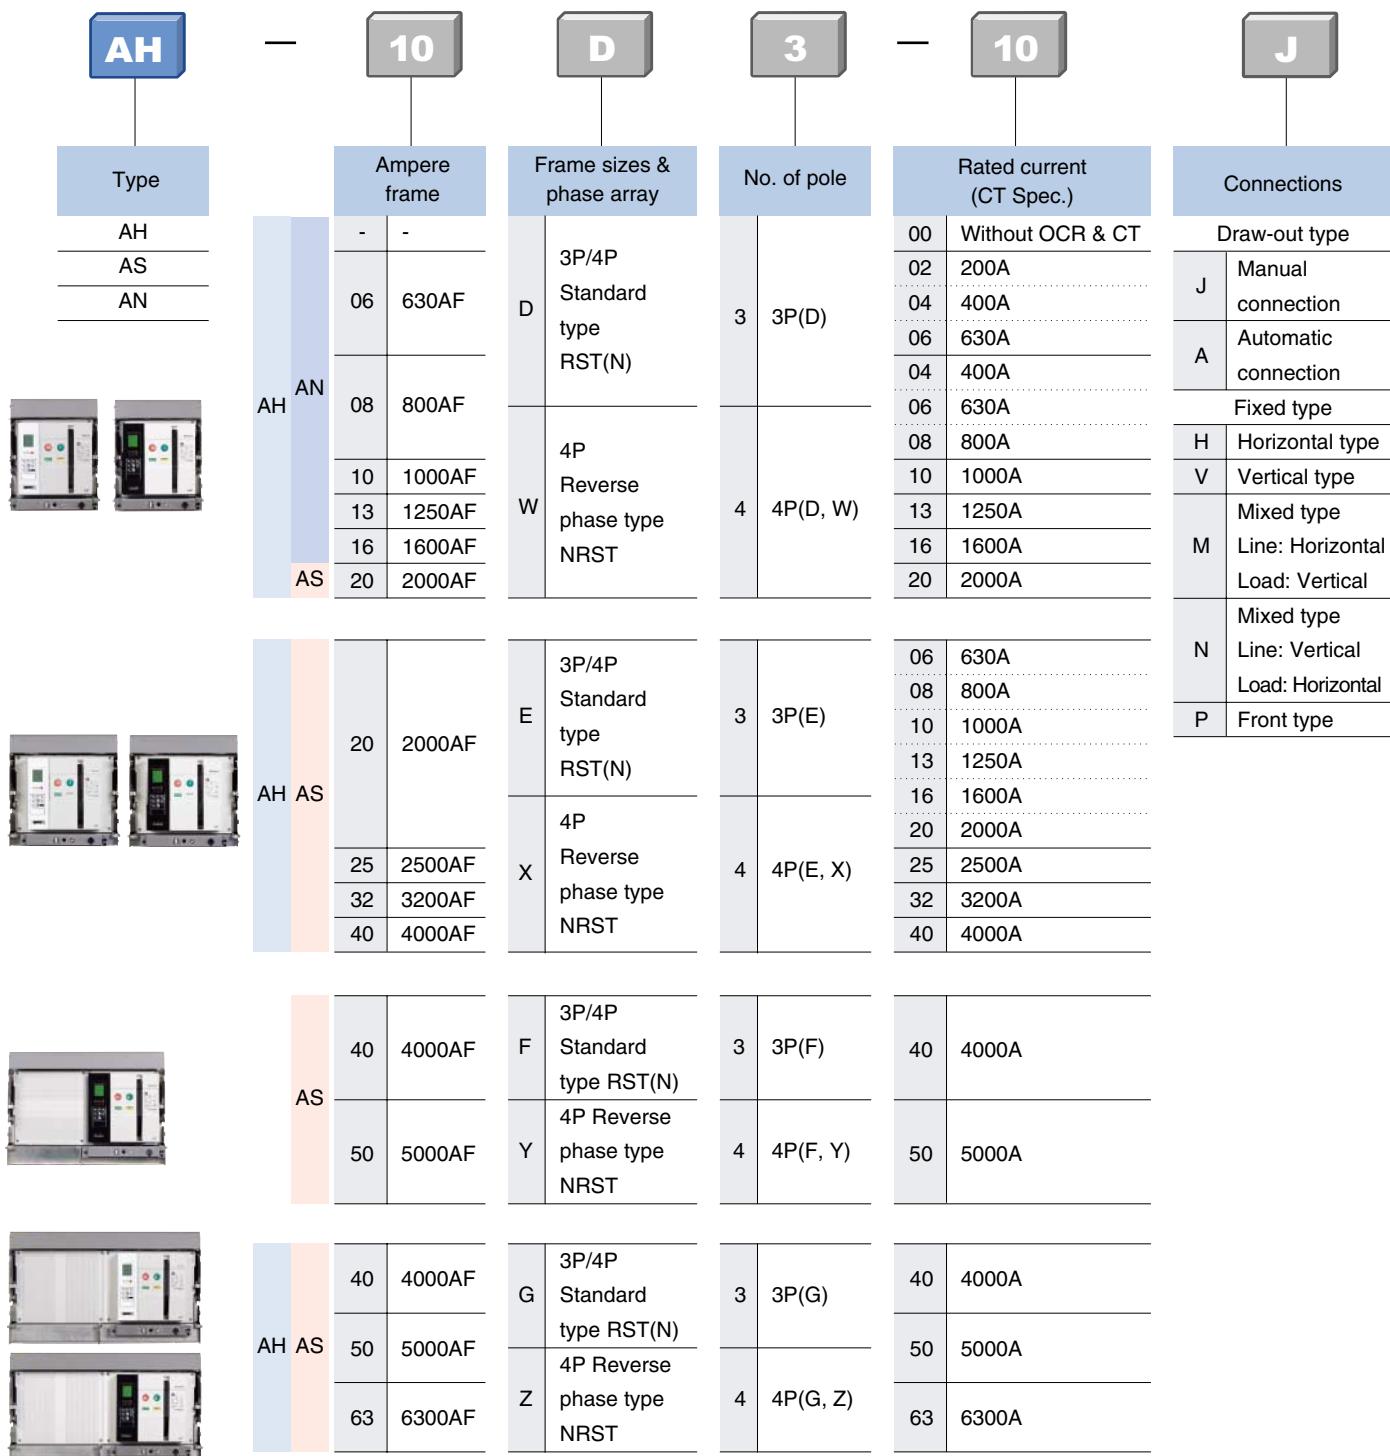

M1	D1	D1	AX	NGO	U1	AL
Motor rated voltage	Shunt coil rated voltage			Trip relay		
MA Without Motor	D0 Without Shunt coil			Refer to 26page		
M1 AC/DC 100V~130V	D1 AC/DC 100V~130V					
M2 AC/DC 200V~250V	D2 AC/DC 200V~250V					
M3 DC 125V	D3 DC 125V					
M4 DC 24V~30V	D4 DC 24V~30V					
M5 DC 48V~60V	D5 DC 48V~60V					
M6 AC 380V~415V	D6 AC 380V~480V					
M7 AC 440V~480V	D7 AC 48V					
M8 AC 48V						
Closing coil rated voltage	Aux.contact & charging types			UVT coil rated voltage		
D0 Without Closing coil	AX Standard OFF-Charge 3a3b			U0 Without UVT coil		
D1 AC/DC 100V~130V	AC Standard ON-Charge 3a3b			U1 AC/DC 100V~130V		
D2 AC/DC 200V~250V	BX Standard OFF-Charge 5a5b			U2 AC/DC 200V~250V		
D3 DC 125V	BC Standard ON-Charge 5a5b			U3 DC 125V		
D4 DC 24V~30V	HX High capacity OFF-Charge 5a5b			U4 DC 24V~30V		
D5 DC 48V~60V	HC High capacity ON-Charge 5a5b			U5 DC 48V~60V		
D6 AC 380V~480V	CC Standard ON-Charge 6a6b			U6 AC 380V~480V		
D7 AC 48V	JC High capacity ON-Charge 6a6b			U7 AC 48V		
3) * UVT Delay module is available over AC / DC 48V						

Option	Type name		Option	Type name	
AL	AL1+MRB		D	DI or MOC	Door Interlock or MOC (Mechanism operated cell switch)
A1	AL1+MRB+RES (AC110~130V) *AC private use		K	K1	Key lock
A2	AL1+AL2+MRB		K2	K2	Key Interlock set
A3	AL1+MRB+RES (DC110~125V) *DC private use		K3	K3	Key lock double
A4	AL1+MRB+RES (AC200~250V) *AC private use		R 2)	RCS	Ready to close switch
A5	AL1+MRB+Auto reset		T 3)	TM	Temperature monitoring
A6	AL1+AL2+MRB+Auto reset		H1	SHT2	AC/DC 100~130V
A7	AL1+MRB+RES (DC110~125V)+Auto reset *DC private use		H2		AC/DC 200~250V
A8	AL1+MRB+RES (AC200~250V)+Auto reset *AC private use		H3		DC 125V
A9	AL1+MRB+RES (AC110~130V)+Auto reset *AC private use		H4 1)		DC 24~30V
C	C	Counter	H5		DC 48~60V
S 2)	CS2	Charge switch communication	H6		AC 380~480V
B	B	On/Off Button lock	H7		AC 48V
M	MI	Mechanical interlock **AN typenot applied			Double shunt coil **At using UVT, not applied

Note) 1. UVT and SHT2 are alternative.

2. CS2 and RCS are alternative.


3. TM and CC/JC(6a6b) are alternative.

4. Other accessories should be ordered separately.


Ordering

Susol • Metasol

Cradle

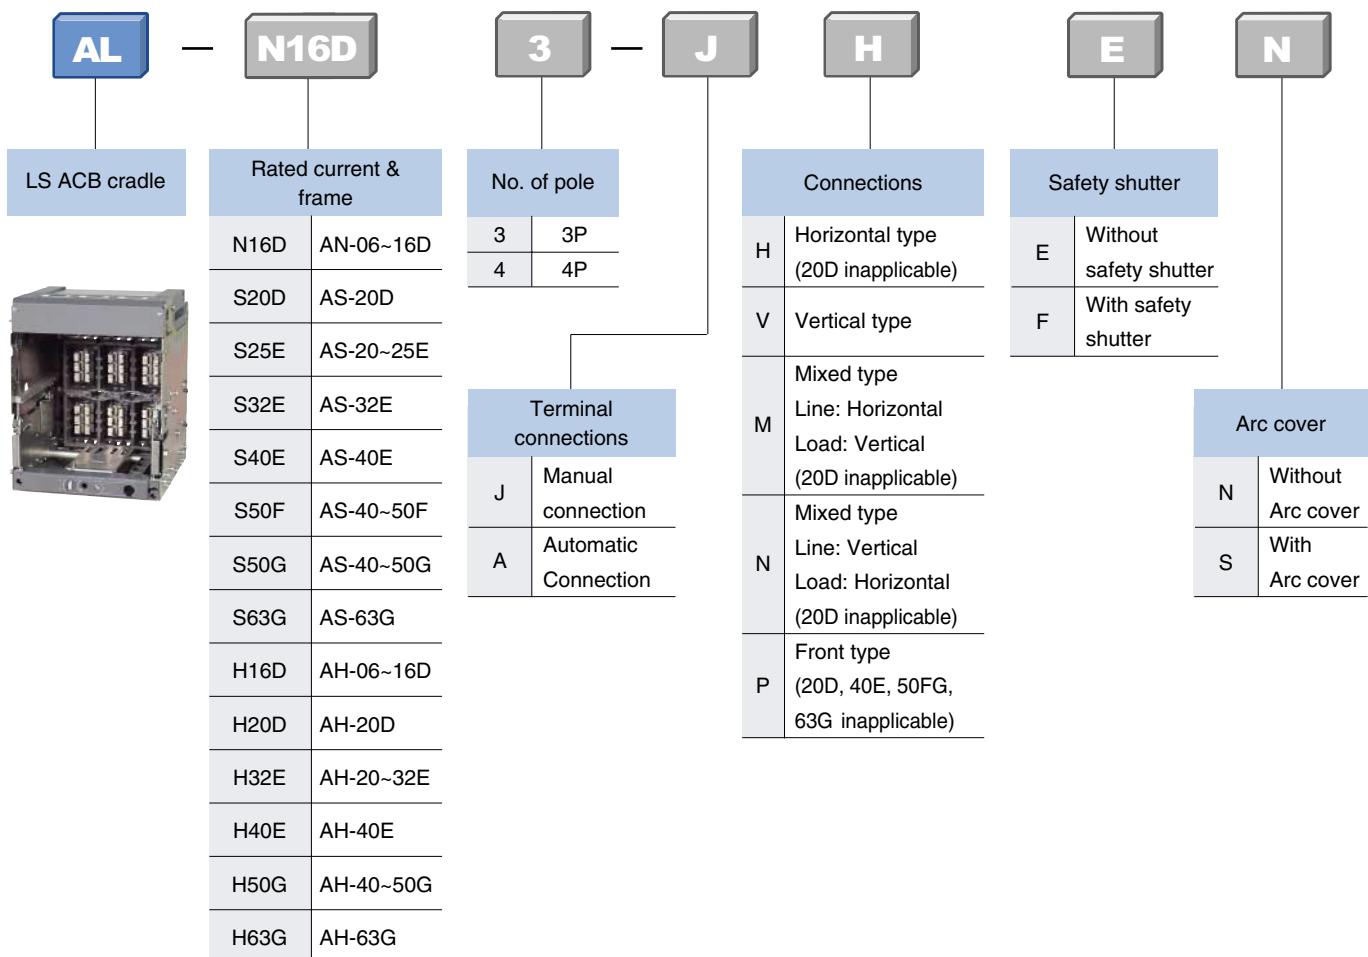

Trip relay

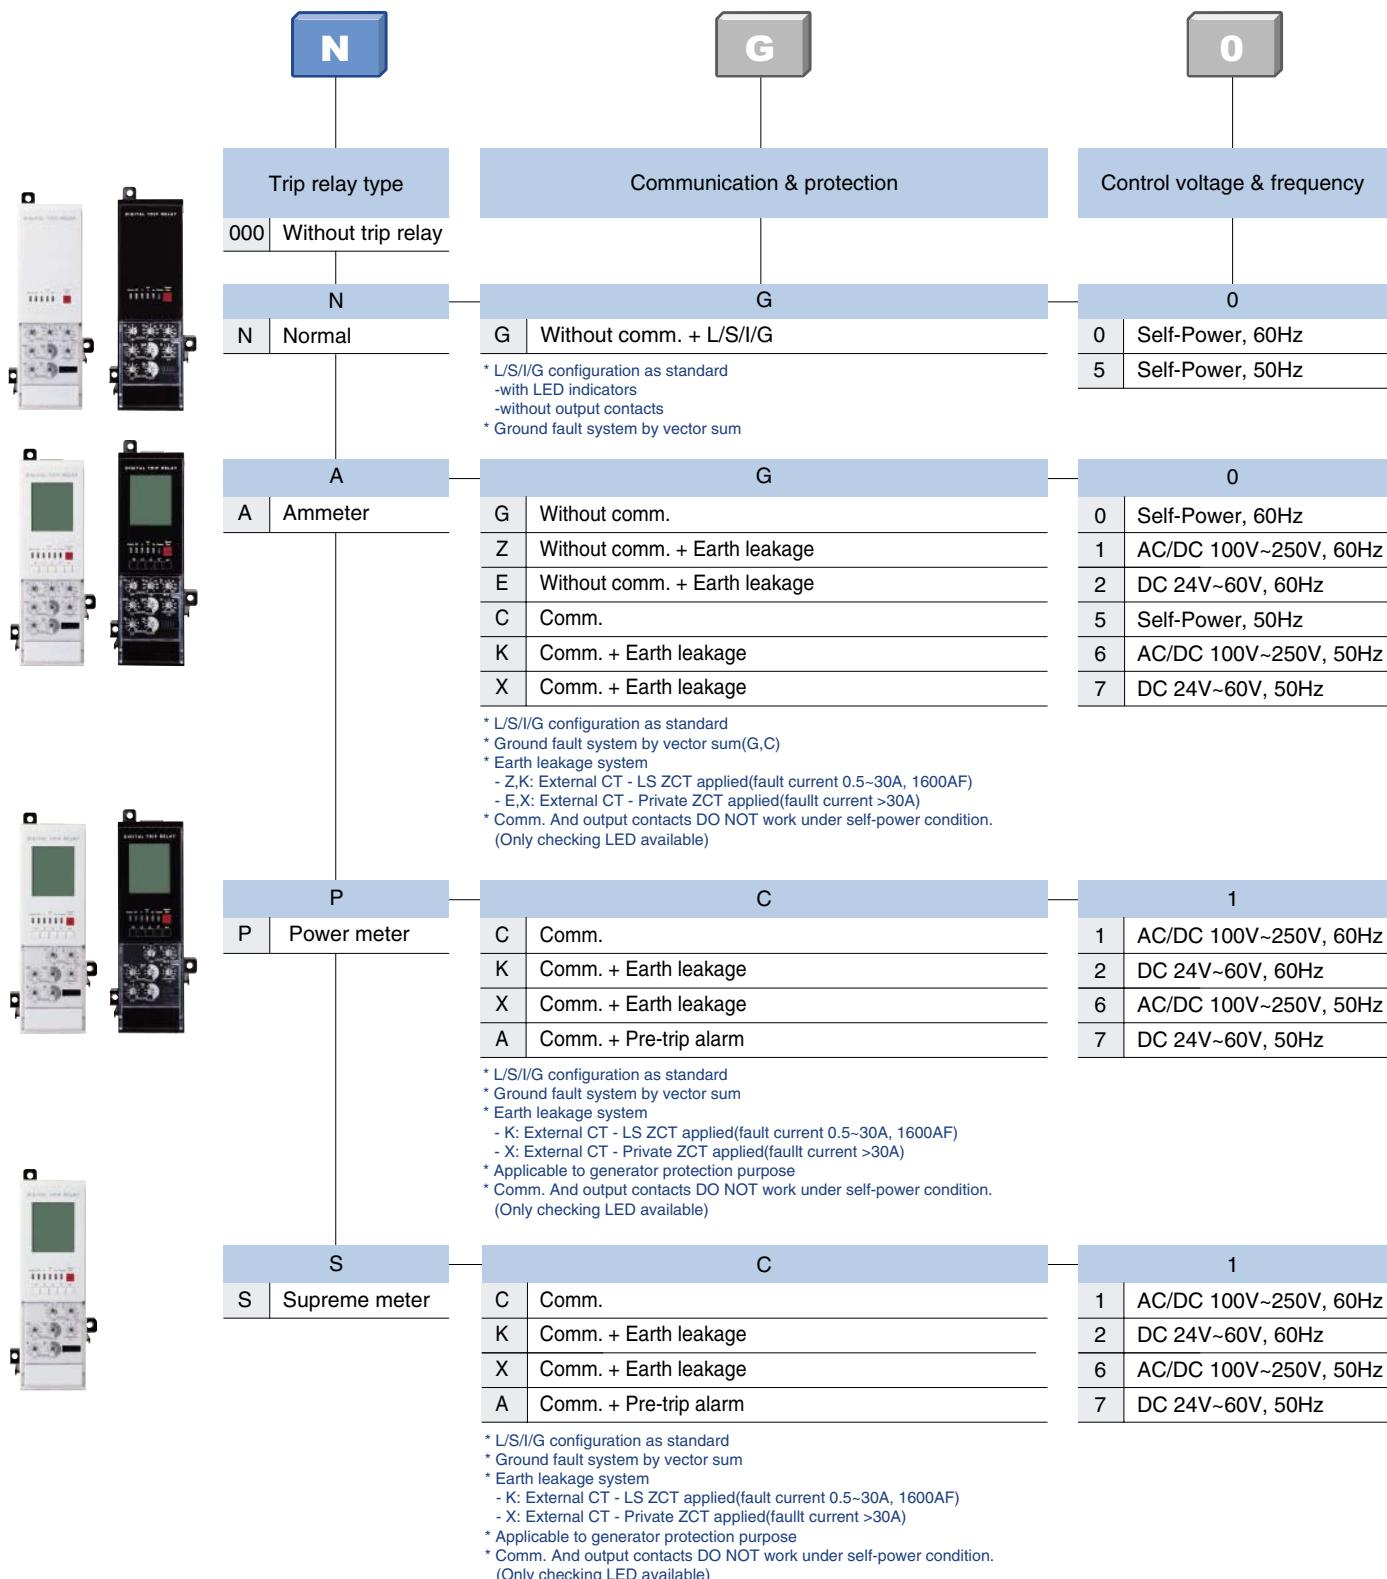

- 1. L/S/I/G configuration as standard
- 2. Ground fault, earth leakage and pre-trip alarm functions are alternative.
- 3. The functions like Metering, Communication, ZSI, Remote reset and Digital output are NOT available only under Self-power condition.
- 4. Voltage module should be required for P and S types(supplied separately)

Ratings

Susol • Metasol



Type	
Ampere frame	(AF)
Rated current(A)	(In max) at 40°C
Setting current (A) *	Control trip relay (... × In max)
Rated current of neutral pole (A)	
Rated insulation voltage(V)	(Ui)
Rated operating voltage(V)	(Ue)
Rated impulse withstand voltage (kV)(Uiimp)	
Frequency(Hz)	
Number of poles (P)	
Rated breaking capacity (kA sym)	220V/230V/380V/415V
AC 50/60Hz	(Icu) IEC 60947-2 KS C 4620 460V/480V/500V
	550V/600V/690V
Rated service breaking capacity (kA) (Ics)	... % × Icu
Rated making capacity (kA peak)	220V/230V/380V/415V
AC 50/60Hz	(Icm) IEC 60947-2 KS C 4620 460V/480V/500V
	550V/600V/690V
Rated short-time withstand current (kA)	1sec 2 sec 3 sec
Operating time (ms)	Maximum total breaking time Maximum closing time
Life cycle (time)	Mechanical Without maintenance With maintenance Electrical Without maintenance With maintenance
Connections **	Draw-out / Fixed Horizontal connection Vertical connection Front connection Mixed connection
Weight (kg) (3P/4P)	Draw-out type Main body Motor charging type (With cradle) Manual charging type Cradle only Fixed type Motor charging type Manual charging type
External dimensions (mm) (H×W×D)	Draw-out type 3P 4P Fixed type 3P 4P
Trip relay	
Certificate & Approval	
Marine clasification	

* Refer to trip relay specification. ** ●: Standard, ○: Option

Susol					
AH-06D	AH-08D	AH-10D	AH-13D	AH-16D	AH-20D
630	800	1000	1250	1600	2000
200	400				
400	630	1000	1250	1600	2000
630	800				
(0.4 ~ 1.0) × In max					
400	400				
630	630	1000	1250	1600	2000
	800				
1000					
690					
12					
50/60					
3/4					
85					
85					
65					
100%					
187					
187					
143					
65					
60					
50					
40					
80					
20,000					
30,000					
5,000					
10,000					
●					
○					
○					
○					
63/74					
61/72					
29/32					
34/44					
32/42					
430 × 334 × 375					
430 × 419 × 375					
300 × 300 × 295					
300 × 385 × 295					
N, A, P, S type					
KS / KEMA / KERI / GOST					
LR, ABS, DNV, KR, BV, GL, RINA, NK					

* Refer to trip relay specification. ** ●: Standard, ○: Option



Susol								
AH-06E	AH-08E	AH-10E	AH-13E	AH-16E	AH-20E	AH-25E	AH-32E	AH-40E
630	800	1000	1250	1600	2000	2500	3200	4000
630	800	1000	1250	1600	2000	2500	3200	4000
(0.4 ~ 1.0) × In max								
630	800	1000	1250	1600	2000	2500	3200	4000
1,000								
690								
12								
50/60								
3/4								
100								
100								
85								
100%								
220								
220								
187								
85								
75								
65								
40								
80								
15,000								
20,000								
5,000								
10,000								
●								
○								
○								
○								
87/103								
107/139								
85/101								
102/145								
44/55								
65/85								
44/55								
61/81								
42/53								
60/80								
430×412×375								
430×527×375								
300×378×295								
300×493×295								
N, A, P, S type								
KS / KEMA / KERI / GOST								
LR, ABS, DNV, KR, BV, GL, RINA, NK								

Susol		
AH-40G	AH-50G	AH-63G
4000	5000	6300
4000	5000	6300
(0.4 ~ 1.0) × In max		
4000	5000	6300
1,000		
690	330	15,000
12	100	2,000
50/60	100	5,000
3/4	100	10,000
100	100	181/223
100	100	179/221
85	80	97/117
75	-	98/123
65	-	96/121
40	-	186/230
80	-	184/228
15,000	460×785×375	102/124
20,000	460×1015×375	103/130
5,000	300×751×295	101/128
10,000	300×981×295	N, A, P, S type
●	○	KS / KEMA / KERI / GOST
○	●	LR, ABS, DNV, KR, BV, GL, RINA, NK

Ratings

Susol • Metasol



Type	
Ampere frame	(AF)
Rated current(A)	(In max) at 40°C
Setting current (A) *	Control trip relay (... × In max)
Rated current of neutral pole (A)	
Rated insulation voltage(V)	(Ui)
Rated operating voltage(V)	(Ue)
Rated impulse withstand voltage (kV)(Uiimp)	
Frequency (Hz)	
Number of poles (P)	
Rated breaking capacity (kA sym)	220V/230V/380V/415V
AC 50/60Hz	(Icu) IEC 60947-2 KS C 4620 460V/480V/500V
	550V/600V/690V
Rated service breaking capacity (kA) (Ics)	... % × Icu
Rated making capacity (kA peak)	220V/230V/380V/415V
AC 50/60Hz	(Icm) IEC 60947-2 KS C 4620 460V/480V/500V
	550V/600V/690V
Rated short-time withstand current (kA)	1 sec 2 sec 3 sec
Operating time (ms)	Maximum total breaking time Maximum closing time
Life cycle (time)	Mechanical Without maintenance With maintenance Electrical Without maintenance With maintenance
Connections **	Draw-out / Fixed Horizontal connection Vertical connection Front connection Mixed connection
Weight (kg) (3P/4P)	Draw-out type Main body (With cradle) Cradle only Fixed type Motor charging type Manual charging type
External dimensions (mm) (H×W×D)	Draw-out type 3P 4P Fixed type 3P 4P
Trip relay	
Certificate & Approval	
Marine clasification	



* Refer to trip relay specification. ** ●: Standard, ○: Option

Metasol					
AN-06D	AN-08D	AN-10D	AN-13D	AN-16D	AS-20D
630	800	1000	1250	1600	2000
200	400				
400	630	1000	1250	1600	2000
630	800				
(0.4 ~ 1.0) × In max					
400	400				
630	630	1000	1250	1600	2000
	800				
1000					
690					
12					
50/60					
3/4					
65					
65					
50					
100%					
143					
143					
105					
50					
42					
36					
40					
80					
20,000					
30,000					
5,000					
10,000					
●					
○					
○					
○					
63/74					
61/72					
29/32					
34/44					
32/42					
430 × 334 × 375					
430 × 419 × 375					
300 × 300 × 295					
300 × 385 × 295					
N, A, P type					
KS / KEMA / KERI / GOST					
LR, ABS, DNV, KR, BV, GL, RINA, NK					

* Refer to trip relay specification. ** ●: Standard, ○: Option

Susol • Metasol



Metasol			
AS-20E	AS-25E	AS-32E	AS-40E
2000	2500	3200	4000
630, 800			
1000, 1250	2500	3200	4000
1600, 2000			
(0.4 ~ 1.0) × ln max			
630, 800			
1000, 1250	2500	3200	4000
1600, 2000			
1,000			
690			
12			
50/60			
3/4			
85			
85			
85			
100%			
187			
187			
187			
85			
75			
65			
40			
80			
15,000			
20,000			
5,000			
10,000			
●	○		
○	●		
○	-		
○	-		
87/103	104/147		
85/101	102/145		
44/50	58/70		
44/55	63/100		
42/53	61/98		
430×412×375			
430×527×375			
300×378×295			
300×493×295			
N, A, P type			
KS / KEMA / KERI / GOST			
LR, ABS, DNV, KR, BV, GL, RINA, NK			

Metasol	
AS-50F	
4000	5000
4000	5000
(0.4 ~ 1.0) × ln max	
4000	5000
1000	
690	
12	
50/60	
3/4	
100	
100	
85	
100%	
220	
220	
187	
85	
75	
65	
40	
80	
10,000	
15,000	
2,000	
5,000	
○	
●	
-	
-	
107/139	
102/145	
65/85	
61/81	
60/80	
460×629×375	
460×799×375	
300×597×295	
300×767×295	
N, A, P type	
KS / KEMA / KERI / GOST	
LR, ABS, DNV, KR, BV, GL, RINA, NK	

Metasol		
AS-40G	AS-50G	AS-63G
4000	5000	6300
4000	5000	6300
(0.4 ~ 1.0) × ln max		
4000	5000	6300
1,000		
690		
12		
50/60		
3/4		
120		
120		
100		
100%		
264		
264		
220		
100		
90		
85		
40		
80		
10,000		
15,000		
2,000		
5,000		
○		
●		
-		
-		
181/223		
179/221		
97/117		
98/123		
96/121		
460×785×375		
460×1015×375		
300×751×295		
300×981×295		
N, A, P type		
KS / KEMA / KERI / GOST		
LR, ABS, DNV, KR, BV, GL, RINA, NK		

Trip relay(OCR)



The trip relay of Susol ACB provides the additional protection functions for voltage, frequency, unbalance, and others in addition to main protection functions for over current, short-circuit, ground fault. It supports the advanced measurement functions for voltage, current, power, electric energy, harmonics, communication function, and others.

Analog trip function interlocked with mechanism enhanced a durability of devices as well as the breaking capacity of ACB.

Zone selective interlocking function makes the protective coordination more simple and thermal memory can be applied to various loads.

Contents

Trip relay types	27
N type: 'Normal' type	28
A type: 'Ammeter' type	30
P type: 'Power meter' type	32
S type: 'Supreme meter' type	34
Operation characteristic	36
Measurement function	38
Man machine interface	39
Protection element setting	40
Measurement element display	41
Characteristic curves	42
ZSI - Zone Selective Interlocking	45
Remote reset and digital I/O	46
Communication	47
Event & fault recording	48
System information	48
System block diagram	49

Trip relays

Susol • Metasol

Trip relay types


Classification	N type	A type	P type	S type
Externals				
Current protection	<ul style="list-style-type: none"> L / S / I / G / Thermal ZSI(Protective coordination) 	<ul style="list-style-type: none"> L / S / I / G / Thermal ZSI(Protective coordination) 	<ul style="list-style-type: none"> L / S / I / G / Thermal(Continuous) ZSI(Protective coordination) 	<ul style="list-style-type: none"> P type
Other protection	-	<ul style="list-style-type: none"> Earth leakage (Option) 	<ul style="list-style-type: none"> Earth leakage(Option) Over/Under current Over/Under frequency Unbalance(Voltage/Current) Reverse power 	<ul style="list-style-type: none"> P type
Measurement function	-	<ul style="list-style-type: none"> Current (R / S / T / N) 	<ul style="list-style-type: none"> 3 Phase Voltage/Current RMS/Vector Power(P, Q, S), PF(3-Phase) Energy(Positive/Negative) Frequency, Demand 	<ul style="list-style-type: none"> 3 Phase Voltage/Current RMS/Vector Power(P, Q, S), PF(3-Phase) Energy(Positive/Negative) Frequency, Demand Voltage/Current harmonics (1st~63th) 3 Phase Waveforms THD, TDD, K-Factor
Fine adjustment	-	-	<ul style="list-style-type: none"> Fine adjustment for long/short time delay/instantaneous/ ground 	<ul style="list-style-type: none"> P type
Pre Trip Alarm	-	-	<ul style="list-style-type: none"> Overload protection relays : DO (Alarm) (Ground fault is not available when using Pre trip alarm) 	<ul style="list-style-type: none"> P type
Digital Output	-	<ul style="list-style-type: none"> 3DO (Fixed) L, S/I, G Alarm 	<ul style="list-style-type: none"> 3DO (Programmable) Trip, Alarm, General 	<ul style="list-style-type: none"> P type
IDMTL setting	-	-	<ul style="list-style-type: none"> Compliance with IEC60255-3 SIT, VIT, EIT, DT 	<ul style="list-style-type: none"> P type
Communication	-	<ul style="list-style-type: none"> Modbus/RS-485 Profibus-DP 	<ul style="list-style-type: none"> Modbus / RS-485 Profibus-DP 	<ul style="list-style-type: none"> Modbus / RS-485 Profibus-DP
Power supply	<ul style="list-style-type: none"> Self Power -Power source works over 20% of load current. 	<ul style="list-style-type: none"> Self Power - Power source works over 20% of load current. - External power source are required for comm. • AC/DC 100~250V • DC 24~60V 	<ul style="list-style-type: none"> AC/DC 100~250V DC 24~60V <p style="background-color: #f0f0f0; padding: 5px;">Basic protection function(L / S / I / G) is still under normal operation without control power.</p>	<ul style="list-style-type: none"> AC/DC 100~250V DC 24~60V
RTC timer	<ul style="list-style-type: none"> Available 	<ul style="list-style-type: none"> Available 	<ul style="list-style-type: none"> Available 	<ul style="list-style-type: none"> Available
LED for trip info.	<ul style="list-style-type: none"> Long time delay Short time delay/Instantaneous Ground fault 	<ul style="list-style-type: none"> N type 	<ul style="list-style-type: none"> N type 	<ul style="list-style-type: none"> N type
Fault recording	-	<ul style="list-style-type: none"> 10 records (Fault/Current/Date and Time) 	<ul style="list-style-type: none"> 256 records (Fault/Current/Date and Time) 	<ul style="list-style-type: none"> 256 records Last fault wave recording (3 Phase)
Event recording	-	-	<ul style="list-style-type: none"> 256 records(Content, Status, Date) 	<ul style="list-style-type: none"> P type
Operating button	<ul style="list-style-type: none"> Reset button 	<ul style="list-style-type: none"> Reset, Menu Up/Down, Left/Right, Enter 	<ul style="list-style-type: none"> A type 	<ul style="list-style-type: none"> A type

Trip relays


Susol · Metasol

N type: 'Normal' type

- Optimized protection function
- OCR, OCGR function according IEC60947-2
- Overload protection
 - Long-time delay
 - Thermal
- Short-circuit protection
 - Short-time delay / Instantaneous
 - I^2t On/Off optional (for short-time delay)
- Ground fault protection
 - I^2t On/Off optional
- Self-Power

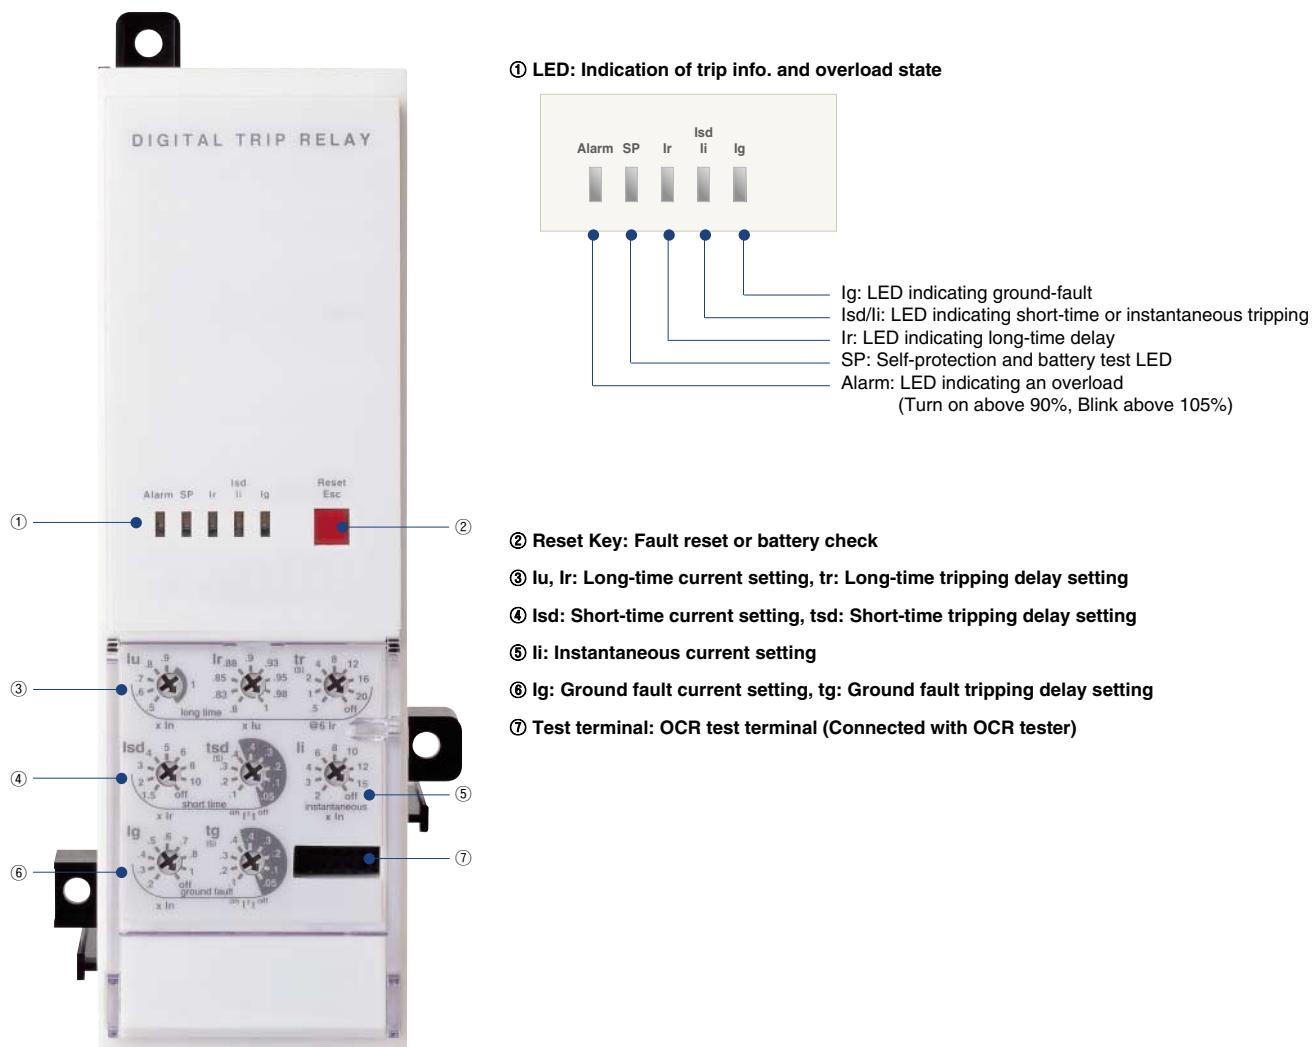

Protection

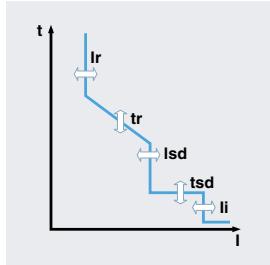

Long time

Current setting (A)	$I_{lu} = I_n \times \dots$	0.5	0.6	0.7	0.8	0.9	1.0			
	$I_r = I_n \times \dots$	0.8	0.83	0.85	0.88	0.9	0.93	0.95	0.98	1.0
Time delay (s)	$tr @ (1.5 \times I_r)$	12.5	25	50	100	200	300	400	500	Off
Accuracy: $\pm 15\%$ or below	$tr @ (6.0 \times I_r)$	0.5	1	2	4	8	12	16	20	Off
100ms	$tr @ (7.2 \times I_r)$	0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	Off

Short time

Current setting (A)	$I_{lsd} = I_r \times \dots$	1.5	2	3	4	5	6	8	10	Off
Accuracy: $\pm 10\%$										
Time delay (s)	tsd	I^2t Off	0.05	0.1	0.2	0.3	0.4			
$@ 10 \times I_r$		I^2t On		0.1	0.2	0.3	0.4			
		Min. Trip Time(ms)	20	80	160	260	360			
	$(I^2t$ Off)	Max. Trip Time(ms)	80	140	240	340	440			

Instantaneous

Current setting (A)	$I_{li} = I_n \times \dots$	2	3	4	6	8	10	12	15	Off
Tripping time										



Ground fault


Pick-up (A)	$I_{lg} = I_n \times \dots$	0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
Accuracy: $\pm 10\% (I_g > 0.4I_n)$	$I_{lg} = I_n \times \dots$									
$\pm 20\% (I_g \leq 0.4I_n)$										
	tg	I^2t Off	0.05	0.1	0.2	0.3	0.4			
		I^2t On		0.1	0.2	0.3	0.4			
Time delay (s)	tg	Min. Trip Time(ms)	20	80	160	260	360			
$@ 1 \times I_n$		Max. Trip Time(ms)	80	140	240	340	440			

Trip relays

Susol · Metasol


A type: 'Ammeter' type

- Overload protection
 - Long-time delay
 - Thermal
- Short-circuit protection
 - Short-time delay / Instantaneous
 - I^2t On/Off optional (for short-time delay)
- Ground fault protection
 - I^2t On/Off optional
- Realization of protective coordination by ZSI (Zone Selective Interlocking)
- High-performance and high-speed MCU built-in
 - Accurate measurement with tolerance of 1.0%
- Fault recording
 - Records Max. up to 10 fault information about fault type, fault phase, fault data, occurrence time of fault
- SBO (Select Before Operation)
 - High reliability for control and setting change method
- 3 DO(Digital Output)
 - Fixed
- Communication
 - Modbus/RS485
 - Profibus-DP

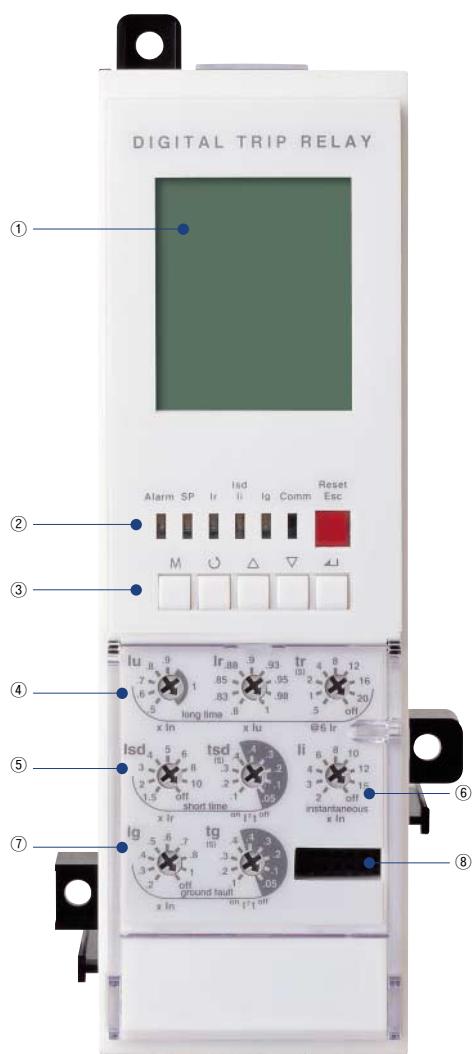


① LCD: Indication of measurement and information

② LED: Indication of trip info. and overload state

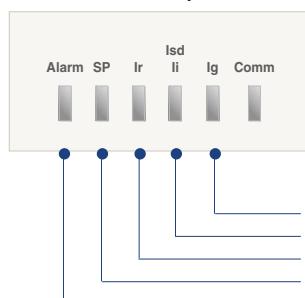

Ig: LED indicating ground-fault
 Isd/li: LED indicating short-time or instantaneous tripping
 Ir: LED indicating long-time delay
 SP: Self-protection and battery test LED
 Alarm: LED indicating an overload
 (Turn on above 90%, Blink above 105%)

③ Key: Move to menu or reset

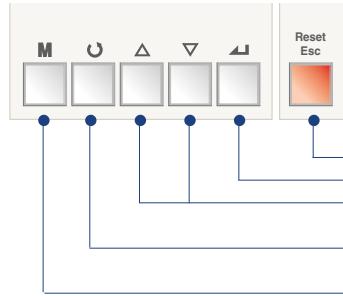

Reset/ESC: Fault reset or ESC from menu
 Enter: Enter into secondary menu or setting input
 Up/Down: Move the cursor up/down on screen or increase/decrease a setting value
 Right/Left: Move the cursor or setting right/left on screen (Rotation)
 Menu: Menu display ↔ Measurement display

④ Iu, Ir: Long-time current setting, tr: Long-time tripping delay setting


⑤ Isd: Short-time current setting, tsd: Short-time tripping delay setting

⑥ li: Instantaneous current setting

⑦ Ig: Ground fault current setting, tg: Ground fault tripping delay setting

⑧ Test terminal: OCR test terminal (Connected with OCR tester)

Protection

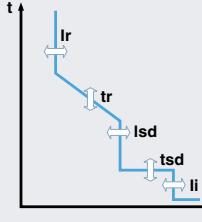

Long time

Current setting (A)	$I_{lu} = I_n \times \dots$	0.5	0.6	0.7	0.8	0.9	1.0			
	$I_r = I_n \times \dots$	0.8	0.83	0.85	0.88	0.9	0.93	0.95	0.98	1.0
Time delay (s)	$tr @ (1.5 \times I_r)$	12.5	25	50	100	200	300	400	500	Off
Accuracy: $\pm 15\%$ or below	$tr @ (6.0 \times I_r)$	0.5	1	2	4	8	12	16	20	Off
100ms	$tr @ (7.2 \times I_r)$	0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	Off

Short time

Current setting (A)	$I_{sd} = I_r \times \dots$	1.5	2	3	4	5	6	8	10	Off
Accuracy: $\pm 10\%$										
Time delay (s)	tsd	I^2t Off	0.05	0.1	0.2	0.3	0.4			
$@ 10 \times I_r$		I^2t On		0.1	0.2	0.3	0.4			
		Min. Trip Time(ms)	20	80	160	260	360			
		Max. Trip Time(ms)	80	140	240	340	440			

Instantaneous

Current setting (A)	$I_i = I_n \times \dots$	2	3	4	6	8	10	12	15	Off
Tripping time										



Ground fault

Pick-up (A)		0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
Accuracy: $\pm 10\% (I_g > 0.4I_n)$	$I_g = I_n \times \dots$									
$\pm 20\% (I_g \leq 0.4I_n)$										
	t_g	I^2t Off	0.05	0.1	0.2	0.3	0.4			
		I^2t On		0.1	0.2	0.3	0.4			
Time delay (s)		Min. Trip Time(ms)	20	80	160	260	360			
$@ 1 \times I_n$		Max. Trip Time(ms)	80	140	240	340	440			
		(I^2t Off)								

Earth leakage (Option)

Current setting (A)	$I_{\Delta n}$	0.5	1	2	3	5	10	20	30	Off
Time delay (ms)		Alarm Time(ms)	140	230	350	800	950			
Accuracy: $\pm 15\%$										
	Δt	Trip Time(ms)	140	230	350	800				

Note) Earth leakage function is available with ZCT or external CT

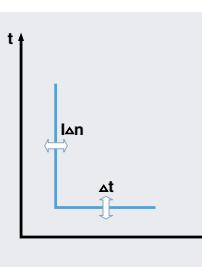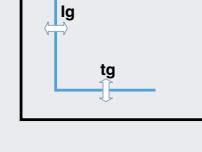


Trip relays

Susol · Metasol


P type: 'Power meter' type

- Overload protection
 - Long-time delay
 - Thermal
- Short-circuit protection
 - Short-time delay / Instantaneous
 - I^2t On/Off optional (for short-time delay)
- Ground fault protection
 - I^2t On/Off optional
- Protection for Over voltage/Under voltage/Over frequency/Under frequency/Unbalance/Reverse power
- Realization of protective coordination by ZSI (Zone Selective Interlocking)
- The fine-adjustable setting by knob and Key
- IDMTL setting (SIT, VIT, EIT, DT curve)
 - Basic setting : "None". Thermal curve.
- Measurement and Display Function
 - High detailed measurement for 3 phase current/Voltage/Power/Energy/Phase angle/Frequency/PF/Demand
 - 128 x 128 Graphic LCD
 - Indicates current/voltage Vector Diagram and Waveform
- Fault recording
 - Records Max. up to 256 fault information about fault type, fault phase, fault value, occurrence time of fault
- Event recording
 - Records events of device related to setting change, operation and state change. (Max. up to 256)
- SBO (Select Before Operation)
 - High reliability for control and setting change method
- 3 DO(Digital output)
 - Programmable for alarm, trip and general DO
- Communication
 - Modbus/RS485
 - Profibus-DP

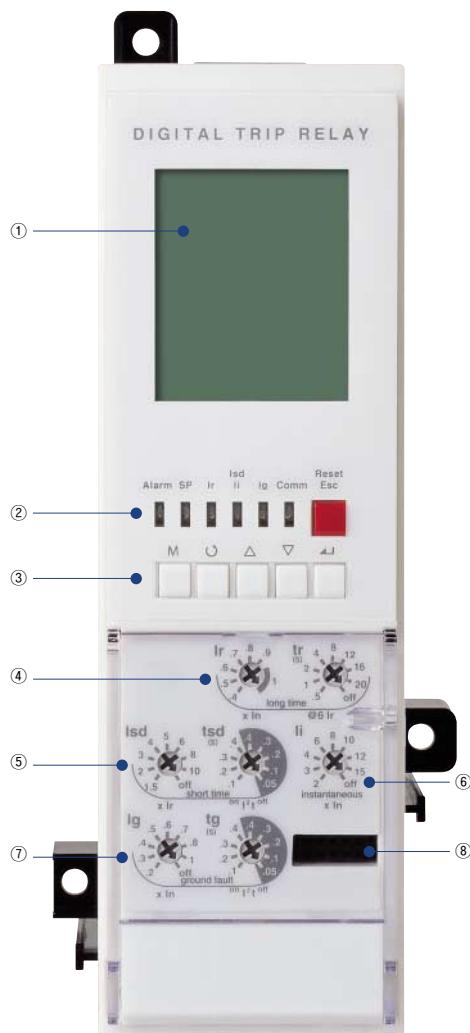


① Graphic LCD: Indication of measurement and information

② LED: Indication of trip info. and overload state

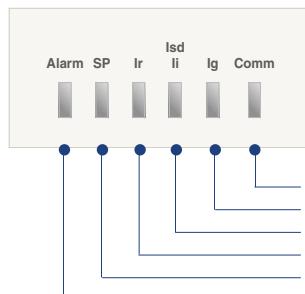

Comm: LED indicating comm. state (Blink when running)
 Ig: LED indicating ground-fault
 Isd/li: LED indicating short-time or instantaneous tripping
 Ir: LED indicating long-time delay
 SP: Self-protection and battery test LED
 Alarm: LED indicating an overload
 (Turn on above 90%, Blink above 105%)

③ Key: Move to menu or reset

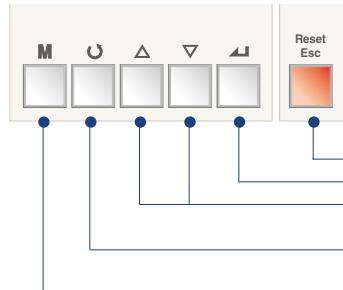

Reset/ESC: Fault reset or ESC from menu
 Enter: Enter into secondary menu or setting input
 Up/Down: Move the cursor up/down on screen or increase/decrease a setting value
 Right/Left: Move the cursor or setting right/left on screen (Rotation)
 Menu: Menu display ↔ Measurement display

④ Ir: Long-time current setting, tr: Long-time tripping delay setting


⑤ Isd: Short-time current setting, tsd: Short-time tripping delay setting

⑥ li: Instantaneous current setting

⑦ Ig: Ground fault current setting, tg: Ground fault tripping delay setting

⑧ Test terminal: OCR test terminal (Connected with OCR tester)

Protection

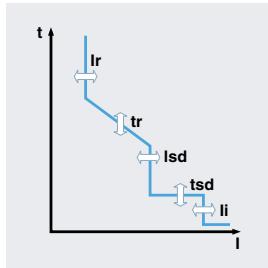

Long time

Current setting (A)	$I_r = I_n \times \dots$	0.4	0.5	0.6	0.7	0.8	0.9	1.0		
Time delay (s)	$tr @ (1.5 \times I_r)$	12.5	25	50	100	200	300	400	500	Off
Accuracy: $\pm 15\%$ or below	$tr @ (6.0 \times I_r)$	0.5	1	2	4	8	12	16	20	Off
100ms	$tr @ (7.2 \times I_r)$	0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	Off
Short time										
Current setting (A)	$I_{sd} = I_r \times \dots$	1.5	2	3	4	5	6	8	10	Off
Accuracy: $\pm 10\%$										
Time delay (s)	tsd	I^t Off	0.05	0.1	0.2	0.3	0.4			
@ $10 \times I_r$		I^t On		0.1	0.2	0.3	0.4			
		Min. Trip Time(ms)	20	80	160	260	360			
		(I^t Off)								
		Max. Trip Time(ms)	80	140	240	340	440			




Instantaneous

Current setting (A)	$I_i = I_n \times \dots$	2	3	4	6	8	10	12	15	Off
Tripping time										below 50ms

Ground fault

Pick-up (A)										
Accuracy: $\pm 10\%$ ($I_g > 0.4I_n$)	$I_g = I_n \times \dots$	0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
$\pm 20\%$ ($I_g \leq 0.4I_n$)										
		I^t Off	0.05	0.1	0.2	0.3	0.4			
		I^t On		0.1	0.2	0.3	0.4			
Time delay (s)										
@ $1 \times I_n$		Min. Trip Time(ms)	20	80	160	260	360			
(I^t Off)		Max. Trip Time(ms)	80	140	240	340	440			

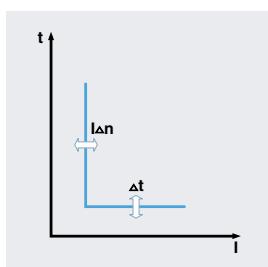

Earth leakage (Option)

Current setting (A)	$I_{\Delta n}$	0.5	1	2	3	5	10	20	30	Off
Time delay (ms)										
Accuracy: $\pm 15\%$		Alarm Time(ms)	140	230	350	800	950			
		Δt								
		Trip Time(ms)	140	230	350	800				

Note) Earth leakage function is available with ZCT or external CT

PTA(Pre Trip Alarm)

Current setting (A)	$I_p = I_r \times \dots$	0.6	0.65	0.7	0.75	0.8	0.85	0.9	0.95	1
Time delay (s)										
Accuracy: $\pm 15\%$	$tp @ (1.2 \times I_p)$	1	5	10	15	20	25	30	35	Off


Other protection	Pick-up			Time delay(s)		
	Setting range	Step	Accuracy	Setting range	Step	Accuracy
Under voltage	80V ~ 0V_Pick-up	1V	$\pm 5\%$			
Over voltage	UV_Pick-up ~ 980V	1V	$\pm 5\%$			
Voltage unbalance	6% ~ 99%	1%	$\pm 2.5\%$ or (* $\pm 10\%$)			
Reverse power	10~500 kW	1kW	$\pm 10\%$			
Over power	500~5000 kW	1kW	$\pm 10\%$			
Current unbalance	6% ~ 99%	1%	$\pm 2.5\%$ or (* $\pm 10\%$)			
Over frequency	60Hz UF_Pick-up ~ 65	1Hz	$\pm 0.1Hz$			
frequency	50Hz UF_Pick-up ~ 55	1Hz	$\pm 0.1Hz$			
Under frequency	60Hz 55Hz ~ OF_Pick-up	1Hz	$\pm 0.1Hz$			
frequency	50Hz 45Hz ~ OF_Pick-up	1Hz	$\pm 0.1Hz$			

Trip relays

Susol · Metasol


S type: 'Supreme meter' type

- Overload protection
 - Long-time delay
 - Thermal
- Short-circuit protection
 - Short-time delay / Instantaneous
 - I^2t On/Off optional (for short-time delay)
- Ground fault protection
 - I^2t On/Off optional
- Protection for Over voltage/Under voltage/Over frequency/Under frequency/Unbalance/Reverse power
- Realization of protective coordination by ZSI (Zone Selective Interlocking)
- The fine-adjustable setting by knob and Key
- IDMTL setting (SIT, VIT, EIT, DT curve)
 - Basic setting : "None". Thermal curve.
- Measurement and Display Function
 - High detailed measurement for 3 phase current/Voltage/Power/Energy/Phase angle/Frequency/PF/Demand
 - 128 x 128 Graphic LCD
 - Indicates current/voltage Vector Diagram and Waveform
- Fault recording
 - Records Max. up to 256 fault information about fault type, fault phase, fault value, occurrence time of fault
 - Fault wave recording: records the latest fault wave
- Event recording
 - Records events of device related to setting change, operation and state change. (Max. up to 256)
- SBO (Select Before Operation)
 - High reliability for control and setting change method
- Power quality analysis
 - Measurement for 1st~63th harmonics
 - THD, TDD, k-Factor
 - Voltage/current waveform capture
- 3 DO(Digital output)
 - Programmable for alarm, trip and general DO
- Communication
 - Modbus/RS485
 - Profibus-DP

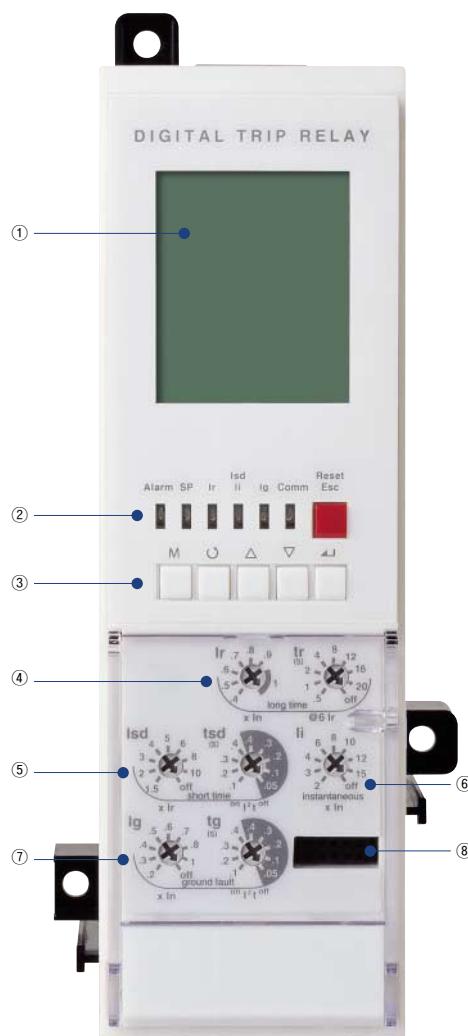


① Graphic LCD: Indication of measurement and information

② LED: Indication of trip info. and overload state

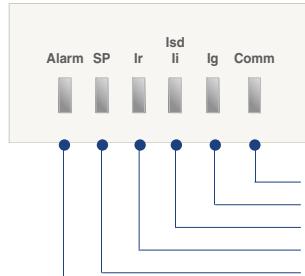

Comm: LED indicating comm. state (Blink when running)
 Ig: LED indicating ground-fault
 Isd/li: LED indicating short-time or instantaneous tripping
 Ir: LED indicating long-time delay
 SP: Self-protection LED and battery test LED
 Alarm: LED indicating an overload state
 (Turn on above 90%, Blink above 105%)

③ Key: Move to menu or reset

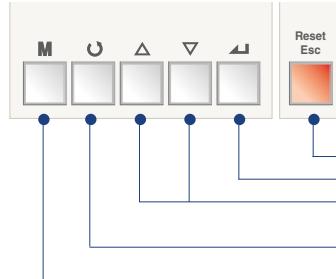

Reset/ESC: Fault reset or ESC from menu
 Enter: Enter into secondary menu or setting input
 Up/Down: Move the cursor up/down on screen or increase/decrease a setting value
 Right/Left: Move the cursor or setting right/left on screen (Rotation)
 Menu: Menu display ↔ Measurement display

④ Ir: Long-time current setting, tr: Long-time tripping delay setting


⑤ Isd: Short-time current setting, tsd: Short-time tripping delay setting

⑥ li: Instantaneous current setting

⑦ Ig: Ground fault current setting, tg: Ground fault tripping delay setting

⑧ Test terminal: OCR test terminal (Connected with OCR tester)

Protection

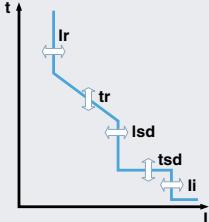

Long time

Current setting (A)	$I_u = I_n \times \dots$	0.4	0.5	0.6	0.7	0.8	0.9	1.0		
Time delay (s)	$tr @ (1.5 \times I_r)$	12.5	25	50	100	200	300	400	500	Off
Accuracy: $\pm 15\%$ or below	$tr @ (6.0 \times I_r)$	0.5	1	2	4	6	12	16	20	Off
100ms	$tr @ (7.2 \times I_r)$	0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	Off
Short time										
Current setting (A)	$I_{sd} = I_r \times \dots$	1.5	2	3	4	5	6	8	10	Off
Accuracy: $\pm 10\%$										
Time delay (s)	t_{sd}	$I^t Off$	0.05	0.1	0.2	0.3	0.4			
@ $10 \times I_r$		$I^t On$		0.1	0.2	0.3	0.4			
		$I^t Off$	Min. Trip Time(ms)	20	80	160	260	360		
			$I^t On$							
			Max. Trip Time(ms)	80	140	240	340	440		
Instantaneous										
Current setting (A)	$I_i = I_n \times \dots$	2	3	4	6	8	10	12	15	Off
Tripping time										
Ground fault										
Pick-up (A)										
Accuracy: $\pm 10\% (I_g > 0.4I_n)$	$I_g = I_n \times \dots$	0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
$\pm 20\% (I_g \leq 0.4I_n)$										
Time delay (s)	t_g	$I^t Off$	0.05	0.1	0.2	0.3	0.4			
@ $1 \times I_n$		$I^t On$		0.1	0.2	0.3	0.4			
		$I^t Off$	Min. Trip Time(ms)	20	80	160	260	360		
			$I^t On$							
			Max. Trip Time(ms)	80	140	240	340	440		
Earth leakage (Option)										
Current setting (A)	$I_{\Delta n}$	0.5	1	2	3	5	10	20	30	Off
Time delay (ms)										
Accuracy: $\pm 15\%$	Δt	Alarm Time(ms)	140	230	350	800	950			
			Trip Time(ms)	140	230	350	800			

Note) Earth leakage function is available with ZCT or external CT

PTA(Pre Trip Alarm)

Current setting (A)	$I_p = I_r \times \dots$	0.6	0.65	0.7	0.75	0.8	0.85	0.9	0.95	1
Time delay (s)	$t_p @ (1.2 \times I_p)$	1	5	10	15	20	25	30	35	Off
Accuracy: $\pm 15\%$										


Other protection	Pick-up			Time delay(s)		
	Setting range	Step	Accuracy	Setting range	Step	Accuracy
Under voltage	80V ~ 0V_Pick-up	1V	$\pm 5\%$			
Over voltage	UV_Pick-up ~ 980V	1V	$\pm 5\%$			
Voltage unbalance	6% ~ 99%	1%	$\pm 2.5\%$ or (* $\pm 10\%$)			
Reverse power	10~500 kW	1kW	$\pm 10\%$			
Over power	500~5000 kW	1kW	$\pm 10\%$			
Current unbalance	6% ~ 99%	1%	$\pm 2.5\%$ or (* $\pm 10\%$)			
Over frequency	60Hz UF_Pick-up ~ 65	1Hz	$\pm 0.1Hz$			
frequency	50Hz UF_Pick-up ~ 55	1Hz	$\pm 0.1Hz$			
Under frequency	60Hz 55Hz ~ OF_Pick-up	1Hz	$\pm 0.1Hz$			
frequency	50Hz 45Hz ~ OF_Pick-up	1Hz	$\pm 0.1Hz$			

Trip relays

Susol • Metasol

Operation characteristic

Long-time delay (L)

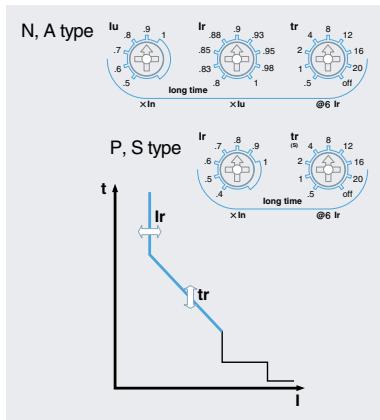

The function for overload protection which has time delayed characteristic in inverse ratio to fault current.

1. Standard current setting knob: I_r

- 1) Setting range in P type and S type: $(0.4-0.5-0.6-0.7-0.8-0.9-1.0) \times I_n$
- 2) Setting range in N type and A type: $(0.4 \sim 1.0) \times I_n$
 - $I_u: (0.5-0.6-0.7-0.8-0.9-1.0) \times I_n$
 - $I_r: (0.8-0.83-0.85-0.88-0.9-0.93-0.95-0.98-1.0) \times I_n$


2. Time delay setting knob: t_r

- Standard operating time is based on the time of $6 \times I_r$
- Setting range: 0.5-1-2-4-8-12-16-20-Off sec (9 modes)

3. Relay pick-up current

- When current over $(1.15) \times I_r$ flows in, relay is picked up.
- 4. Relay operates basing on the largest load current among R/S/T/N phase.

Short-time delay (S)

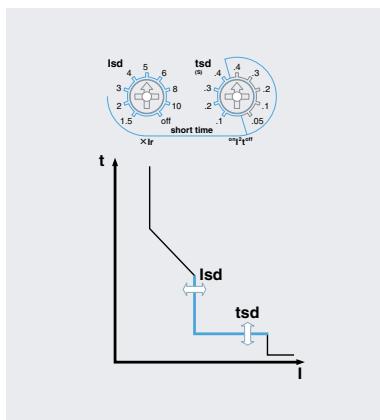

The function for fault current (over current) protection which has definite time characteristic and time delayed in inverse ratio to fault current.

1. Standard current setting knob: I_{sd}

- Setting range: $(1.5-2-3-4-5-6-8-10-Off) \times I_r$


2. Time delay setting knob: tsd

- Standard operating time is based on the time of $10 \times I_r$.
- Inverse time ($I^2 t$ On): 0.1-0.2-0.3-0.4 sec
- Definite time ($I^2 t$ Off): 0.05-0.1-0.2-0.3-0.4 sec

3. Relay operates basing on the largest load current among R/S/T/N phase.

4. When ZSI function was set, the protection operation will take place instantaneously with input absence by downstream devices. It is advised to disable its ZSI function on the last downstream device.

Instantaneous (I)

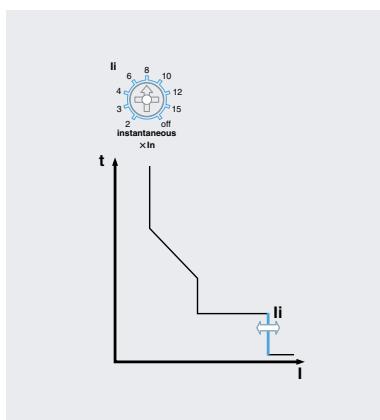

The function for breaking fault current above the setting value within the shortest time to protect the circuit from short-circuit.


1. Standard current setting knob: I_i

- Setting range: $(2-3-4-6-8-10-12-15-Off) \times I_n$

2. Relay operates basing on the largest load current among R/S/T/N phase.

3. Total breaking time is below 50ms.


Ground Fault (G)

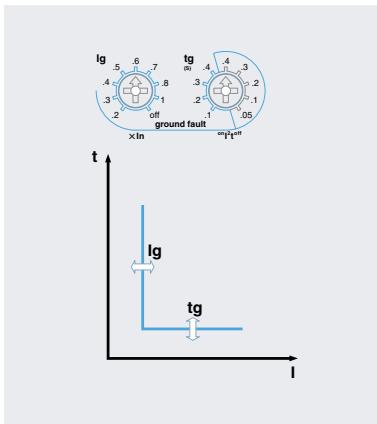

The function for breaking ground fault current above setting value after time-delay to protect the circuit from ground fault.

1. Standard setting current knob: Ig
- Setting range: $(0.2-0.3-0.4-0.5-0.6-0.7-0.8-1.0-\text{Off}) \times I_n$
2. Time delay setting knob: tg
- Inverse time (I^t On): 0.1-0.2-0.3-0.4 sec
- Definite time (I^2t Off): 0.05-0.1-0.2-0.3-0.4 sec
3. Ground fault current is vector sum of each phase current. Therefore, 3Pole products may operate under its phase-unbalance including ground fault situations.(R+S+T+(N) Phase)
4. When ZSI function was set, the protection operation will take place instantaneously with input absence by downstream devices. It is advised to disable its ZSI function on the last downstream device.
5. Ground-fault functions are basically provided with products equipped with a trip relay through its internal CT that is embedded in each phase.(But, it can't be used with earth-leakage protection function at the same time)

Earth Leakage (G) - Option

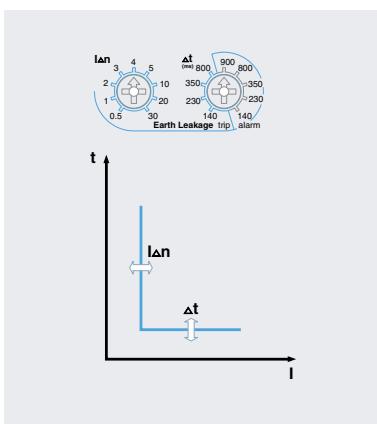


The function for breaking earth leakage current above setting value after time delay to protect the circuit from earth leakage. (A, P, S type)

1. Standard setting current knob: IΔn
- Setting range: 0.5-1-2-3-4-5-10-20-30-Off (A)
2. Time delay setting knob: Δt
- Trip time: 140-230-350-800 ms
- Alarm time: 140-230-350-800-950 ms
3. Settings within its alarm range will prevent its breaker from tripping but activating its alarm.
4. This function is enabled and can be used only with standard ZCT provided by LS or private external CT(second output 5A) selected by customers.
5. When ZSI function was set, the protection operation will take place instantaneously with input absence by downstream devices. It is advised to disable its ZSI function on the last downstream device.



*Use cautions with earth-leakage current settings

- When using a standard ZCT provided by LS, the setting range is from 0.5 to 30A which is based on its primary current. But ACB installed like A type (displayed on the left side) should only be cable-connected and its rated current should be less than 1600A.
- When using other CT selected by customers, the setting range is from 0.5 to 5A based on its secondary current.(Secondary output rating : 5A)
Hence, under 100:5A CT, if trip relay is set to 0.5A, earth-leakage exceeding 10A will activate its operation ($0.5A \times 20 = 10A$)

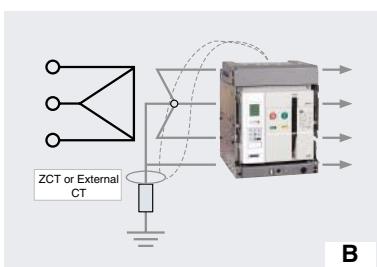

*Guideline for the external CT usage

- Earth-leakage protection characteristics using the standard CT which is installed inside of ACB can protect currents from 20 to 100% range on its rated current.
- As rated currents on ACB increases, current that is covered by its standard CT increase as well. This can not protect against small leakage currents.
ex) 400A ACB Min. Earth-leakage current $400A \times 20\% = 80A$
 $4000A \text{ ACB Min. Earth-leakage current } 4000A \times 20\% = 800A$
- Therefore, customers are advised to install an external CT in accordance with its rated currents within its systems. And choose trip relay(E, X type) which is required with external CT usage in order to provide earth-leakage functions.

Trip relays

Susol · Metasol


Measurement function

	Class.	Measurement element	Detailed element	Unit	Display range	Accuracy
A type	Current	Line current	Ia,Ib,Ic	A	80A~65,535A	±3%
		Normal current	I ₁			
		Reverse current	I ₂			
P type	Voltage	Line voltage	Vab,Vbc,Vca	V	60~690V	±1%
		Phase voltage	Va,Vb,Vc			±1%
		Normal voltage	V ₁			
		Reverse voltage	V ₂			
S type	Angle	Line-to-line	∠Vabla, ∠Vablb, ∠Vablc,	°	0~360 °	±1 °
		Line-to-current	∠VabVbc, ∠VabVca			±1 °
		Phase-to-phase	∠VaVb, ∠VaVc			±1 °
		Phase-to-current	∠Vala, ∠Vblb, ∠Vclc			±1 °
Power	Active power	Pa(ab), Pb(bc), Pc(ca), P	kW	1kW~99,999kW	±3%	
	Reactive power	Qa(ab), Qb(bc), Qc(ca), Q	kVar	1kVar~99,999kVar	±3%	
	Apparent power	Sa(ab), Sb(bc), Sc(ca), S	kVA	1kVA~99,999kVA	±3%	
Energy	Active energy	WHa(ab), WHb(bc), WHc(ca), WH	kWh MWh	1kWh~9999.99MWh	±3%	
	Reactive energy	VARHa(ab), VARHb(bc), VARHc(ca), VARH	kVarh Mvarh	1kVarh~9999.99MVarh	±3%	
	Reverse active energy	rWHa(ab), rWHb(bc), rWHc(ca), rWH	kWh MWh	1kWh ~9999.99MWh	±3%	
Freq.	Frequency	F	Hz	45~65Hz		
Power factor	Power factor(PF)	PFa(ab), PFb(bc), PFc(ca), PF		+ : Lead, - : Lag		
Unbalance	Unbalance rate	Iunbalance, Vunbalance	%	0.0~100.0		
Demand	Active power demand	Peak demand	kW	1kW~99999kW		
	Current demand	Peak demand	A	80A~65,535A		
Harmonics	Voltage harmonics	1st~63th harmonics of Va(ab),Vb(bc),Vc(ca)	V	60~690V		
	Current harmonics	1st~63th harmonics of Ia,Ib,Ic	A	80A~65,535A		
	THD, TDD		%	0.0~100.0		
	K-Factor		-	0.0~100.0		


Voltage module

For P and S type Trip relay, separate voltage module is necessary to measure other element besides current (Separate purchase is needed)


- Voltage input range: AC 60~690V

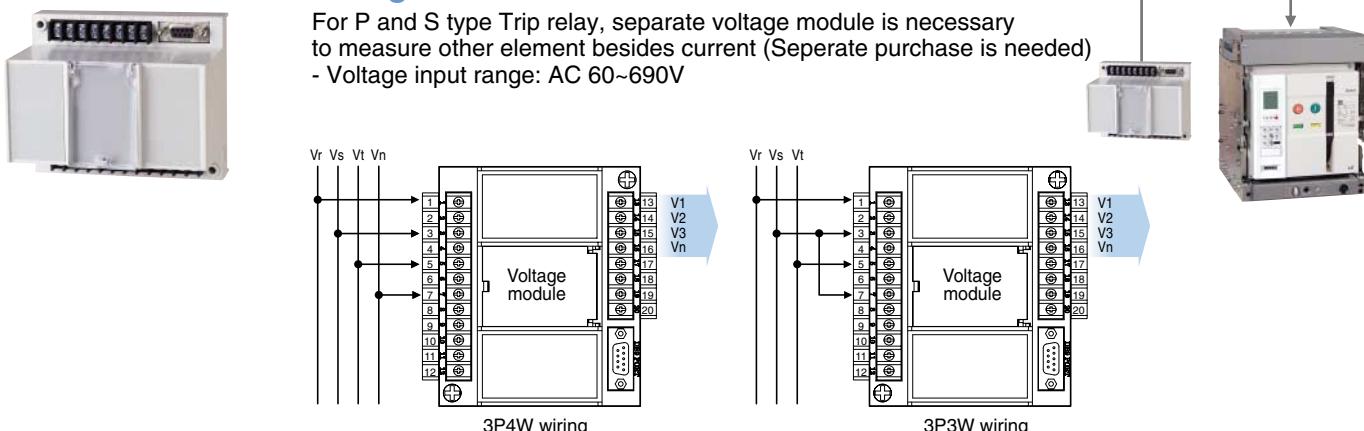

Man machine interface

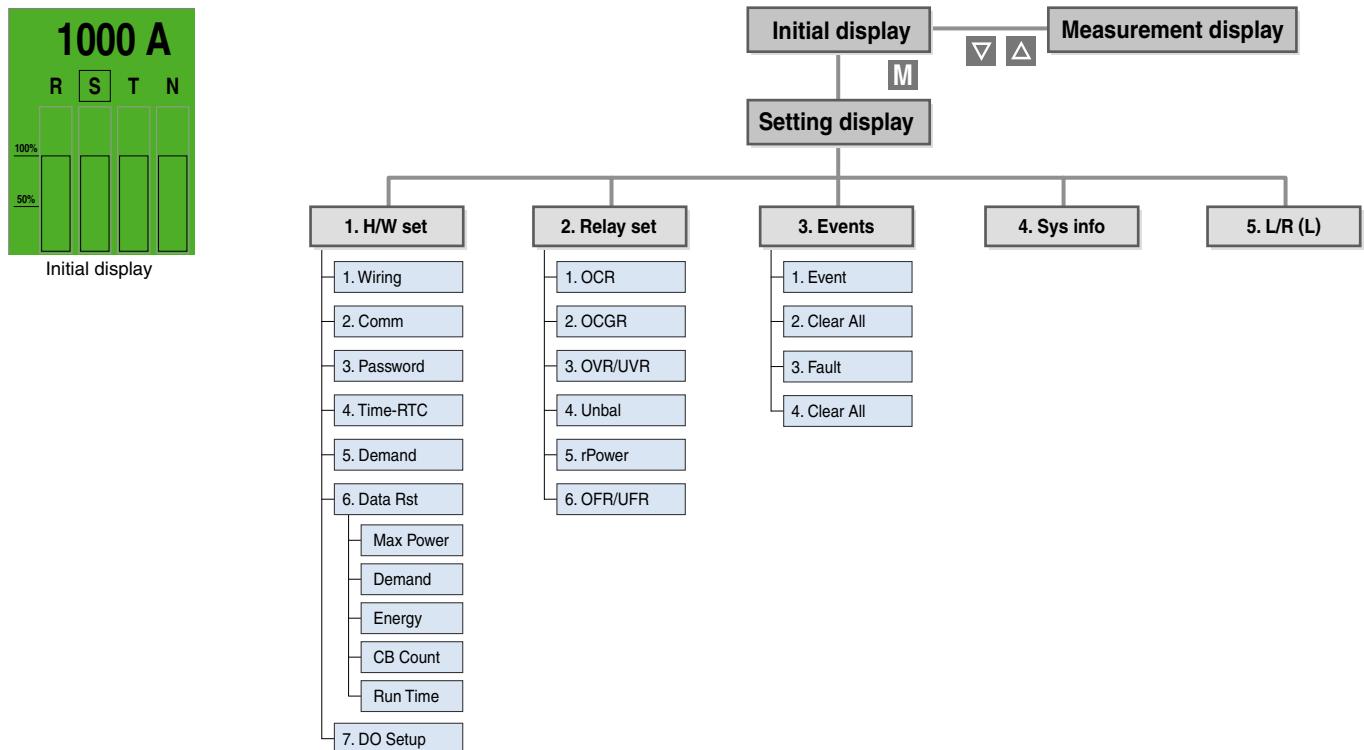


An example of graphic LCD display

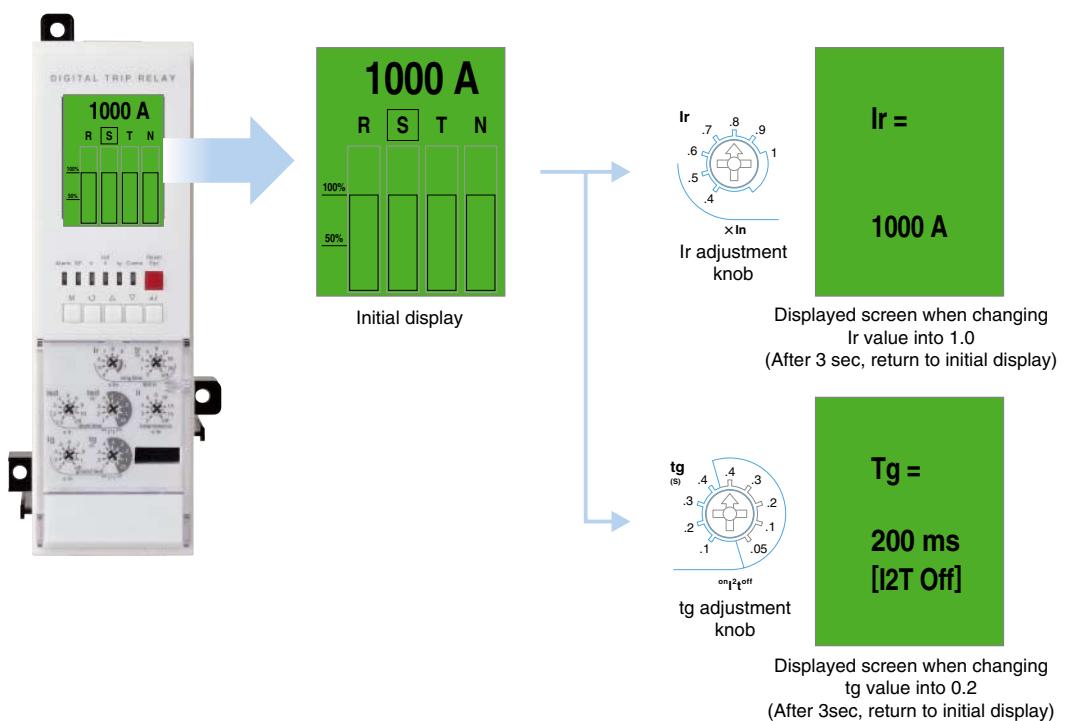

Trip relays




Susol • Metasol

Protection element setting

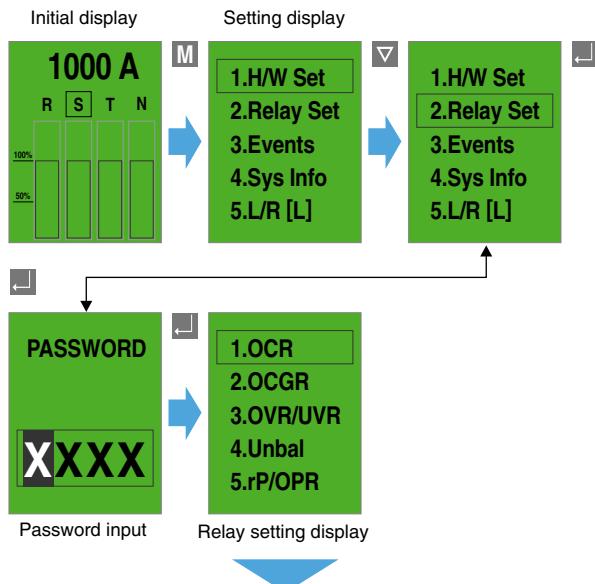


Find adjustment of protection setting current

- OCR and OCGR's current setting is basically controlled by knob's setting values.
- The fine current that cannot be controlled by knob is adjustable by using ∇ , Δ key.
- Fine adjustment is only adjustable in the present knob and next knob's setting range, when moving knob, the adjusted data becomes reset state.
- The setting method of OCGR is same with OCR's, fine adjustment is available.

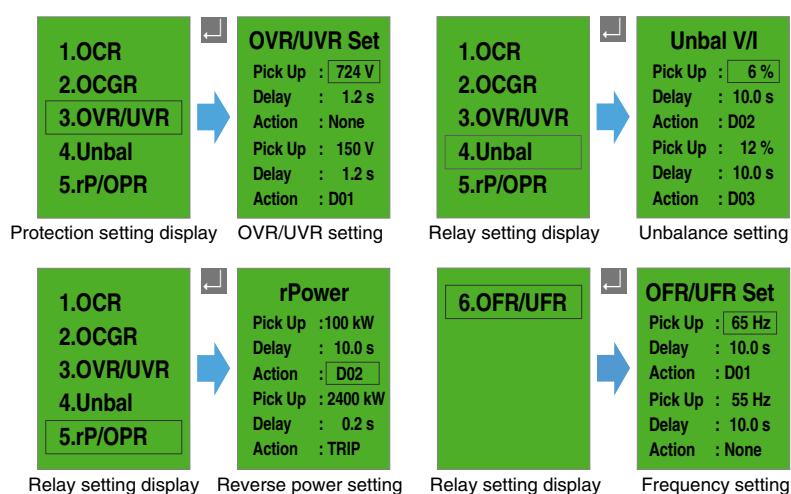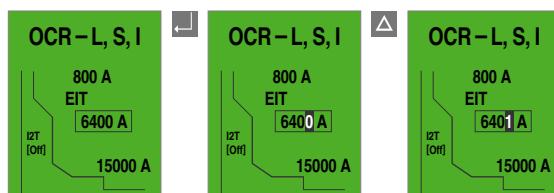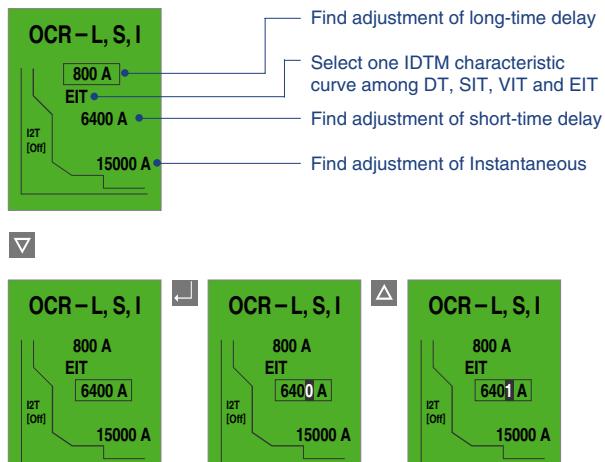

Measurement element display

Load current

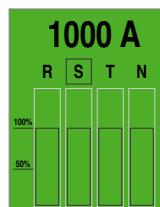

Measurement overview

Metering Overview

VR	220	V \angle 0.0
IR	1000	A \angle 330.0
P	986	kW
Q	589	kVar
PF	0.866	F 60.0
EP	56	kWh
EQ	32	kVArh


Demand Current [A]

R :	1000
S :	1000
T :	1000
Max Demand [kW]	986
2007/05/14	11:15:00

Max Power [kW]

987
2007/05/14
10:00:00

Voltage/Current vector diagram

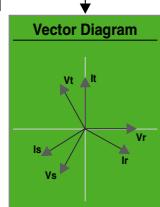


VOLTGAE [V]

VR :	220	\angle 0.0
VS :	220	\angle 240.0
VT :	220	\angle 120.0

CURRENT [A]

IR :	1000	\angle 330.0
IS :	1000	\angle 210.0
IT :	1000	\angle 90.0
IN :	0	

Power and power factor

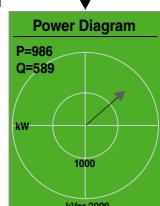

Active Power [kW]

R :	328	Total
S :	328	986
T :	328	

Apparent [kVA]

R :	379	Total
S :	379	1139
T :	379	

Power Factor

R :	0.87	Total
S :	0.87	0.866
T :	0.87	

Energy

Forward Energy

P+ :	1051	kWh
Q+ :	607	kVArh

Reverse Energy

P- :	0	kWh
Q- :	0	kVArh

Forward P [kWh]

R :	360	Total
S :	360	1080
T :	360	

Reverse P [kWh]

R :	0	Total
S :	0	0
T :	0	


Forward Q [kVArh]

R :	210	Total
S :	210	630
T :	210	

Reverse Q [kVArh]

R :	0	Total
S :	0	0
T :	0	

Voltage/Current harmonics (S type)

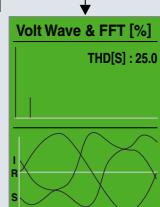

S Volt Harmonics [V]

H1	220	H8	0
H2	0	H9	0
H3	55	H10	0
H4	0	H11	0
H5	0	H12	0
H6	0	H13	0
H7	0	H14	0


S Volt Harmonics [V]

H15	0	H22	0
H16	0	H23	0
H17	55	H24	0
H18	0	H25	0
H19	0	H26	0
H20	0	H27	0
H21	0	H28	0

...

S Volt Harmonics [V]

H57	0
H58	0
H59	0
H60	0
H61	0
H62	0
H63	0

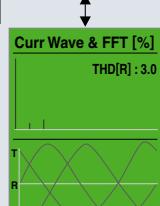

R Curr Harmonics [A]

H1	1000	H8	0
H2	0	H9	3
H3	15	H10	0
H4	0	H11	1
H5	20	H12	0
H6	0	H13	1
H7	0	H14	0

R Curr Harmonics [A]

H15	1	H22	0
H16	0	H23	1
H17	1	H24	0
H18	0	H25	1
H19	1	H26	0
H20	0	H27	1
H21	1	H28	0

...

R Curr Harmonics [A]

H57	0
H58	0
H59	0
H60	0
H61	0
H62	0
H63	0

...

TDD 3Phase


R :	0.1 %
S :	0.1 %
T :	0.1 %
Current K - Factor	
R :	1.2
S :	1.2
T :	1.3

Trip relays


Susol · Metasol

Characteristic curves

Long-time delay (L)

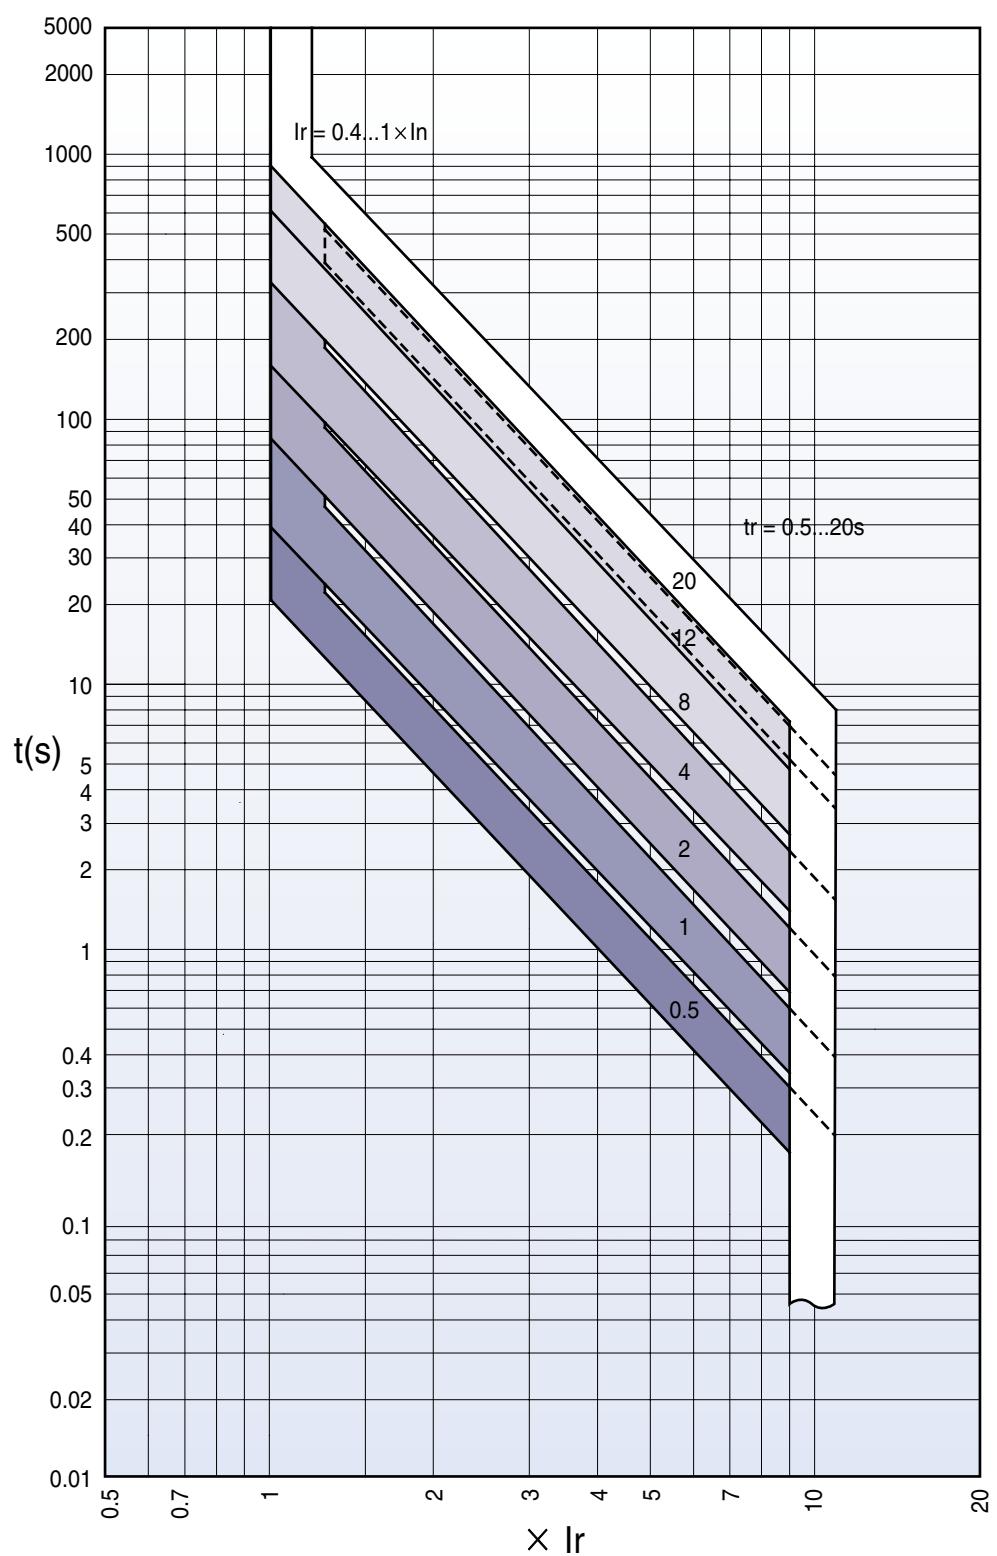

Short-time delay (S)

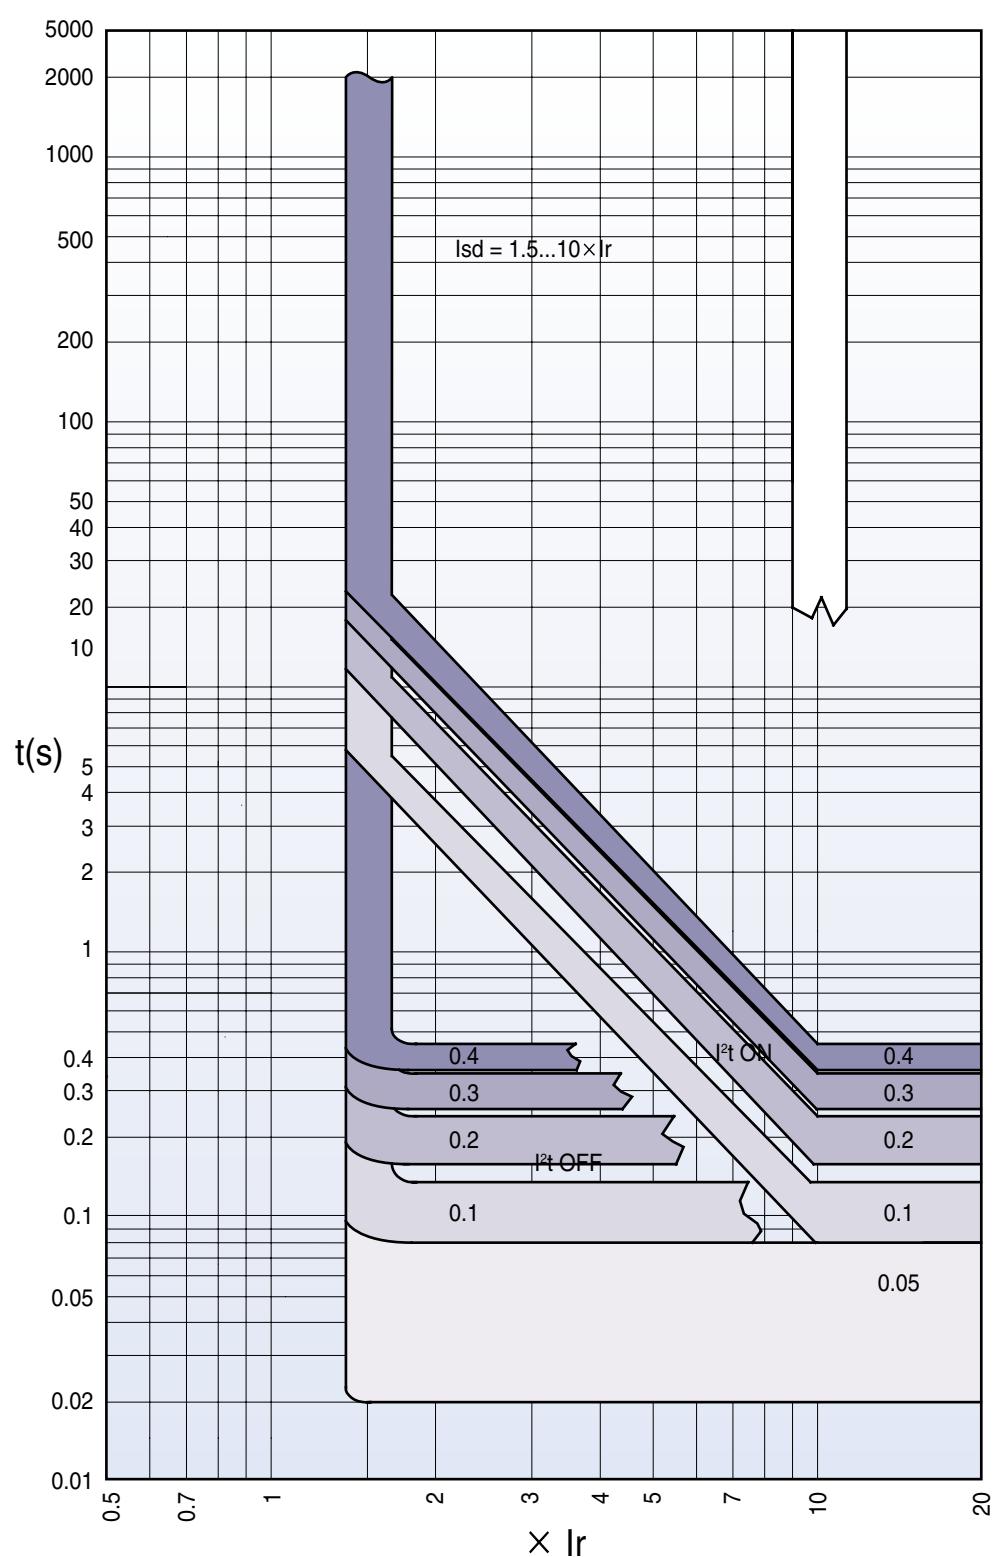


Trip relays


Susol · Metasol

Characteristic curves

Instantaneous (I)
Ground fault (G)

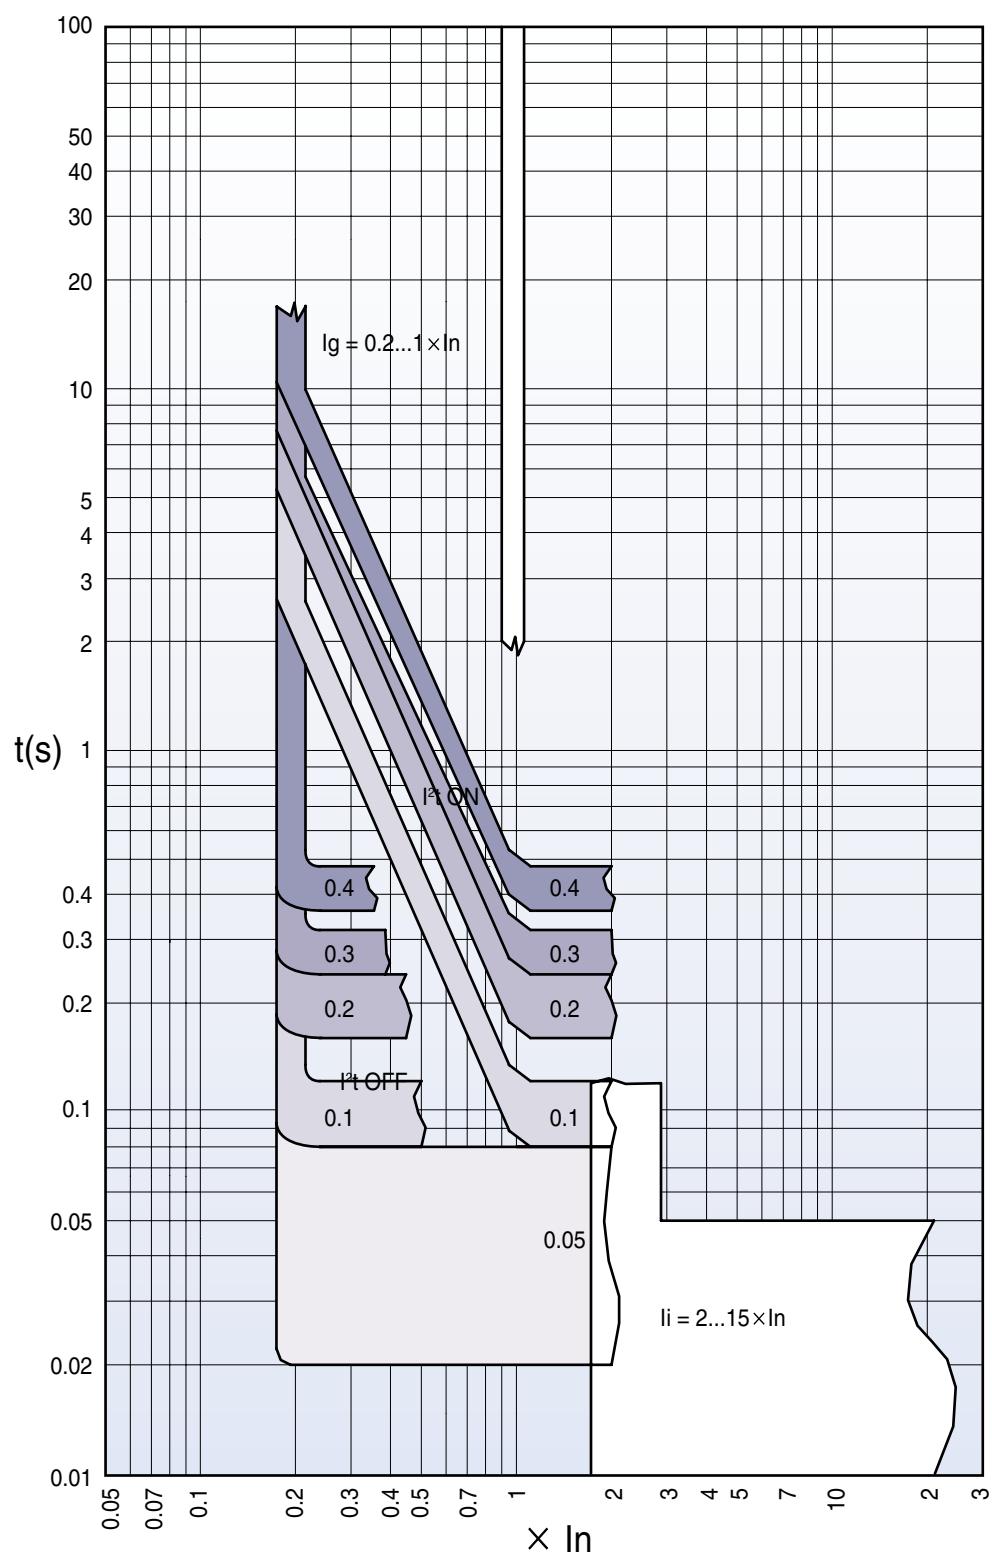

IDMTL

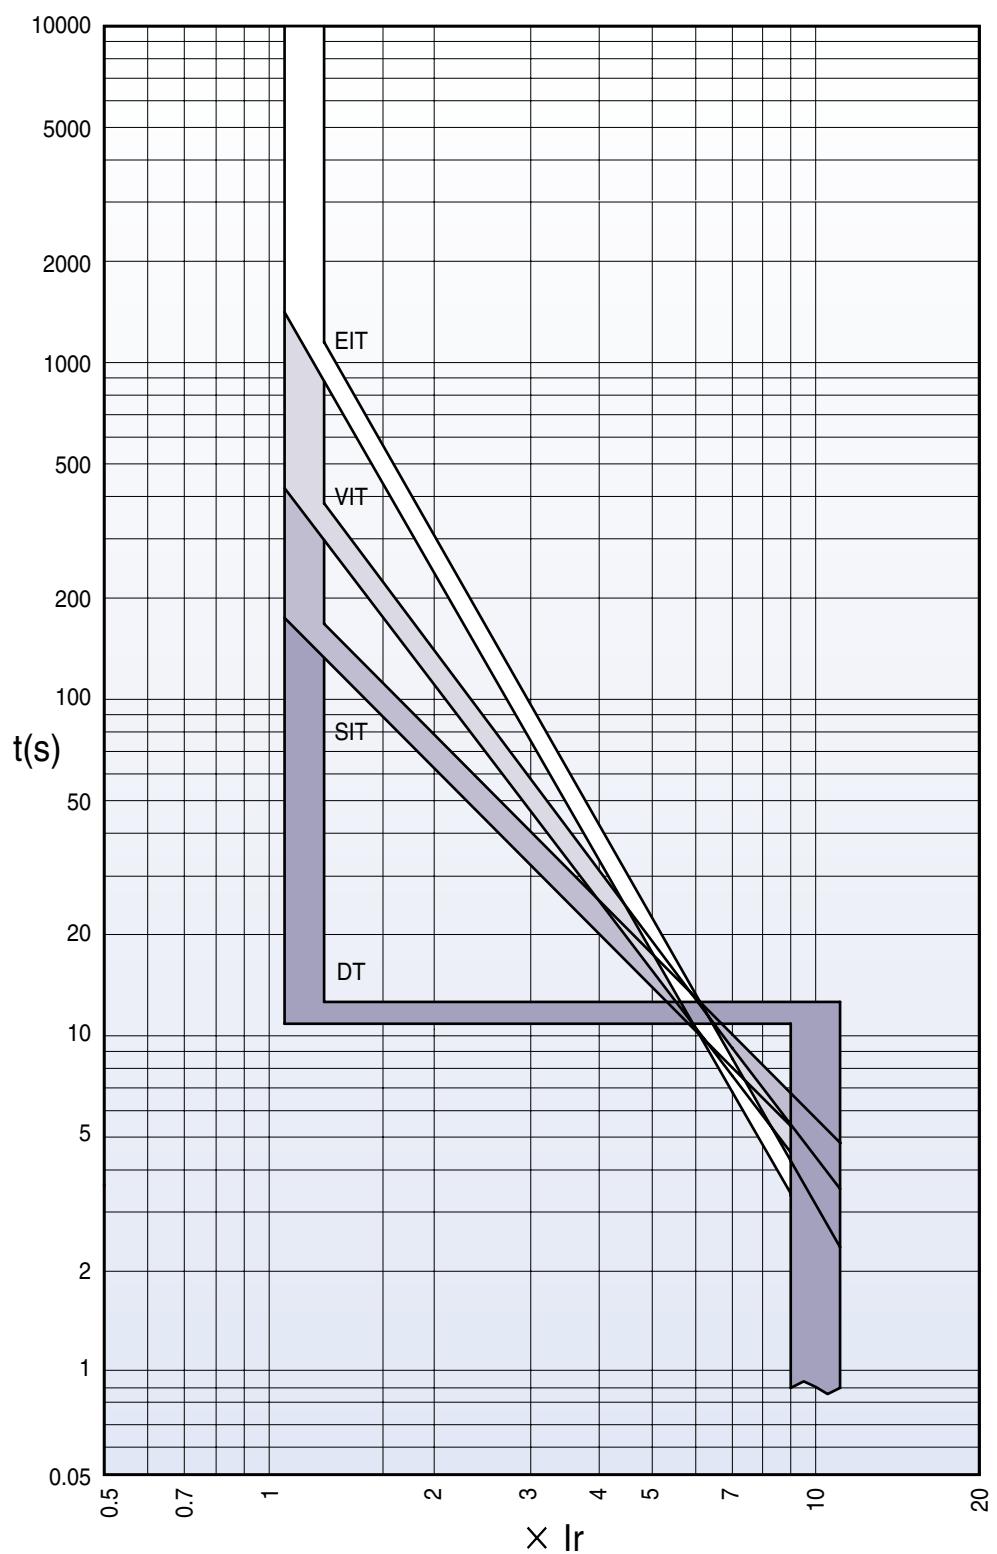


Trip relays

Susol · Metasol

Characteristic curves


Pre Trip Alarm

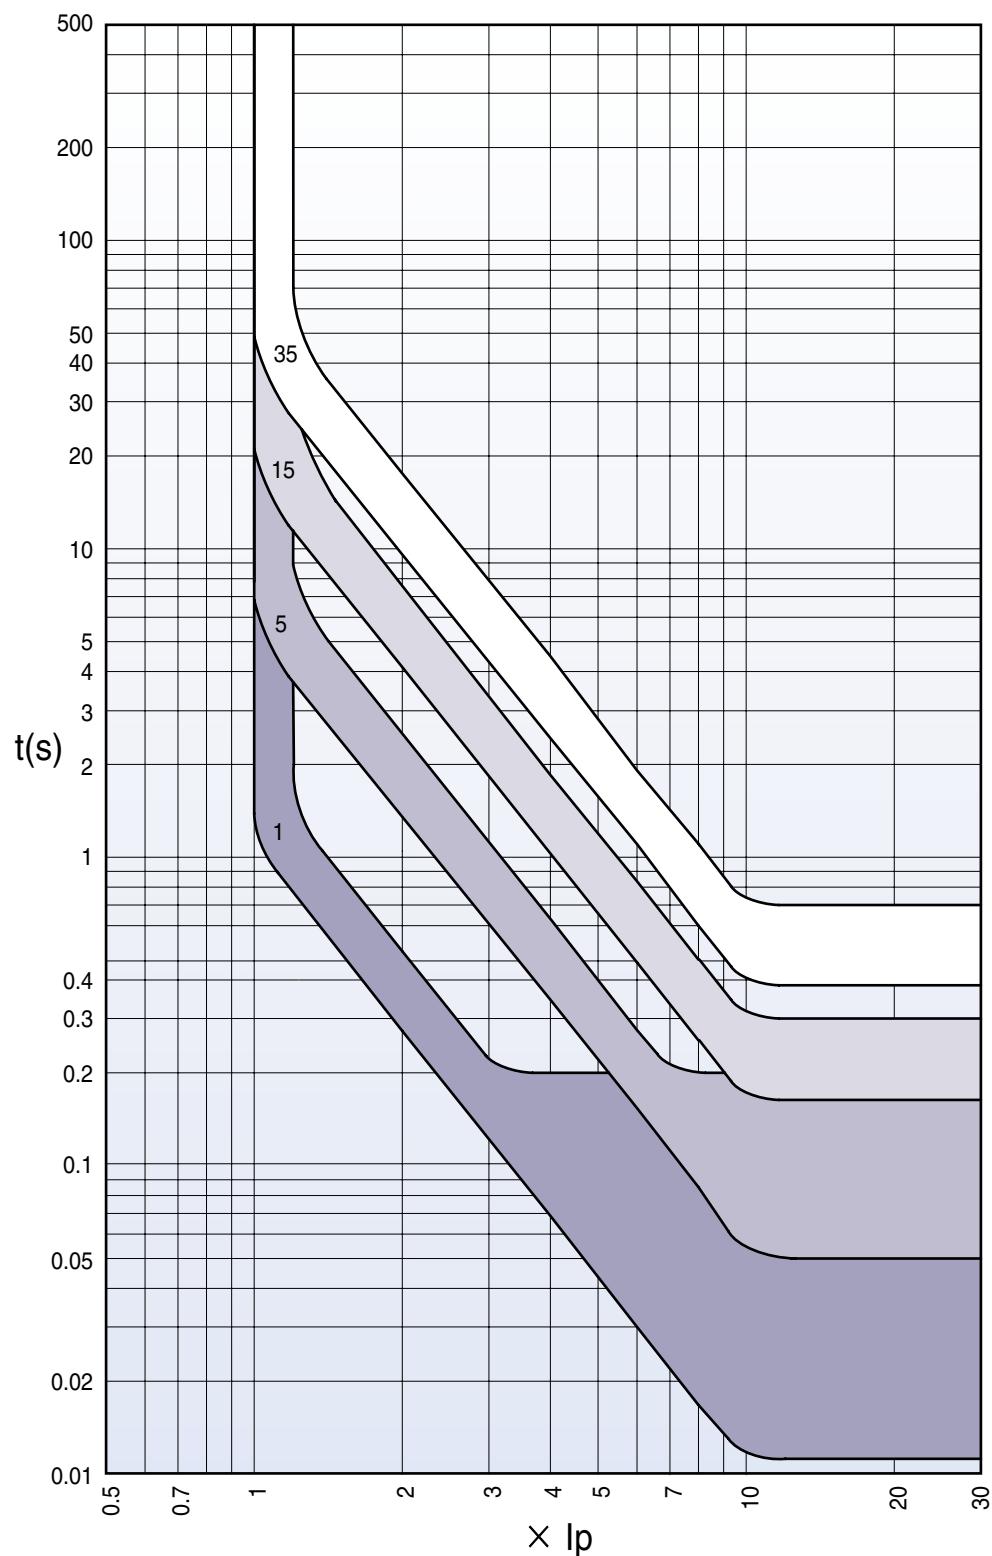

ZSI - Zone Selective Interlocking (A, P, S type)

Zone-selective interlocking drops delay time that eliminates faults for breakers. It minimizes the shock that all kinds of electric machineries get under fault conditions.

1. In case of that short time-delay or ground fault accident occurs at ZSI built in system, the breaker at accident site sends ZSI signal to halt upstream breaker's operation.
2. To eliminate a breakdown, trip relay of ACB at accident site activates trip operation without time delay.
3. The upstream breaker that received ZSI signal adhere to pre-set short time-delay or ground fault time-delay for protective coordination in the system. However upstream breaker that did not receive its signal will trip instantaneously.
4. For ordinary ZSI operation, it should arrange operation time accordingly so that downstream circuit breakers will react before upstream ones under overcurrent/short time delay/ ground fault situations.
5. ZSI connecting line needs to be Max. 3m.

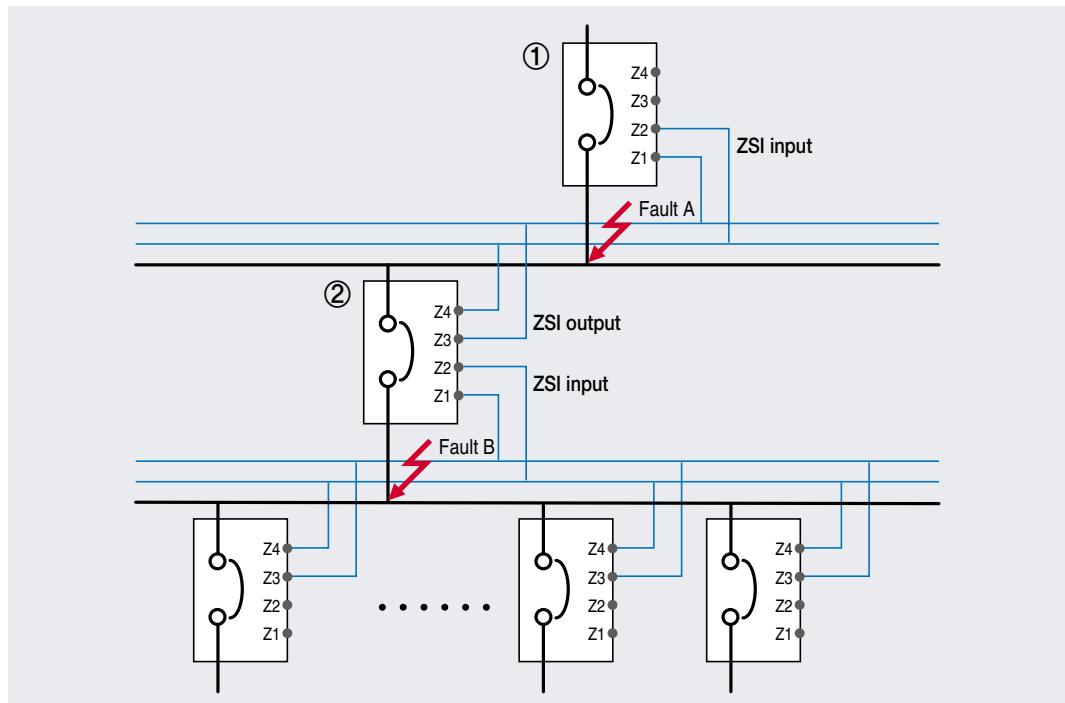

- 1) Occurrence of fault A
 - Only breaker ① performs instantaneous trip operation.
- 2) Occurrence of fault B
 - Breaker ② performs instantaneous trip operation,
 - breaker ① performs trip operation after prearranged delay time
 - But if breaker ② did not break the fault normally,
 - breaker ① performs instantaneous trip operation to protect system.

Trip relays


Susol · Metasol

Remote reset and digital I/O (A, P, S type)

In case of that ACB operates due to accidents or over current,
 Trip relay indicates the information of the accident through the LED and LCD.
 Trip relay A, P and S type is possible to perform the remote reset by digital input,
 and have 3 DO(Digital output).

1. Methods to reset Trip relay is to push the Reset button on the frontal side and to use the remote reset.
2. Digital input
 - [R11-R22] input: Remote reset
 - [Z1-Z2] Input: ZSI input
 - [E1-E2] Input: ZCT for earth leakage detection or external CT input

* All DI are dry contact that has 3.3V of recognition voltage. When inputting close by SSR(Solid State Relay) or open-collector, connect collector(Drain) to R11.
3. Digital output 3a(524, 534, 544-513)
 - Fault output: Long/Short time delay, Instantaneous, Ground fault, UVR, OVR, UFR, OFR, rPower, Vunbal, lunbal
 (Maintains state as Latch form until user pushes reset.)
 - General DO: when setting L/R as remote, it is available to control close/open remotely by using communication.

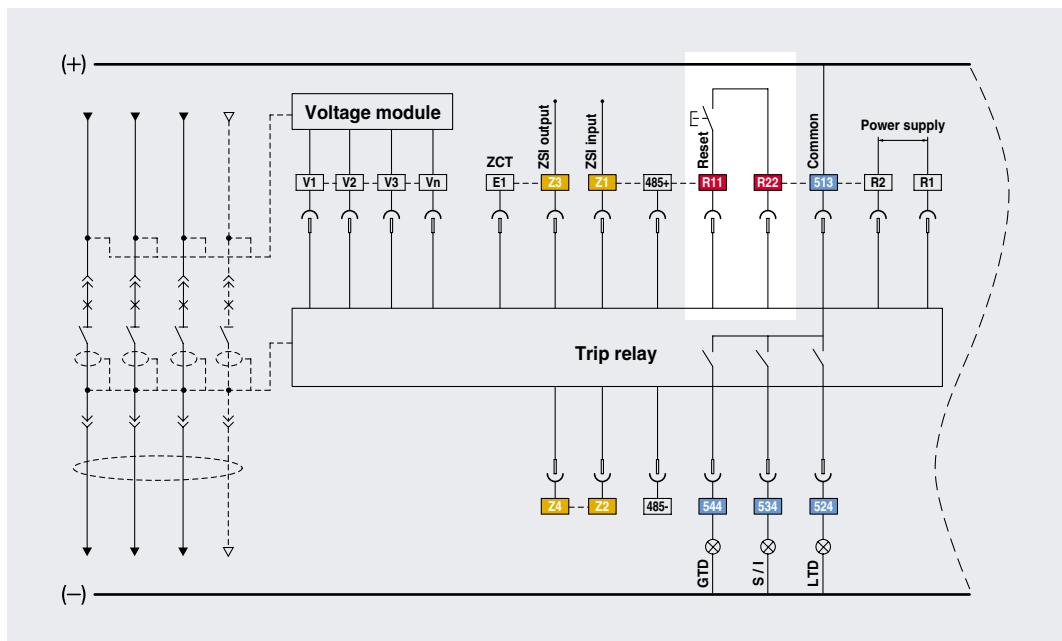


Trip Relay	Digital Output	Long time	Short time	Instantaneous	Ground	Overload Alarm	OVR	UVR	rPower	Vunbal	lunbal	OFR	UFR	OPR	Note		
P, S type	DO1(524)	●	○	○	○	○	○	○	○	○	○	○	○	○	Programmable		
	DO2(534)	○	●	●	○	○	○	○	○	○	○	○	○	○			
	DO3(544)	○	○	○	●	○	○	○	○	○	○	○	○	○			
A type	DO1(524)	●	×	×	×	Not available										Fixed	
	DO2(534)	×	●	●	×												
	DO3(544)	×	×	×	●												

Communication


Modbus/RS-485

- Operation mode: Differential
- Distance: Max. 1.2km
- Cable : General RS-485 shielded twist 2-pair cable
- Baud rate : 9600bps, 19200bps, 38400bps
- Transmission method: Half-Duplex
- Termination: 150Ω

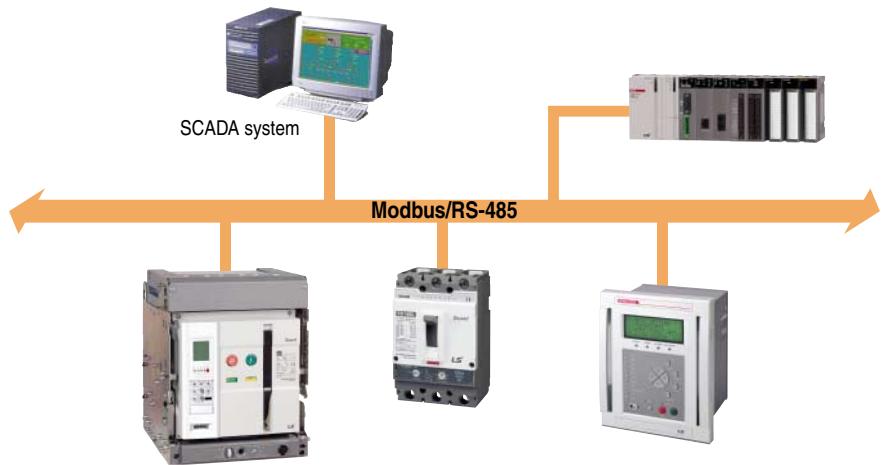

Profibus-DP

- Profibus-DP module is installed separately (Option)
- Operation mode: Differential
- Distance: Max. 1.2km
- Cable : Profibus-DP shielded twist 2-pair cable
- Baud rate: 9600bps~12Mbps
- Transmission method: Half-Duplex
- Termination: 150Ω
- Standard: EN 50170 / DIN 19245

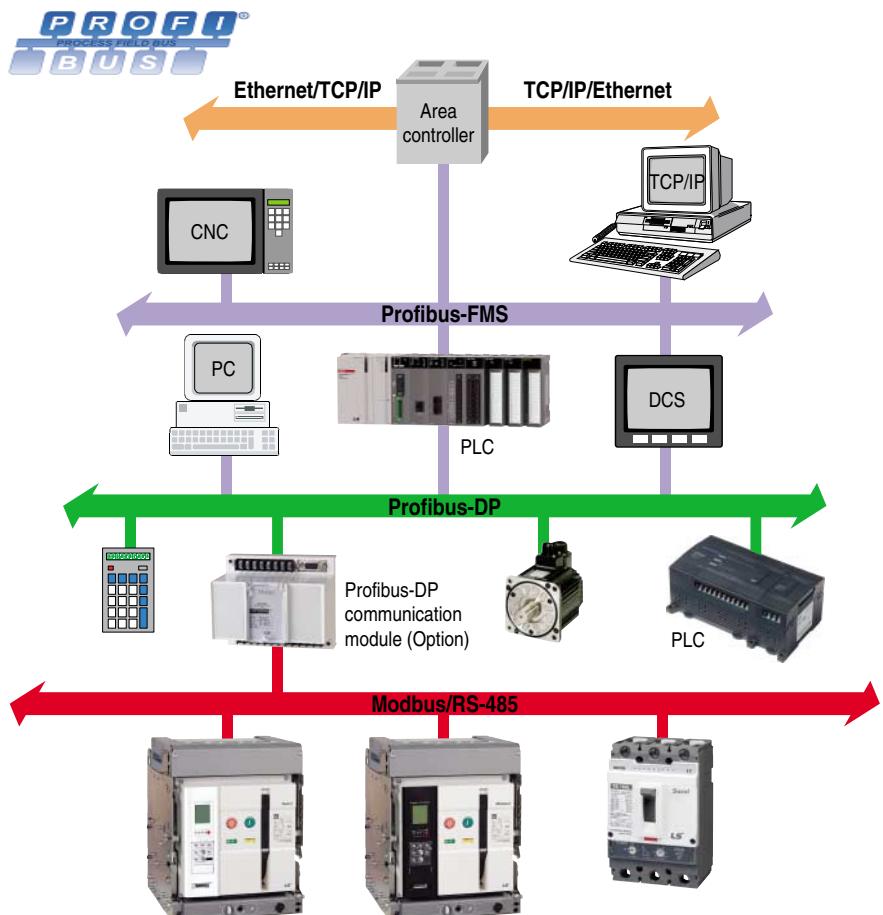


Trip relays

Susol · Metasol


Event & fault recording (P, S type)

When there are events such as setting change, Info. change, error of self-diagnose, state change, P and S type record Max. up to 256 information of the events in accordance with time(ms). In addition, they can record Max. up to 256(up to 10 for A type) information of the faults such as fault cause, fault phase, fault value and so on in accordance with time(ms).

Event information display

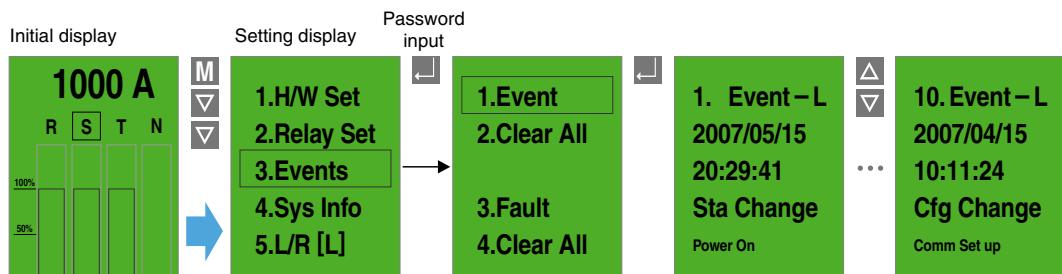

Fault information display

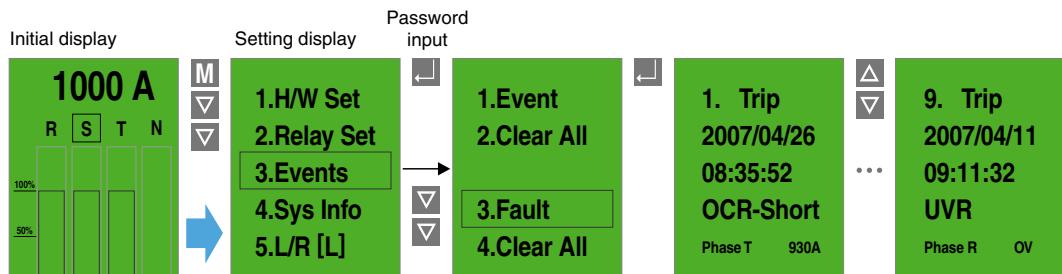


System information


P and S type can indicate information as followings with the information of the ACB.

- Present time: year/month/date/hour/minute/ms
- ACB current ratings
- N-phase current ratings: 100%
- Frequency information: 60Hz / 50Hz
- Closing numbers of breaker: CB ON numbers
- Trip relay operating time: OCR ON time
- ON time of breaker: CB ON time
- S/W ver. information

System information display

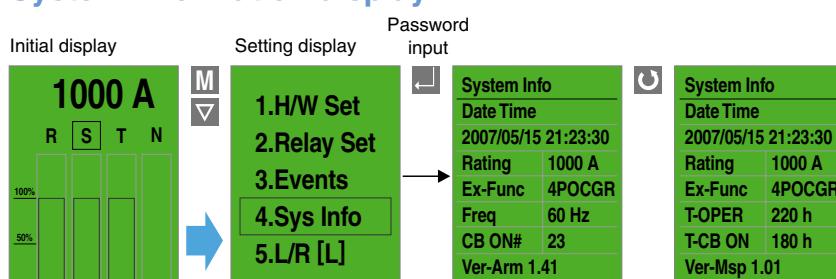

System block diagram

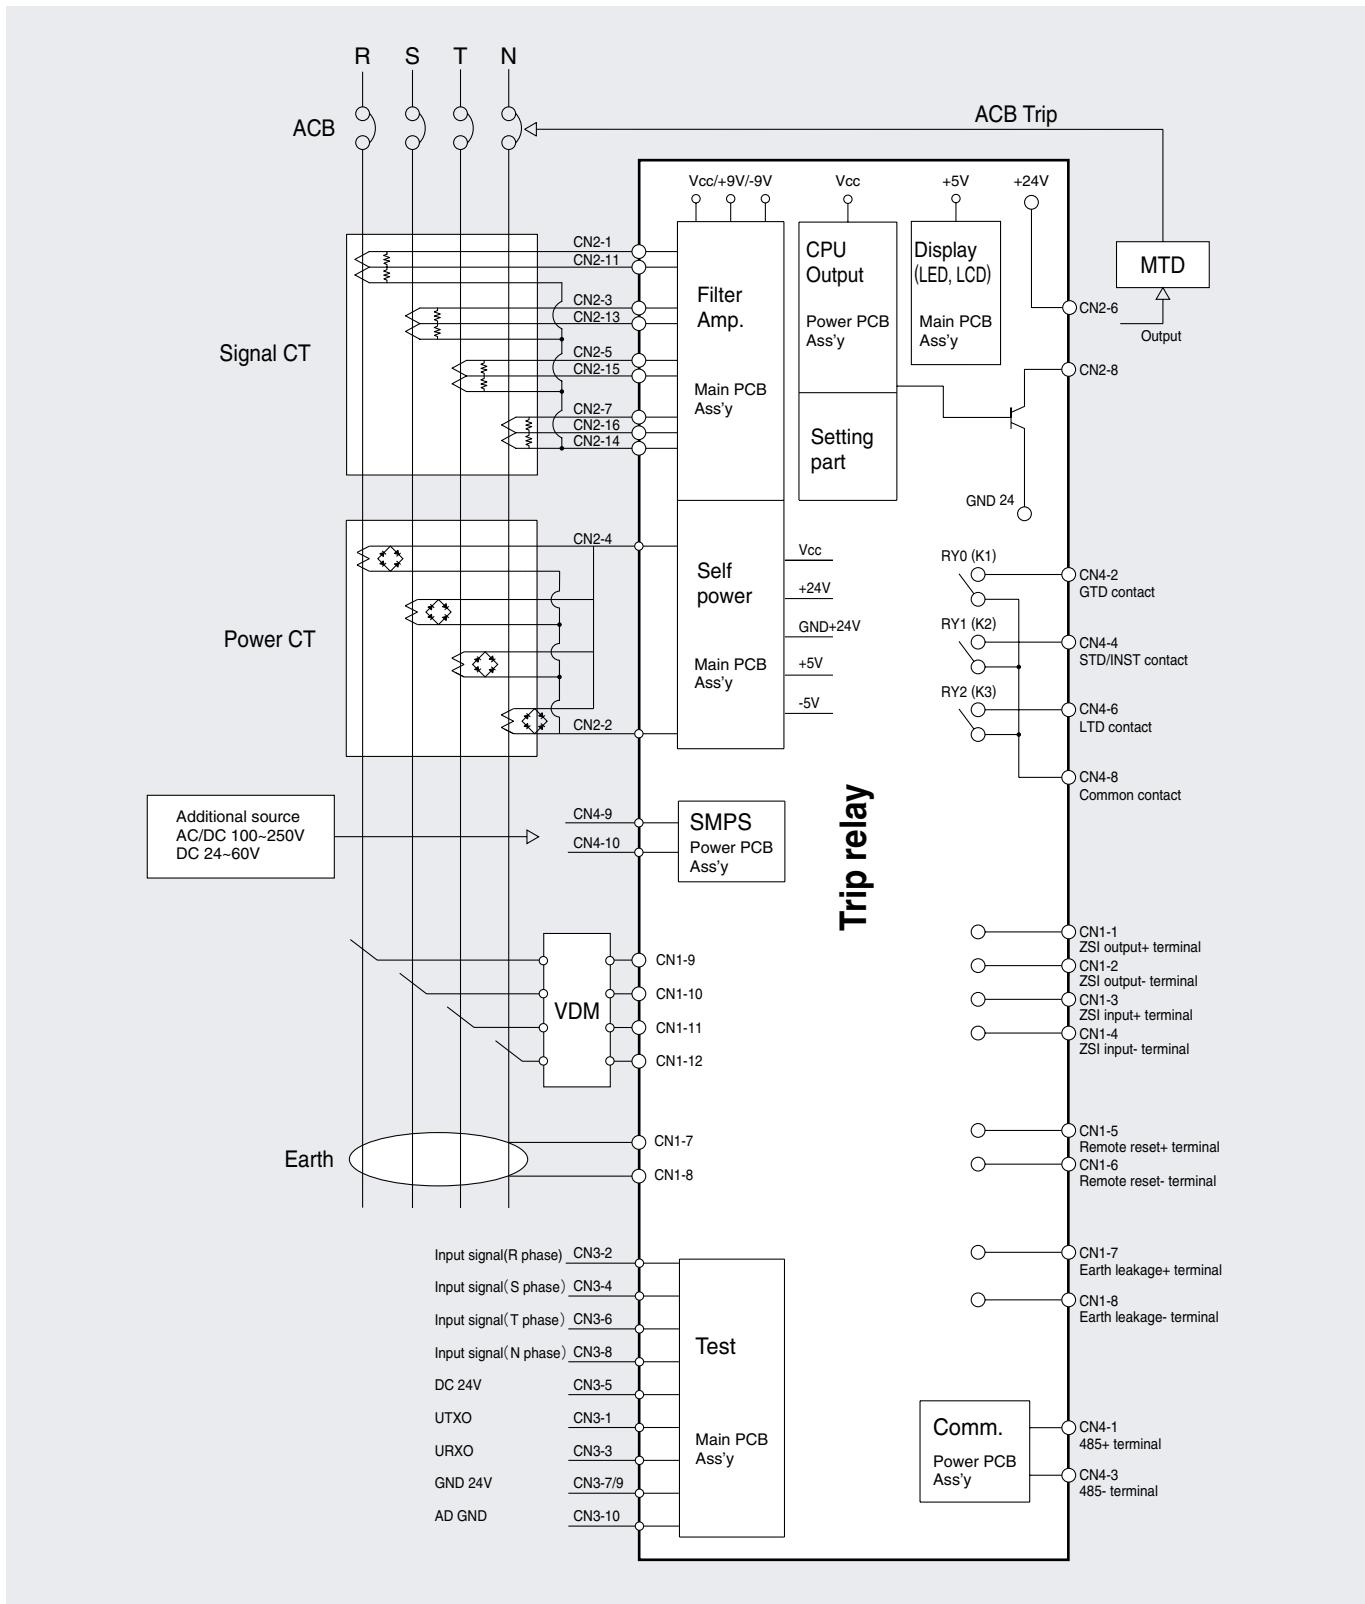

Accessories

Susol • Metasol



Mounting	Accessories	AH		AS		AN		Remark	Page
		Standard	Option	Standard	Option	Standard	Option		
Internal	SHT1 Shunt Coil	●		●		●		*	54
	SHT2 Double Shunt Coil		○		○		○	*	55
	CC Closing Coil	●		●		●		*	56
	M Motor	●		●		●		*	57
	CS1 Charge Switch	●		●		●		*	57
	CS2 Charge Switch Communication		○		○		○	*	57
	UVT Under Voltage Trip Device		○		○		○	*	58
	AL Trip Alarm Contact		○		○		○	*	59
	MRB Manual Reset Button		○		○		○	*	59
	RES Remote Reset Switch		○		○		○	*	60
	RCS Ready to Close Switch		○		○		○	*	60
	C Counter	●			○		○	*	67
	AX Auxiliary Switch		○		○		○	*	61
	TM Temperature Alarm		○		○		○	*	78
External	K1 Key Lock		○		○		○	*	62
	K2 Key Interlock Set		○		○		○	*	62
	K3 Double Key Lock		○		○		○	*	63
	B On/Off Button lock		○		○		○	*	63
	LH Lifting Hook		○		○		○		64
	CTD Condenser Trip Device		○		○		○		64
	ATS Automatic Transfer Switch Controller		○		○		○		65
	DC Dust Cover		○		○		○		67
	DF Door Frame		○		○		○		71
	OT OCR Tester		○		○		○		66
	J Manual Connector		○	●		●		*	
	A Automatic Connector	●			○		○	*	

* Separate purchasing is not allowed. Each item should be purchased with the main body.



Mounting	Accessories	AH		AS		AN		Remark	Page
		Standard	Option	Standard	Option	Standard	Option		
Trip relay	N N type		○		○		○	*	28
	A A type		○		○		○	*	30
	P P type		○		○		○	*	32
	S S type		○					*	34
	VM Voltage Module		○		○		○	**	38
	ZCT ZCT for the earth leakage		○		○		○		
Cradle	SBC Shorting "b" Contact		○		○		○		73
	MI Mechanical Interlock		○		○		○		69
	ST Safety Shutter		○		○		○	*	70
	STL Safety Shutter Lock		○		○		○		70
	MIP Miss Insertion Prevent Device		○		○		○		76
	MOC Mechanical Operated Cell Switch		○		○		○		68
	CEL Cell Switch		○		○		○		72
	DI Door Interlock		○		○		○		69
	ZAS Zero Arc Space	●			○			*	73
	SC Safety Control Cover	●	●		●		●	***	74
	BSP Body Supporter		○		○		○	*	74
	RI Racking Interlock		○		○		○		75
	PL Pad Lock/ Position Lock	●		●		●		*	75
	IB Insulation Barrier	●			○		○	*	71
	UDC UVT Time Delay Controller		○		○		○		77
	ADP Compatible Adapter		○		○		○		49
Other	RPH Reverse Phase ACB		○		○		○		
	DUM Dummy ACB		○		○		○		
	VAD Various Connection Type		○		○		○		13
	RCO Remote I/O		○		○		○		79
	PC Profibus-DP comm. module		○		○		○		

* Separate purchasing is not allowed. Each item should be purchased with the main body.


** Voltage module should be purchased with P/S type trip relay.

*** It is available only when the control block is in the mode of auto-connection.

Accessories


Susol • Metasol

Shunt Coil [SHT1]

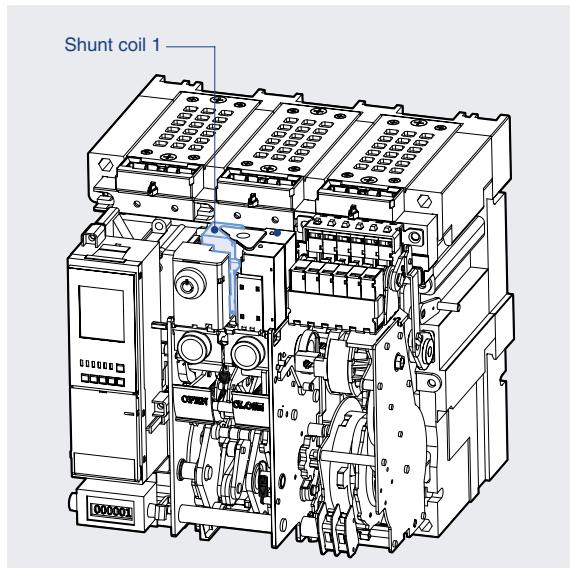

- SHT1 is a control device which trips a circuit breaker from remote place, when applying voltage continuously or instantaneously over 200ms to coil terminals(C1, C2).
- When UVT coil is installed, its location is changed.

1. Rated voltage and characteristics of Trip coil

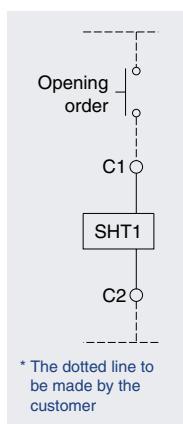

Wiring Diagram

Rated voltage [Vn]		Operating voltage range [V]	Power consumption (VA or W)		Trip time [ms]
DC [V]	AC [V]		Inrush	Steady-state	
24~30	-	0.6~1.1 Vn	200	5	Less than 40ms
48~60	48	0.6~1.1 Vn			
100~130	100~130	0.56~1.1 Vn			
200~250	200~250	0.56~1.1 Vn			
-	380~480	0.56~1.1 Vn			

Note) Operating voltage range is the min. rated voltage standard for each rated voltage(Vn).


2. Specification of the wire

- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30[V] or DC/AC 48~60[V] of rated voltage.

The maximum wire length


		Rated voltage [Vn]			
		DC 24~30 [V]		DC/AC 48 [V]	
Wire type		#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Double Shunt Coil [SHT2]

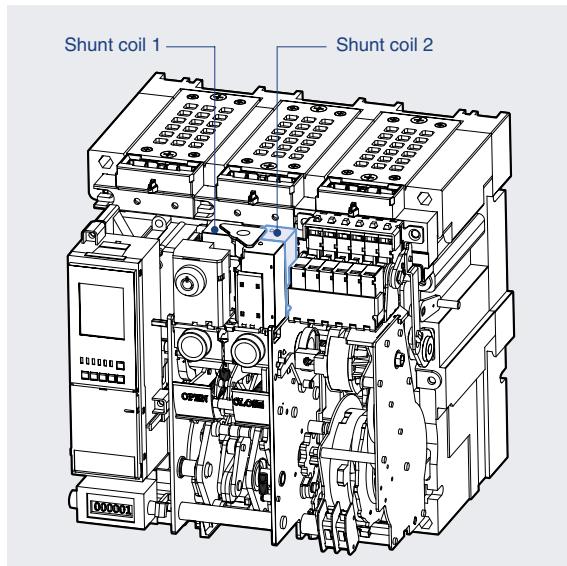

- SHT2 is a control device which trips a circuit breaker doubly from the outside. When SHT1 doesn't operate normally, it can trip a circuit breaker safely.
- Shunt coil 1: Install it at existing location.
- Shunt coil 2: Install it on the right side of the Shunt coil 1
- It is not available with UVT coil when installing double shunt coil.

1. Rated voltage and characteristics of Trip coil

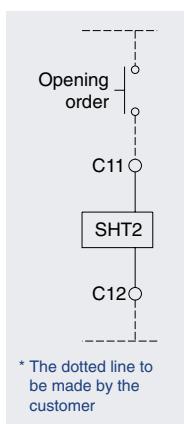

Wiring Diagram

Rated voltage [Vn]		Operating voltage range [V]	Power consumption (VA or W)		Trip time [ms]
DC [V]	AC [V]		Inrush	Steady-state	
24~30	-	0.6~1.1 Vn			
48~60	48	0.6~1.1 Vn			
100~130	100~130	0.56~1.1 Vn			
200~250	200~250	0.56~1.1 Vn			
-	380~480	0.56~1.1 Vn			

Note) Operating voltage range is the min. rated voltage standard for each rated voltage(Vn).

2. Specification of the wire

- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30[V] or DC/AC 48~60[V] of rated voltage.


The maximum wire length

Wire type	Rated voltage [Vn]			
	DC 24~30 [V]		DC/AC 48 [V]	
Operating voltage	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
100%	95.7m	61m	457.8m	287.7m
85%	62.5m	38.4m	291.7m	183.2m

Accessories


Susol • Metasol

Closing Coil [CC]

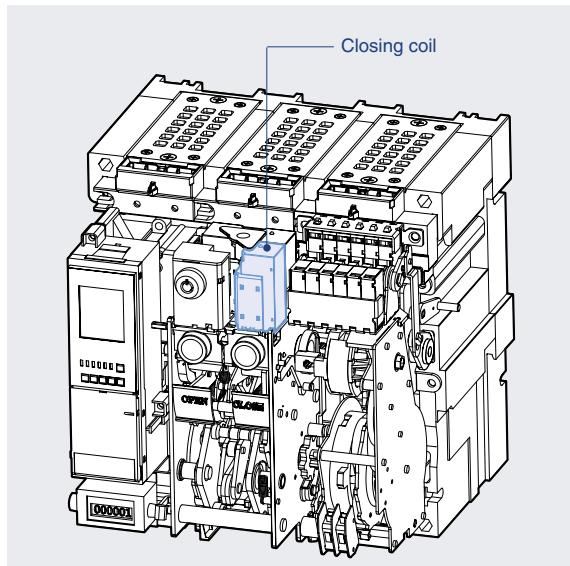

- It is a control device which closes a circuit breaker, when the voltage is applied continuously or instantaneously over 200ms to the coil terminals (A1, A2).

1. Rated voltage and characteristics of Closing coil

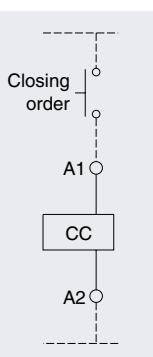

Wiring Diagram

Rated voltage [Vn]		Operating voltage range [V]	Power consumption (VA or W)		Shunt time [ms]
DC [V]	AC [V]		Inrush	Steady-state	
24~30	-	0.75~1.1 Vn	200	5	Less than 80ms
48~60	48	0.75~1.1 Vn			
100~130	100~130	0.75~1.1 Vn			
200~250	200~250	0.75~1.1 Vn			
-	380~480	0.75~1.1 Vn			

Note) Operating voltage range is the min. rated standard for each rated voltage (Vn).



2. Specification of the wire

- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30[V] or DC/AC 48~60[V] of rated voltage.

The maximum wire length

		Rated voltage [Vn]			
		DC 24~30 [V]		DC/AC 48 [V]	
Wire type		#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
Operating voltage	85%	62.5m	38.4m	291.7m	183.2m

Motor [M]

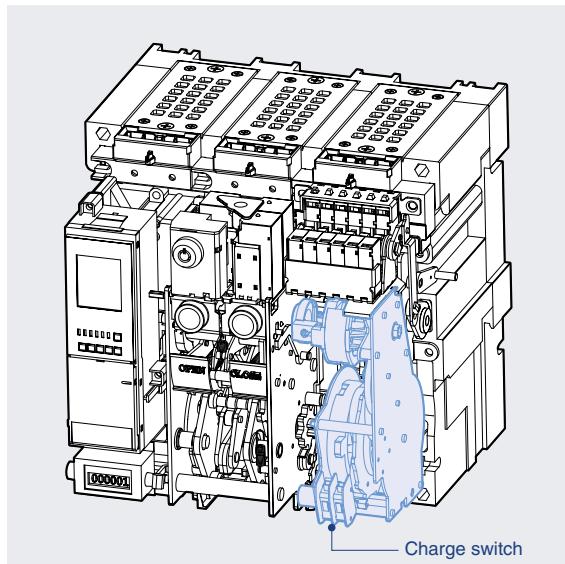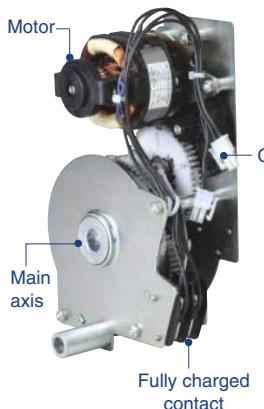

- Charge the closing spring of a circuit breaker by the external power source. Without the external power source, charge manually.
- Operating voltage range(IEC 60947) 85%~110%Vn

Input voltage(V)	DC 24~30V	AC/DC 48~60V	AC/DC 100~130V	AC/DC 200~250V	AC 380V	AC 440~480V
Load current(max.)	5A	3A	1A	0.5A	0.3A	0.3A
Starting current(Max.)	5 times of load current					
Load rpm(Motor)	15000 ~ 19000 rpm					
Charge time	Less than 5sec.					
Dielectric strength	2kV/min					
Using temperature range	-20° ~ 60°					
Using humidity range	Max. RH 80% (No dew condensation)					
Endurance	15,000 cycle (Load connection, 2 times/min)					
Charge switch	10A at 250VAC					

Charge Switch [CS1]


Charge Switch Communication [CS2]

- It is a built-in contact which sends the signal to the outside, when motor charging is completed. (2a)
- It has a “1a” contact for communication and the other “1a” contact for complete charging.
- When using an extra communication module (Remote I/O), the state of contacts can be displayed through the network.
- 10A at 250VAC

Accessories

Susol · Metasol

Under Voltage Trip device [UVT]

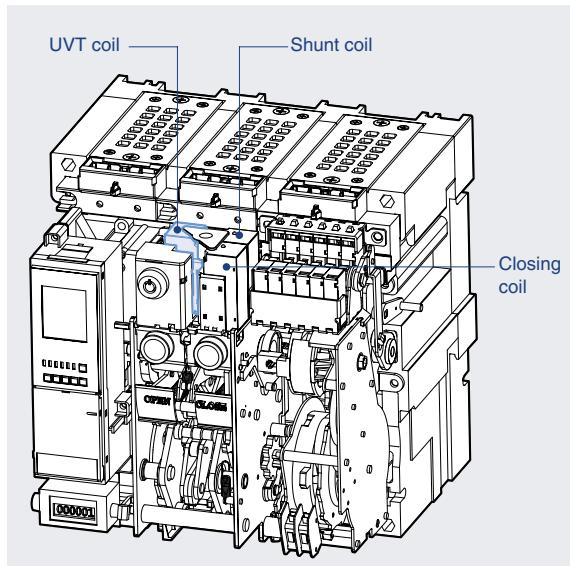

- If the voltage of the main or the control power is under voltage, UVT which is installed inside of the breaker breaks the circuit automatically. Please connect with UVT time-delay device in order to present the time-delay function because UVT is technically instantaneous type.
- The closing of a circuit breaker is impossible mechanically or electrically if control power not supplied to UVT. To close the circuit breaker, 65~85% of rated voltage should be applied to both terminals of UVT coil (D1, D2).
- When using UVT coil, the double trip coil can not be used, and the location of trip coil is changed.

1. Rated voltage and characteristics of UVT coil

Rated voltage [Vn]		Operating voltage range [V]		Power consumption (VA or W)		Trip time [ms]
DC [V]	AC [V]	Pick up	Drop out	Inrush	Steady-state	
24~30	-	0.65~0.85 Vn	0.4~0.6 Vn	200	5	Less than 50ms
48~60	48					
100~130	100~130					
200~250	200~250					
-	380~480					

Note) Operating voltage range is the min. rated standard for each rated voltage (Vn).

2. Specification of the wire


- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30[V] or DC/AC 48~60[V] of rated voltage.

The maximum wire length

		Rated voltage [Vn]			
		DC 24~30 [V]		DC/AC 48 [V]	
Wire type		#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
Operating voltage	100%	48.5m	30.5m	233.2m	143.9m
	85%	13.4m	8.8m	62.5m	39.3m

Note) In case of using UVT coil, the location of TC coil is changed.

Trip Alarm Contact [AL]

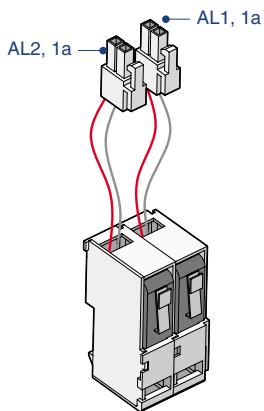


- When a circuit breaker is tripped by OCR which operates against the fault current (Over Current Relay), Trip Alarm switch provides the information regarding the trip of circuit breaker by sending the electrical signal from the mechanical indicator on main cover of main circuit breaker or internal auxiliary switch. (Installed at the inside of circuit breaker)
- When a circuit breaker tripped by fault current, a mechanical trip indicator (MRB, Manual Reset Button) pops out from the main cover and the switch (AL) which sends control signal electrically is conducted to output the information occurred from fault circuit breaker.
- MRB and AL can be operated only when tripping by OCR, but doesn't be operated by Off button and OFF operation of trip coil.
- To re-close a circuit breaker after a trip, press MRB to reset it for closing.
- 2pcs of electrical trip switch (AL1, AL2, 1a) are provided (Option)
- Trip alarm contact and MRB(Manual reset bottom) need to be purchased together.


1. Electrical characteristics of trip alarm contact

Rated voltage [V]	Non-inductive load (A)		Inductive load (A)		Inrush current
	Resistive load	Lamp load	Inductive load(A)	Motor load	
8V DC	11	3	6	3	MAX. 24A
30V DC	10	3	6	3	
125V DC	0.6	0.1	0.6	0.1	
250V DC	0.3	0.05	0.3	0.05	
250V AC	11	1.5	6	2	

Manual Reset Button [MRB]



- It is a function which resets a circuit breaker manually when a circuit breaker is tripped by OCR.
- When a circuit breaker tripped by fault current, a mechanical trip indicator (MRB, Manual Reset Button) pops out from the main cover and the switch(SDE) which sends control signal electrically is conducted to output the information occurred from fault circuit breaker.
- MRB can be operated only by OCR but not by OFF operation of circuit breaker. To re-close a circuit breaker after a trip, press MRB to reset it for closing.

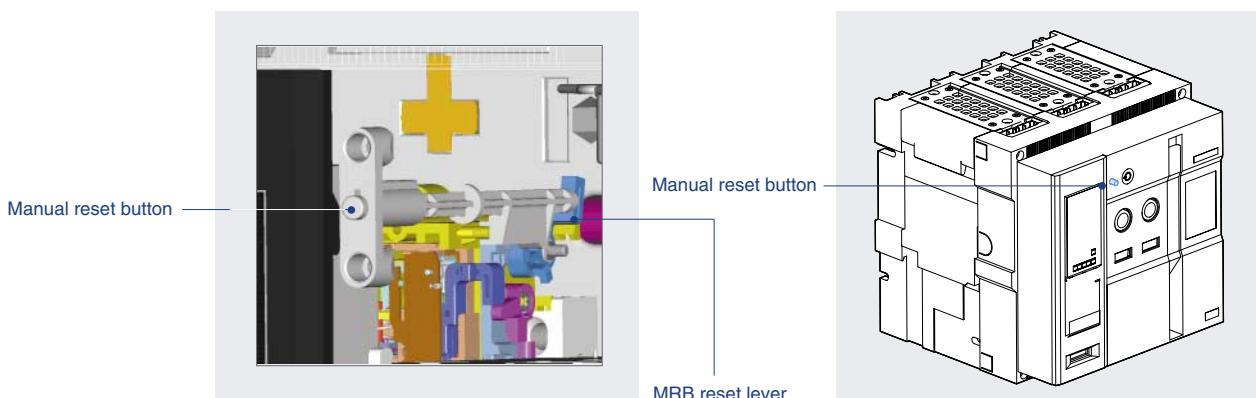

Note) The manual reset button is protruded in the event of trip.

Accessories


Susol • Metasol

Remote Reset Switch [RES]


- Following tripping, this function resets the "fault trip" alarm contacts(AL) and the mechanical indicator(MRB) and enables circuit breaker closing.
Push button switch : AC 125V 10A, AC 250V 6A, DC 110V 2.2A, DC 220V 1.1A Resistive load
- In case of auto reset type circuit breaker
Following tripping, a reset of Manual Reset Button(MRB) or Remote Reset Switch(RES) is no longer required to enable circuit breaker closing.
The mechanical indicator(MRB) and electrical indicator(AL) remain in fault position until the reset button is pressed.
- AL2 and RES are alternative.

1. Rated voltage and rated current of RES


Rated voltage	Operating current(Max.)		Operating time	Wire spec.
AC/DC 100~130V	AC	6A	Less 40ms	#14 AWG (2.08 mm ²)
	DC	5A		
AC/DC 200~250V	AC	3A		#16 AWG (1.31 mm ²)
	DC	2.5A		

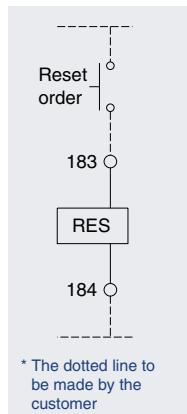

Wiring Diagram


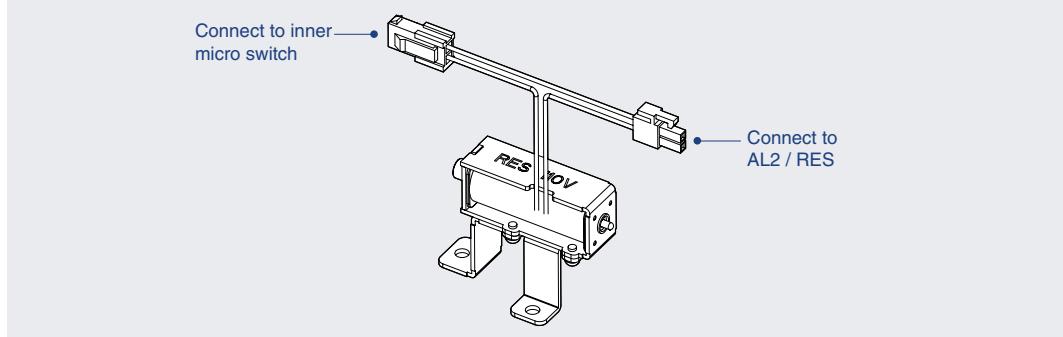


Ready to Close Switch [RCS]

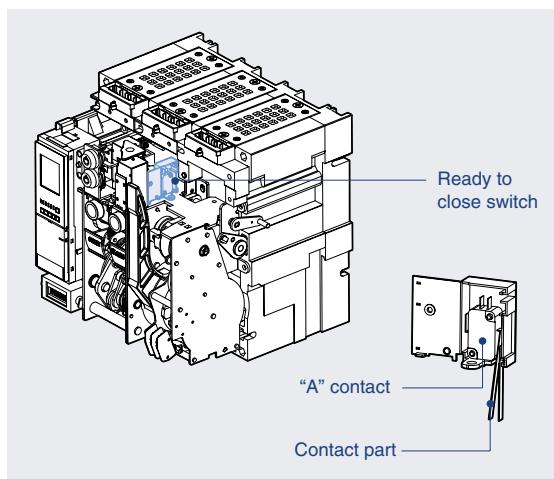

- It interlocks with mechanism of circuit breaker.
- It indicates the status that the circuit breaker is ready to do closing operation.
- When mechanism is in OFF position or in Charge, contact is output with "ON" and it indicates that mechanism can be closed.

Auxiliary switch [AX]

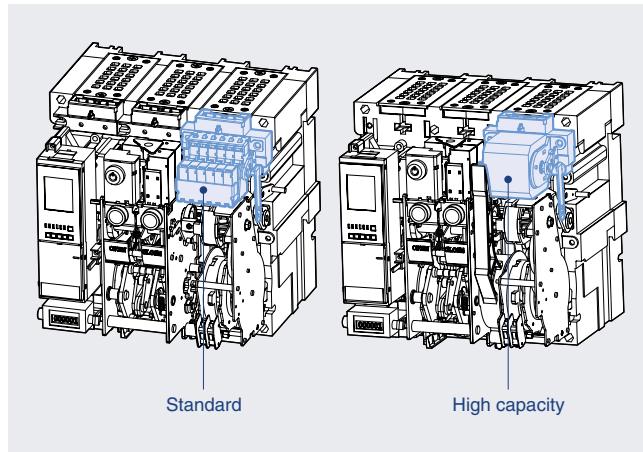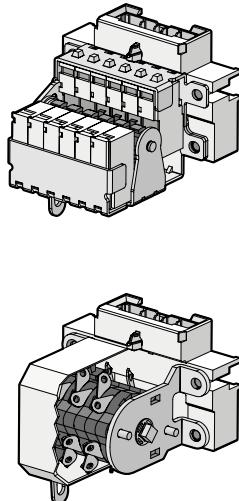

- It is a contact used to monitor ON/OFF position of ACB from remote place.

AUX. contact & charging types

AX	Standard OFF charge 3a3b
AC	Standard ON charge 3a3b
BX	Standard OFF charge 5a5b
BC	Standard ON charge 5a5b
HX	High capacity OFF charge 5a5b
HC	High capacity ON charge 5a5b
CC	Standard ON charge 6a6b
JC	High capacity ON Charge 6a6b

Standard classification


Standard		High capacity	
2000, 5000AF	4000, 6300AF	2000, 5000AF	4000, 6300AF

Classification		Standard		High capacity		Remark	
		Resistive load	Inductive load	Resistive load	Inductive load		
Contact capacity	AC	490V	5A	6A	5A	2.5A	
		250V	10A	6A	10A	10A	
		125V	10A	6A	10A	10A	
	DC	250V	0.3A	0.3A	3A	1.5A	
		125V	0.5A	0.6A	10A	6A	
		30V	10A	6A	10A	10A	
No. of Contact that can be used	AX	3a3b		-		Standard charging type	
	BX	5a5b		-			
	HX	-		5a5b			
	AC	3a3b		-			
	BC	5a5b		-		Rapid auto- reclosing charging type	
	CC	6a6b		-			
	HC	-		5a5b			
	JC	-		6a6b			

Accessories

Susol • Metasol

Key Lock [K1]

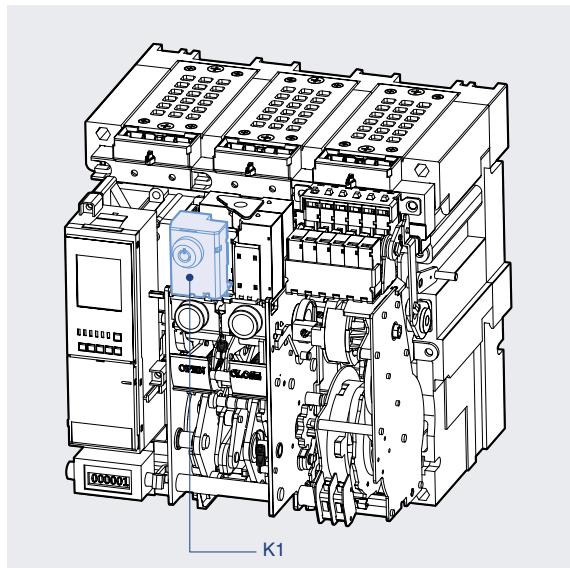


- It is a device for locking which prevents a certain circuit breaker from being operated by user's discretion when two or more circuit breakers are used at the same time.

- K1: Preventing mechanical closing

Key Interlock Set [K2]

Wiring

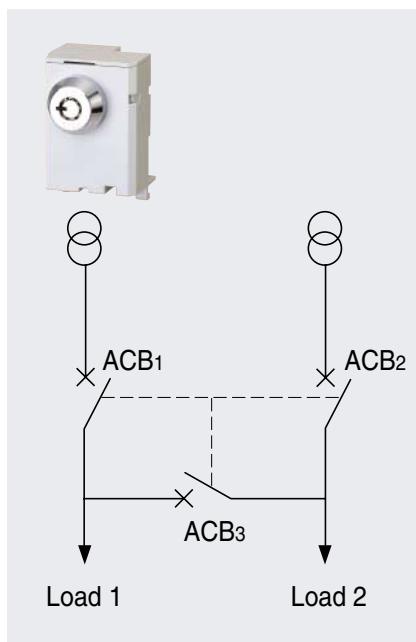


- 3 circuit breakers can be arranged for the continuous power supply to the load side and be interlocked mutually by using Key Lock embedded in each circuit breaker.

ACB-1	ACB-2	ACB-3	Status	
			LOAD1	LOAD2
●	●	●	OFF	OFF
●	○	○	ON	ON
○	●	○	ON	ON
○	○	●	ON	ON
●	●	○	OFF	OFF
●	○	●	OFF	ON
○	●	●	ON	OFF


○: Release ●: Lock

Double Key Lock [K3]

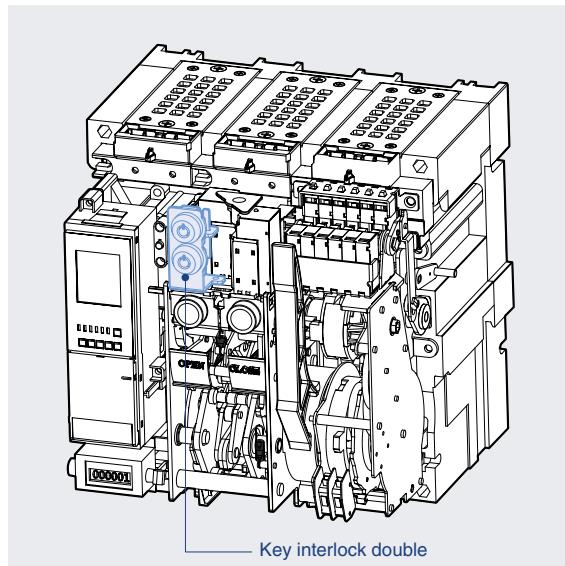

- When only two keys are released at the same time, circuit breakers operate. Handling method is same as K1.

ON/OFF Button Lock [B]

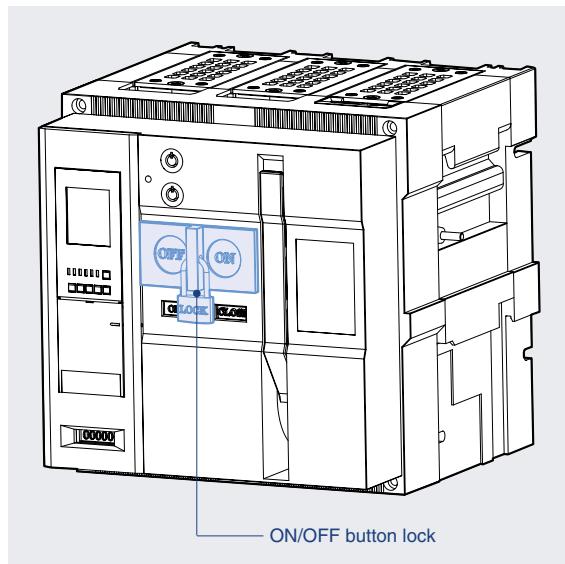


- It is to prevent manual operation of ACB's closing/tripping button due to user's wrong handling.
- It is not possible to handle ON/OFF operation under the "Button lock" status.

Note) Padlocks($\varnothing 5 \sim \varnothing 6$) are not supplied.

Accessories

Susol • Metasol

Lifting Hook [LH]

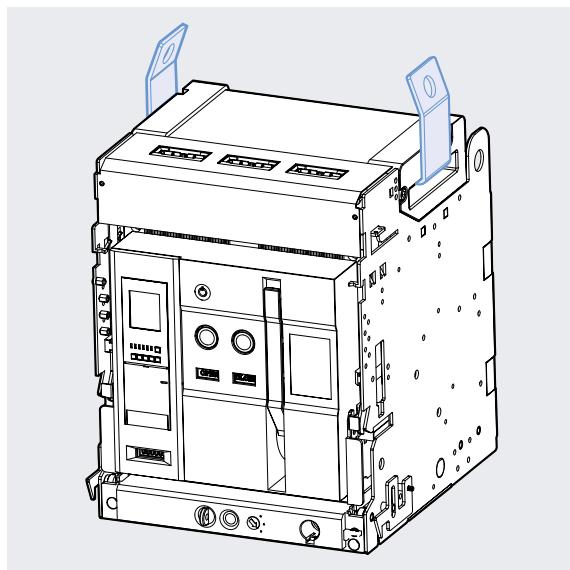

- It is a device to make an ACB easy to shift.
- Please hang it to both handles of the arc cover.




Condenser Trip Device [CTD]

- It gets a circuit breaker tripped electrically within regular time when control power supply is broken down and is used with Shunt coil, SHT. In case there is no DC power, It can be used as the rectifier which supplies DC power to a circuit breaker by rectifying AC power.


Ratings

Ratings	Specification	
Model	CTD-100	CTD-200
Rated input voltage (V)	AC 100/110	AC 200/220
Frequency (Hz)	50/60	50/60
Rated charge voltage (V)	140/155	280/310
Charging time	Within 5S	Within 5S
Trip possible time	Over 3 MIN	Over 2 MIN
Range of Input voltage (%)	85~110	85~111
Condenser capacity	400μF	160μF


External dimension

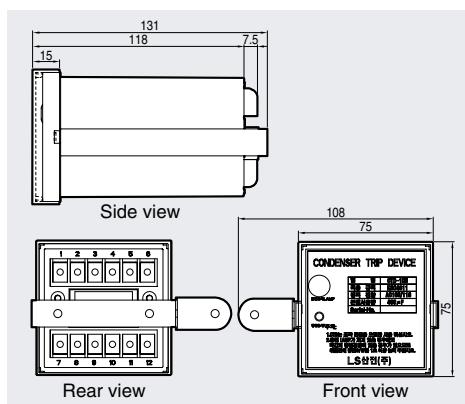

Circuit diagram

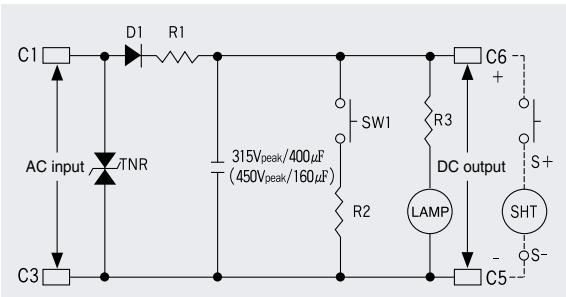

Automatic Transfer Switch Controller [ATS]

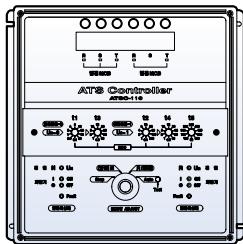

Ratings


Model type	ATSC-110	ATSC-220
Rated voltage	AC 110V	AC 220V
Voltage range	AC 93.5($\pm 5\%$) ~126.5V($\pm 5\%$)	AC 187($\pm 5\%$) ~ 253V($\pm 5\%$)
Frequency		50Hz/60Hz
Power consumption (apparent power)		15.4W
4-location switch (stop, N, R, Auto)	■	■
Test function	■	■
Generator control function	■	■
N power source setting (phase-to-phase/ 3phases)	■	■
Time setting (T1~T6)	■	■
Fault function (OCR/Circuit breaker trouble)	■	■
Output contact (Auto, Load burden)	■	■
Communication function (RS-485)	-	-

- T₁: The delayed time from when UN (power supply of electric company) is tripped to when generator start-up signal contact is closed. (t₁: 0.2, 0.5, 1, 2, 4, 8, 15, 30, 40, 50secs)
- T₂: The delayed time from when UN is closed to when ACB₂ is tripped. (t₂: 0.2, 1, 2, 4, 8, 15, 30, 60, 120, 240secs)
- T₃: The delayed time from when ACB₁ is tripped to when ACB₂ is closed. (t₃: 0.5, 1, 2, 5, 10, 15, 20, 25, 30, 40secs)
- T₄: The delayed time from when ACB₂ is tripped to when ACB₁ is closed. (t₄: 0.5, 1, 2, 5, 10, 15, 20, 25, 30, 40secs)
- T₅: The delayed time when ACB₁ is closed to when generator start-up signal contact is opened. (t₅: 60, 120, 180, 240, 300, 360, 420, 480, 540, 600secs)
- Stop-mode: This mode is for compulsory trip of ACB₁(electric power company) or ACB₂ (power station) when UN (power supply of electric power company) or UR (power supply of power station) is available
*UN or UR should be kept in ON position
- N-mode: This mode is for compulsory closing of ACB₁ when UN is available.
* it does not matter to be ON or OFF position of UR and if converting to N-mode while using UR, generator start-up signal contact is opened.
- R-mode: This mode is for compulsory closing of ACB₂ during the use of UR regardless of that UN is available or not.
- Auto-mode: This mode is for transferring a circuit breaker automatically to available power supply of UN or UR. In short, it trips the circuit breaker where power supply is not available and it close the circuit breaker where power supply is available.

Accessories

Susol • Metasol

OCR Tester [OT]

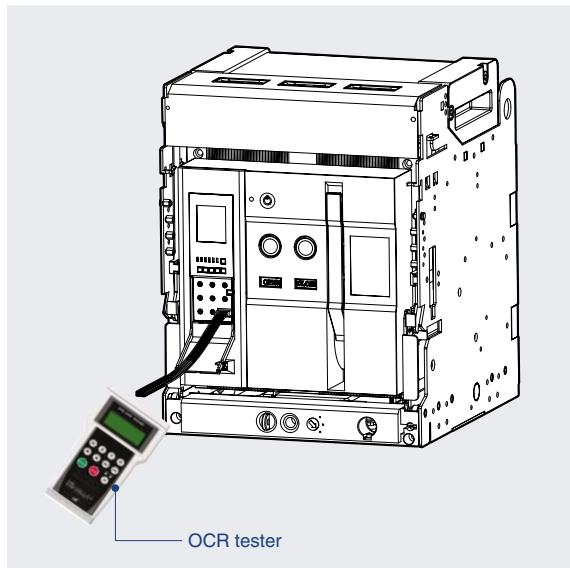



- It is a device which can test for the operation of Trip Relay under no power condition.
- 1. Maximum 17 times rated current can be inputted.
- 2. It is possible to enter the current value and phase on each of R/S/T/N
- 3. Frequency is adjustable.
- 4. It is available to test for long time delay/short time delay/instantaneous /ground fault.

Configuration




	R, S, T, N phase signal input
	Increase/Decrease signal input
	Signal setting/Delete
	Waveform generation/Stop
	Select frequency

Dust Cover [DC]

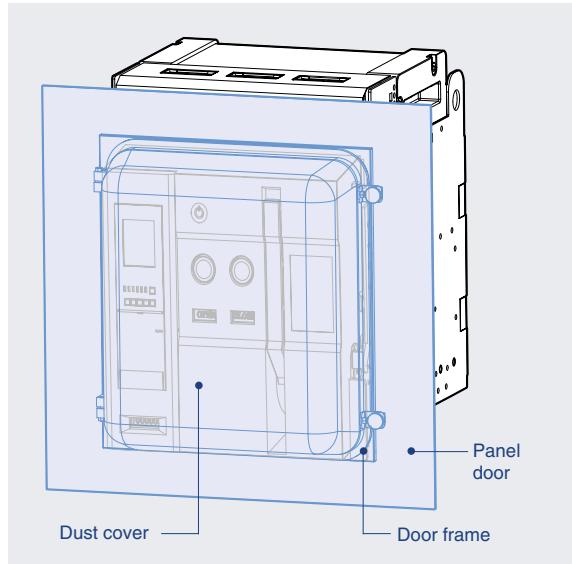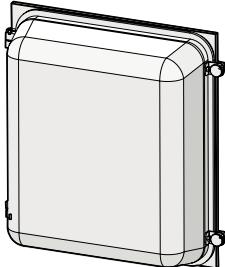

- Attach it to the door frame.
- It protects the product against the dust (IP5X) which may cause fault operation and enhances the sealing degree by being mounted to protrude type of panel.
- It is transparent so that the front side of ACB is visible and the Cover can be opened/closed even if ACB is drawn out to until TEST position.

Counter [C]

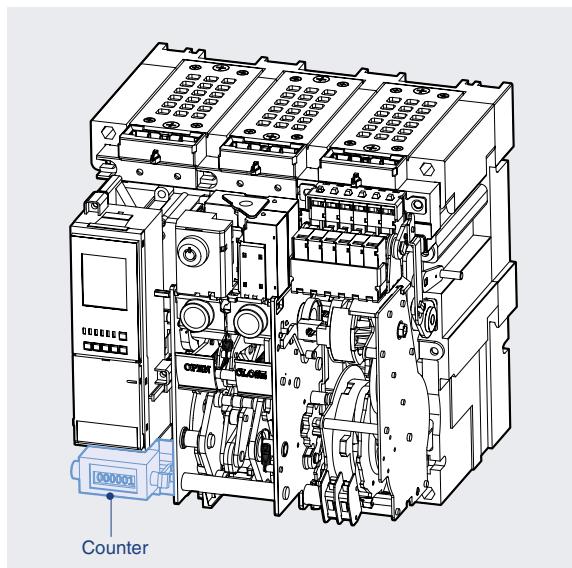


- It displays the total number of ON/OFF operation of ACB.

Accessories


Susol • Metasol

Mechanical Operated Cell Switch [MOC]

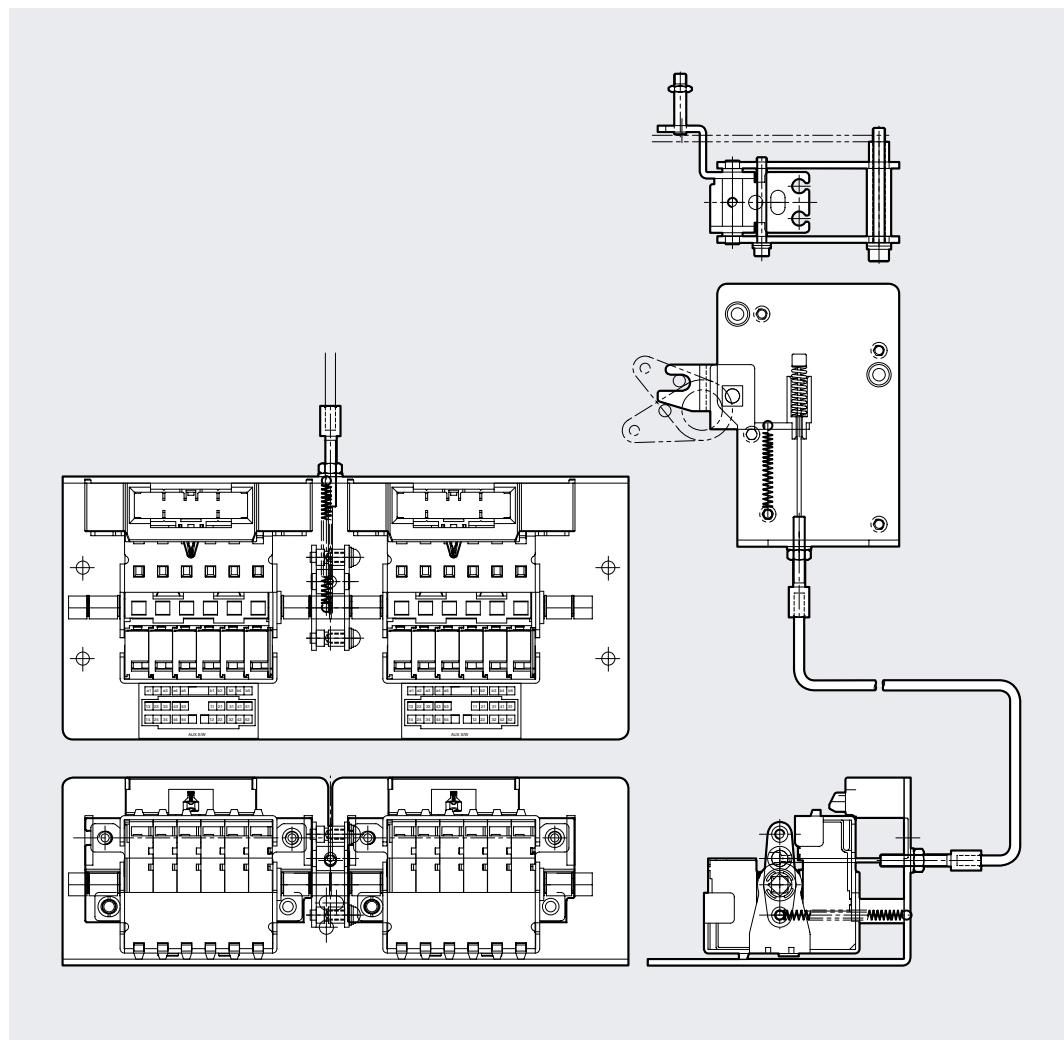


- It is the contact (10a10b) which displays the ON/OFF condition of ACB.
It mechanically operates only when the breaker is “CONNECTED” position.
A standard type and a high capacity type is available.
- The contact capacity is as same as the ratings of aux. contacts.
- When MOC link is installed to cradle, MOC can be equipped with the inside of panel.

Mechanical Interlock [MI]

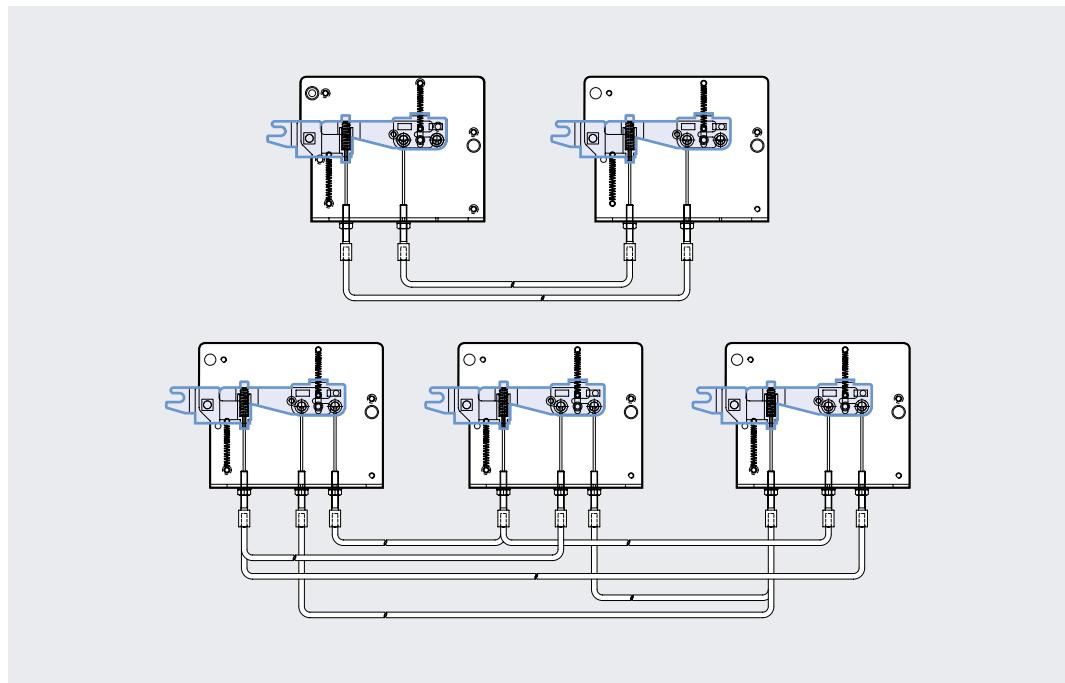

- It is used to interlock closing and trip between two or three breakers mechanically so as to prevent unintended operation at the same time.
- Wire type interlock can be applied upto 3 breakers

Door Interlock [DI]

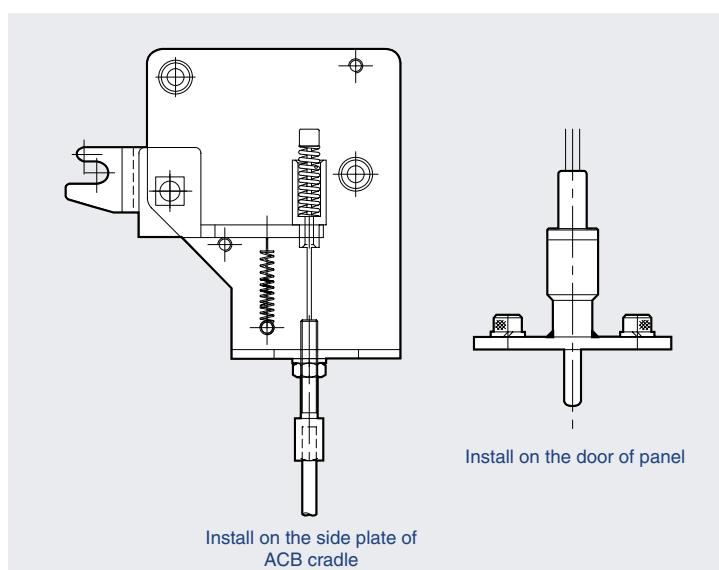


- It is a safety device which does not allow the panel door to open when a circuit breaker is in the "ON" position.

Accessories

Susol • Metasol

Safety Shutter [ST]

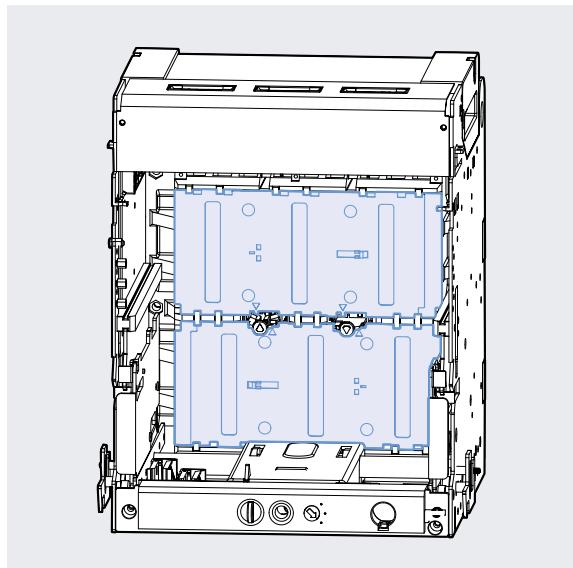


- It is the automatic safety device to protect the connectors of main circuit by cutting off dangerous contact from outside while the breaker is drawn out. When the ACB is drawn in, the shutter is automatically opened.

- There are 4 types of Safety Shutter and they are divided as shown in figure below.

The types of safety shutter plate

2000/5000AF, 3P	4000/6300AF, 3P
A diagram showing a safety shutter plate with three vertical slots and a central locking mechanism.	A diagram showing a safety shutter plate with four vertical slots and a central locking mechanism.
2000/5000AF, 4P	4000/6300AF, 4P
A diagram showing a safety shutter plate with four vertical slots and a central locking mechanism.	A diagram showing a safety shutter plate with eight vertical slots and a central locking mechanism.


Safety Shutter Lock [STL]

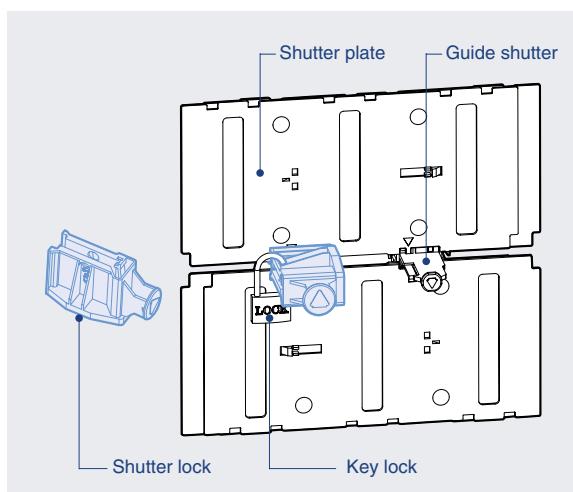

- It is a locking device which prevents safety shutter from being opened when it is closed.
→ If shutter lock is connected with guide shutter, the guide shutter can not be pushed structurally. Thus, it is not available to open the safety shutter.


Note) Padlocks(Ø5 ~ Ø6) are not supplied.

Door Frame [DF]

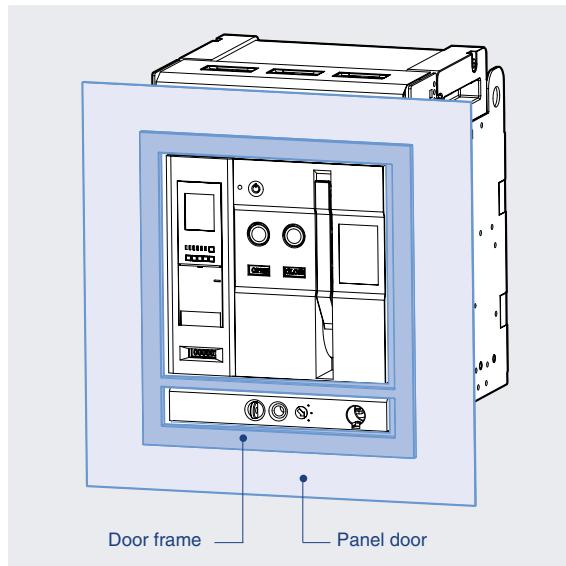

- When structuring the embedded type of ACB panel, it protects the protrude front of ACB and the cutting side of panel door by attaching it to the panel door.

Insulation Barrier [IB]


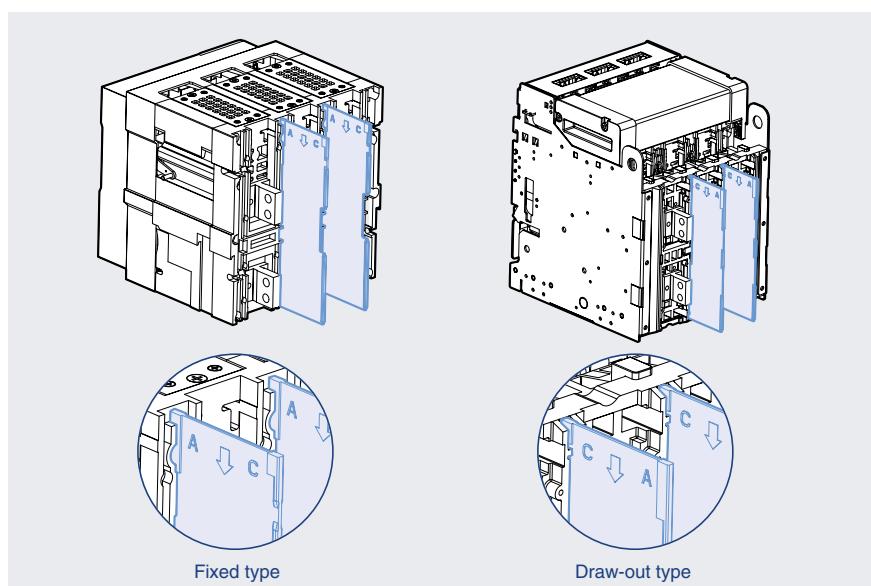


- Insulation barrier prevents the arc which may arise and result in short-circuit between phases in advance
- As "C" stands for "CRADLE", install the insulation barrier in the direction of "C" in case of Draw-out type.
- As "A" stands for "ACB main frame", install the insulation barrier in the direction of "A" in case of Fixed type.

Accessories

Susol · Metasol

Cell Switch [CEL]

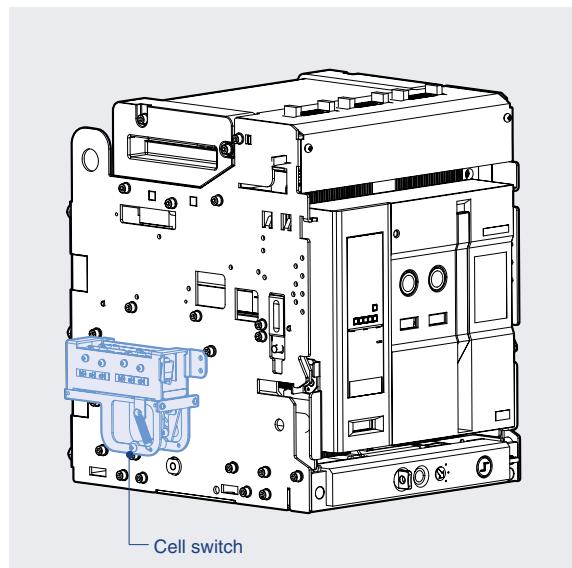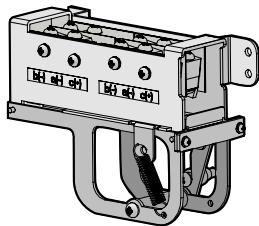

- It is a contact which indicates the present position of ACB.(CONNECTED, TEST, DISCONNECTED)



<Contact configuration>

4C: 1Disconnected +1Test +2Connected
8C: 2Disconnected +2Test +4Connected

* Contact configuration can be changeable if necessary.

ACB position		DISCONNECTED		CONNECTED
Draw-in and draw-out position		DISCONNECTED	TEST	CONNECTED
Contact operation	CL-C (Connected)	OFF		ON
	CL-T (Test)	OFF	ON	
	CL-D (Disconnected)	ON	OFF	
Contact capacity	Voltage(V)		Resistive load	Inductive load
	AC	460V	5	2.5
		250V	10	10
		125V		
	DC	250V	3	1.5
		125V	10	10
		30V	10	10
Contact number		4C		

Shorting “b” Contact [SBC]

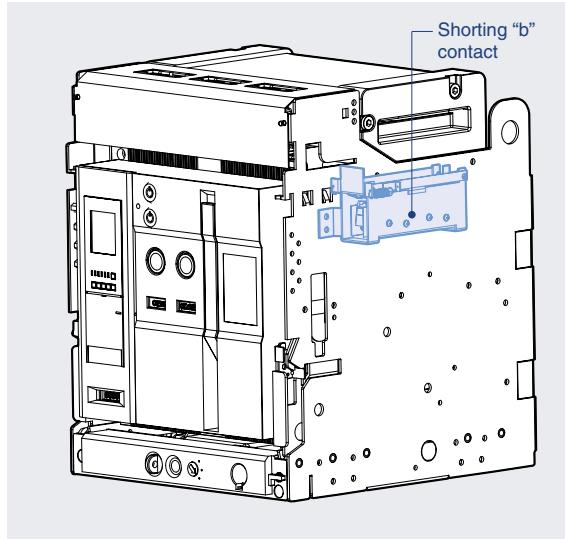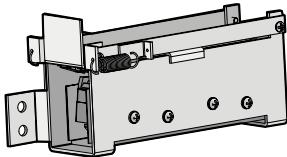


- It is the contact which keeps the external control circuit in normal by Aux. contact which disconnects “Axb” when ACB is moved from CONNECTED position to TEST position. The number of “shorting b-contact” corresponds to the number of “Axb” (4b)

Contact condition (Link between Axb and shorting “b” contact)

ACB location	ACB condition	CLOSE	OPEN
Shorting “b” contact	CONNECTED location	OFF	OFF
	TEST location	ON	ON
Auxiliary contact (Axb)	CONNECTED location	OFF	ON
	TEST location	OFF	ON

Zero Arc Space [ZAS]

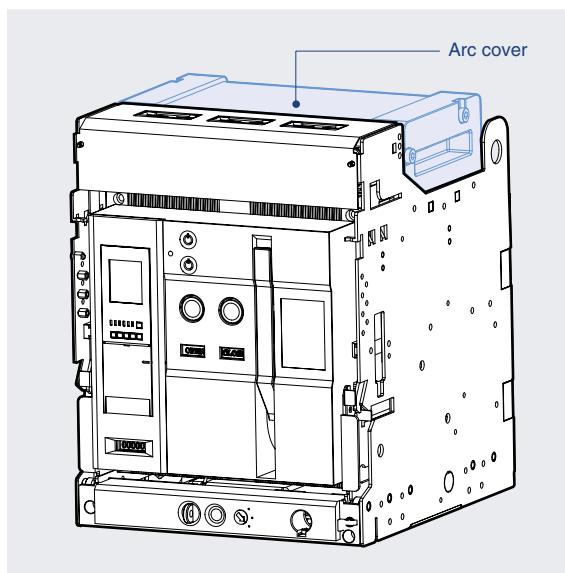

- Arc which may arise while breaking fault current is extinguished first by Arc chute in main body of circuit breaker and then completely extinguished by Arc cover.
By preventing arc from exposing to the outside, it protects itself from all kinds of accidents.



- It is categorized into 8 types by ratings and poles.

Ampere frame	Cover length (mm)
2000AF 3P	281.4
2000AF 4P	366.4
4000AF 3P	359.4
4000AF 4P	474.4
5000AF 3P	576.4
5000AF 4P	746.4
6300AF 3P	732.4
6300AF 4P	962.4

Accessories

Susol • Metasol

Safety Control Cover [SC]

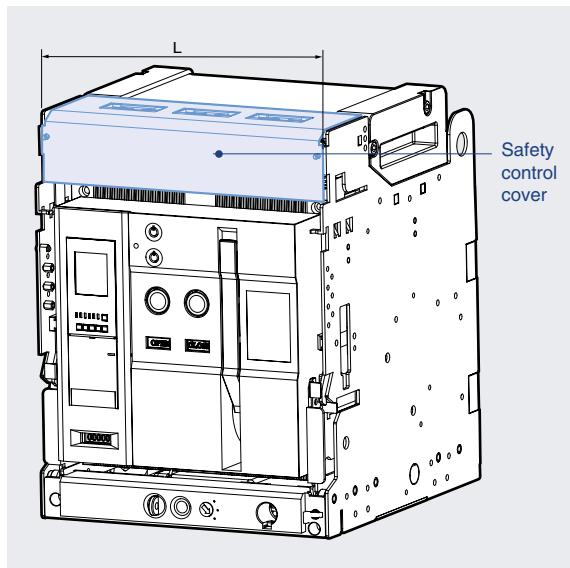


- It protects control terminals which exposes to the outside, and prevents the damages resulted from foreign substances.

- It is categorized into 8 types by ratings and poles.

Ampere frame	Cover length (mm)
2000AF 3P	334
2000AF 4P	419
4000AF 3P	412
4000AF 4P	527
5000AF 3P	629
5000AF 4P	799
6300AF 3P	785
6300AF 4P	1015


- It is available only when the control block is in the mode of auto-connection.

Body Supporter [BSP]

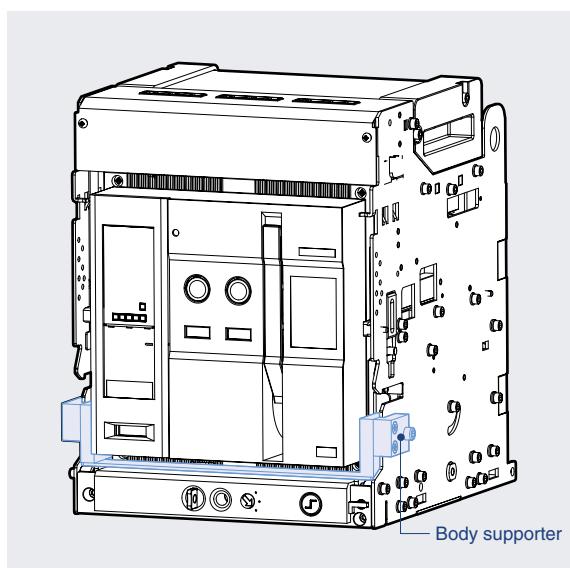


- It interlocks the main body of circuit breaker and cradle mechanically to fix the former in connected position. Therefore, all draw-in/outs are not available.

Racking Interlock [RI]

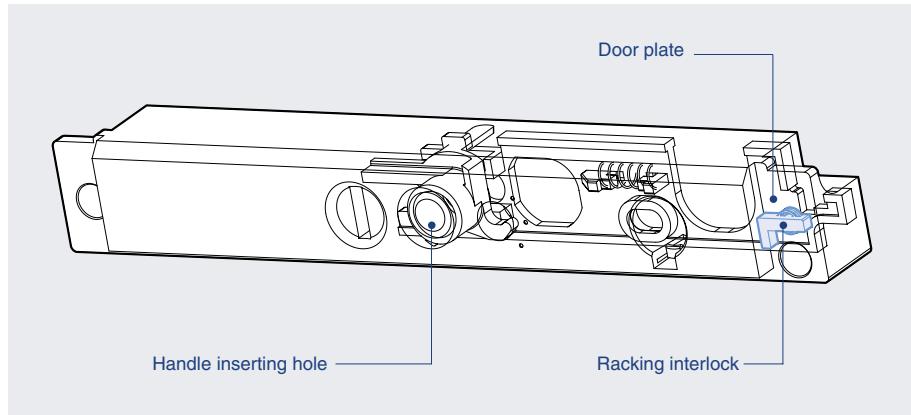

- When panel door is opened, Draw in/out handle doesn't be inserted. Thus, panel handle can be inserted only when panel door is closed.

Pad Lock / Position Lock [PL]

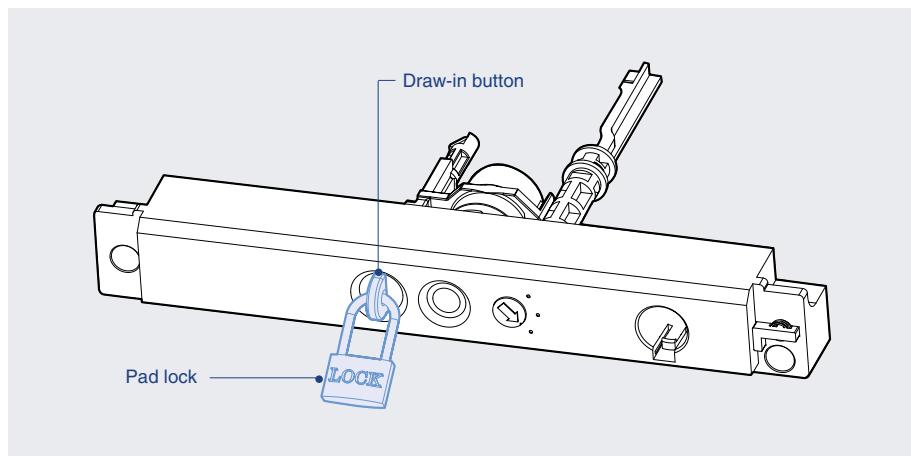


ACB is subject to restriction regarding moving in connected, test, disconnected when drawing in or out. If main body of ACB is placed in 3 positions, it is locked and stopped when drawing in or out.

- As shown in the figure, if draw-in/out button pops out, it means locking is operating.
- To continue Draw-in/out operation, release lock by pushing Draw-in/out button
- In case it is locked as shown in the figure above, main body of ACB can not be drawn in or out into the cradle.
- For the lock device, user has to purchase it. ($\varnothing 5 \sim \varnothing 6$)

Accessories

Susol • Metasol



Miss Insertion Prevent Device [MIP]

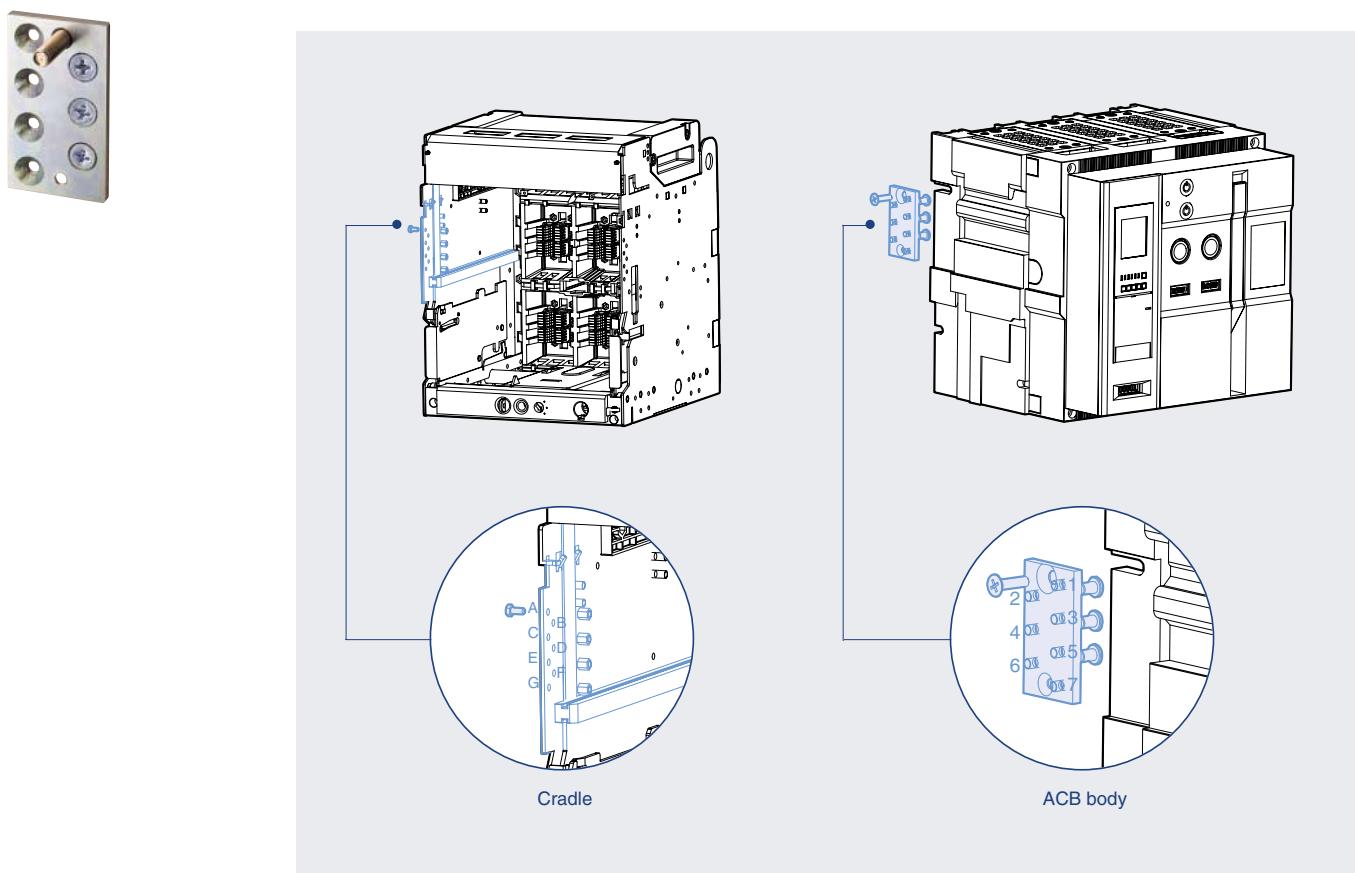

- When the main body of ACB is inserted to the cradle, if the ratings of ACB does not match with cradle, it mechanically prevents ACB from being inserted into cradle of ACB.
- The installation method is variable according to ratings.

Cradle	ACB	Cradle	ACB	Cradle	ACB	Cradle	ACB
ABCD	567	ADEF	237	ABEG	346	BCEG	146
ABCE	467	ADEG	236	ABFG	345	BDEF	137
ABC	457	ADFG	235	ACDE	267	BDEG	136
ABCG	456	AEFG	234	ACDF	257	BDFG	135
ABDE	367	BCDE	167	ACDG	256	CDEF	127
ABDF	357	BCDF	157	ACEF	247	CDEG	126
ABDG	356	BCDG	156	ACEG	246	CEFG	124
ABEF	347	BCEF	147	ACFG	245	DEFG	123

UVT Time Delay Controller [UDC]

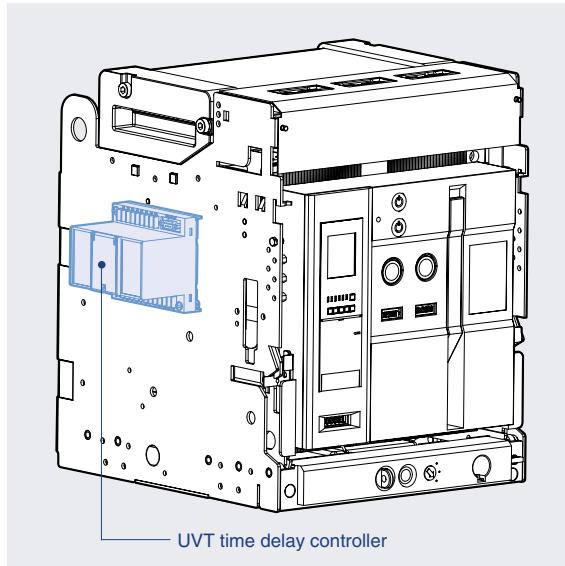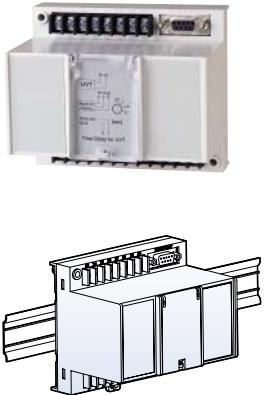


- UVT is a device which makes ACB tripped automatically to prevent the accident on load side due to under voltage or power breakdown. There are two types, Instantaneous type and time delay type.
- It can be installed on the rail or to the cradle.
- Instantaneous type: only available with UVT coil.
- Time delay type: available by connecting UVT coil and UVT time delay controller.
- Common use for the all types.

1. The rated voltage and characteristic of UVT time delay controller

Rated voltage [Vn]		Operating voltage range [V]		Power consumption (VA or W)		Trip time[s]
DC [V]	AC [V]	Pick up	Drop out	Inrush	Steady-state	
48~60	48	0.65~0.85 Vn	0.4~0.6 5Vn	200	5	0.5, 1, 1.5, 3
100~130	100~130					
200~250	200~250					
-	380~480					

Note) Operating voltage range is the min. rated standard for each rated voltage (Vn).

2. Wiring


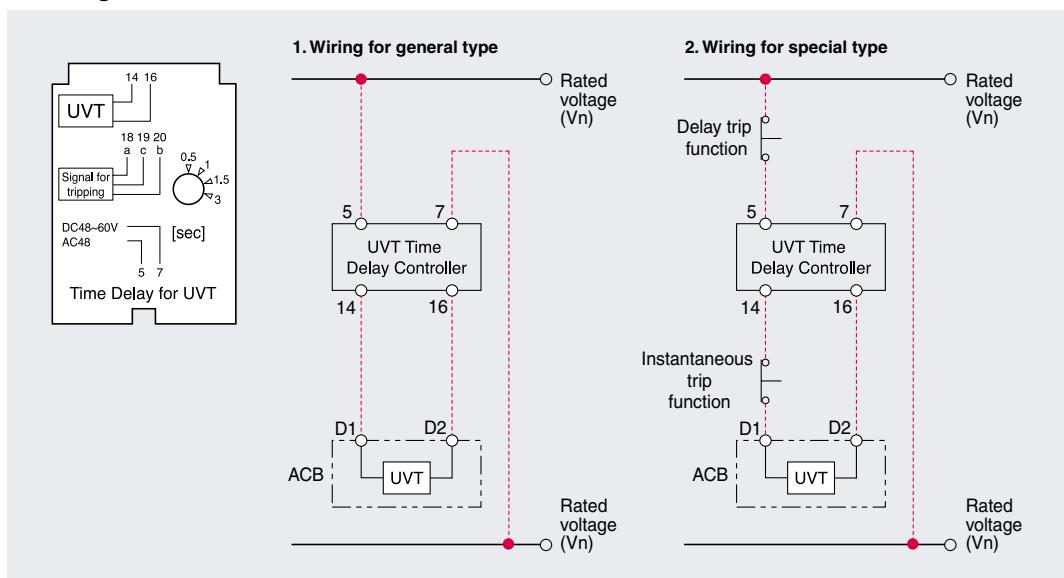


* The wiring presented with red color should be set by users.

Accessories

Susol • Metasol



Temperature Alarm [TM]

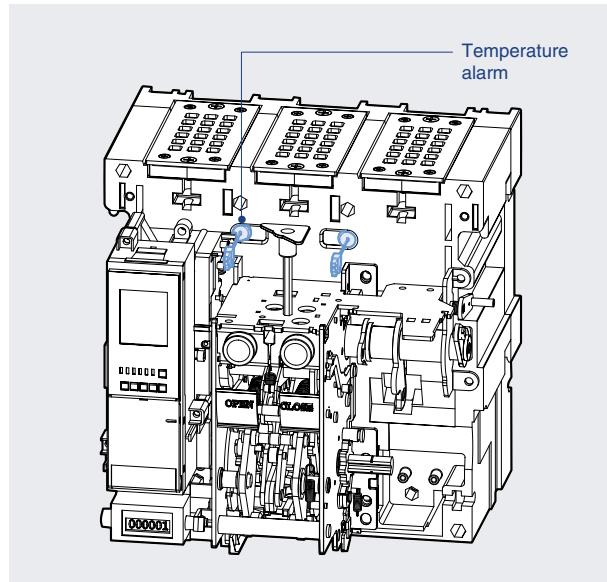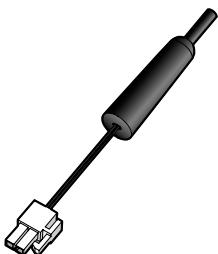

- Temperature Alarm Unit is a device to show the temperature through a sensor inside of ACB.
- The temperature sensor can be installed up to 4 and the output is connected to control terminal blocks.
- It displays the maximum temperature of them and transmits through a network.
- If the temperature is higher than a standard, an alarm can occur.
- Temperature alarm unit communicates with Modbus / RS-485 basically, Profibus-DP need to be purchased separately.
- Temperature alarm unit is installed on the cradle or the inside of panel.




Temperature alarm

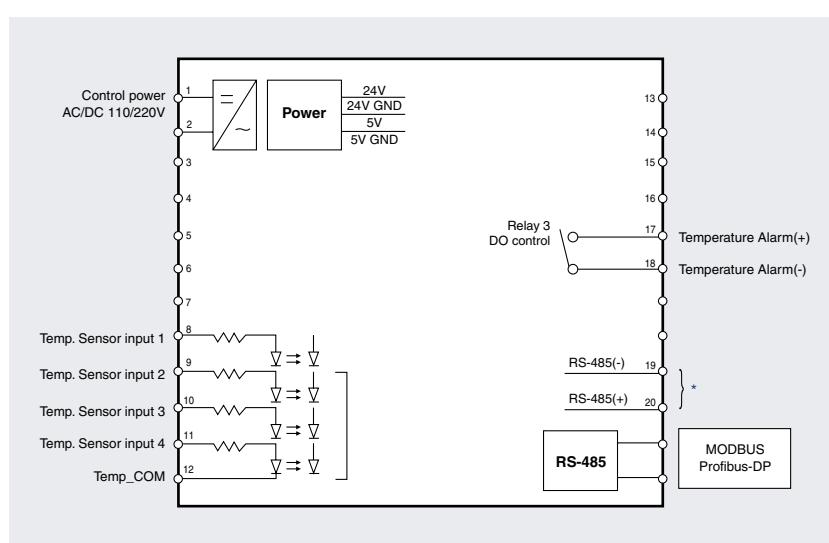
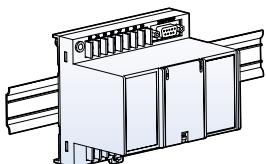


*In case of using Profibus-DP communication, it needs to communicate with ACB trip relay.

Temperature LED(°C): 10 ~150 °C,
Warning
(Indicates the maximum value)

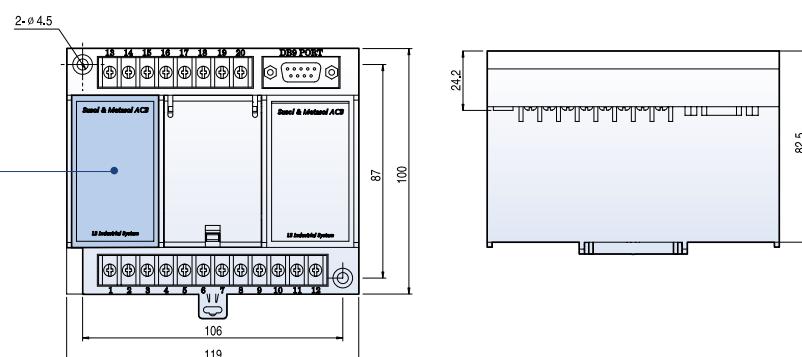


Remote I/O Unit [RCO]

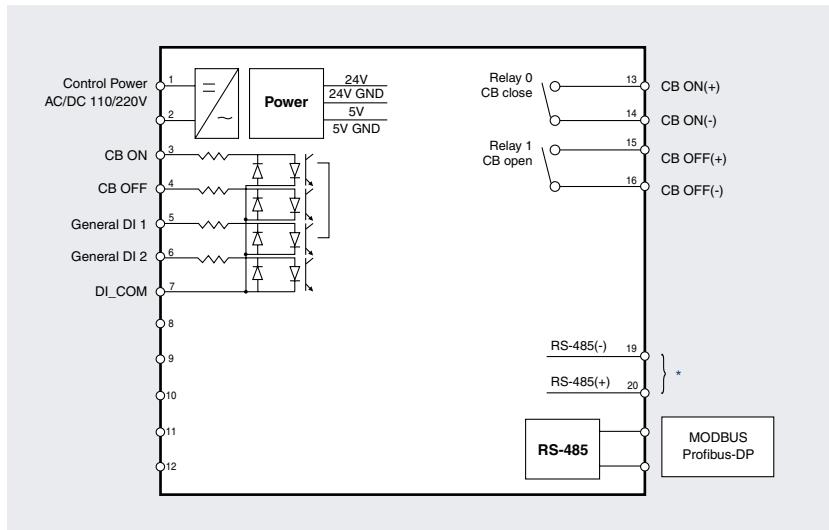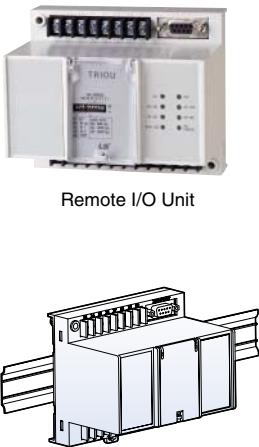

*In case of using Profibus-DP communication, it needs to communicate with ACB trip relay.

	Classification	Applied range	Remarks
CB control	Contact switching capacity	AC230V 16A / DC30V 16A	
	Max. switching capacity	3680VA, 480W	
Alarm	Contact switching capacity	AC230V 6A / DC25V 6A	Induction load (cos Ø=0.4, L/R=7ms)
	Max. switching capacity	1880VA, 150W	

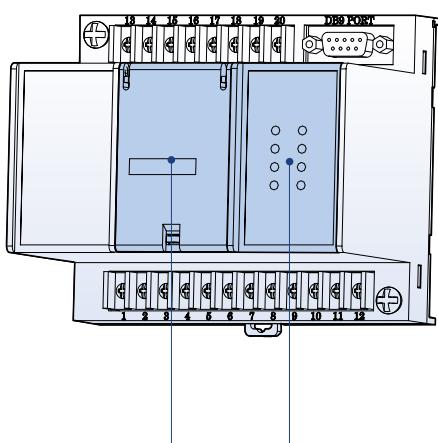

- Baud rate setting
- Comm. address setting
- Temperature setting


- Remote I/O unit has the I/O contact which can trip or close the ACB from the remote site by communication.
- For the General DO, the output of DI1 or DI2 is selectable.
- Remote I/O Unit communicates with Modbus / RS-485 communication basically, Profibus-DP need to be purchased separately.
- It supports SBO (Select Before Operation) function and guarantees the control reliability.
- Remote I/O Unit can be installed on the cradle of ACB or the inside of panel.

LED	Status
1	DI1
2	DI2
3	DO ON
4	DO OFF
5	CB ON
6	CB OFF
7	RUN LED
8	CB ERROR

Electrical diagram

Susol • Metasol

This diagram is based on “CONNECTED” position of a circuit breaker and Opening, Motor charging, Releasing of locking plate should be normal condition.

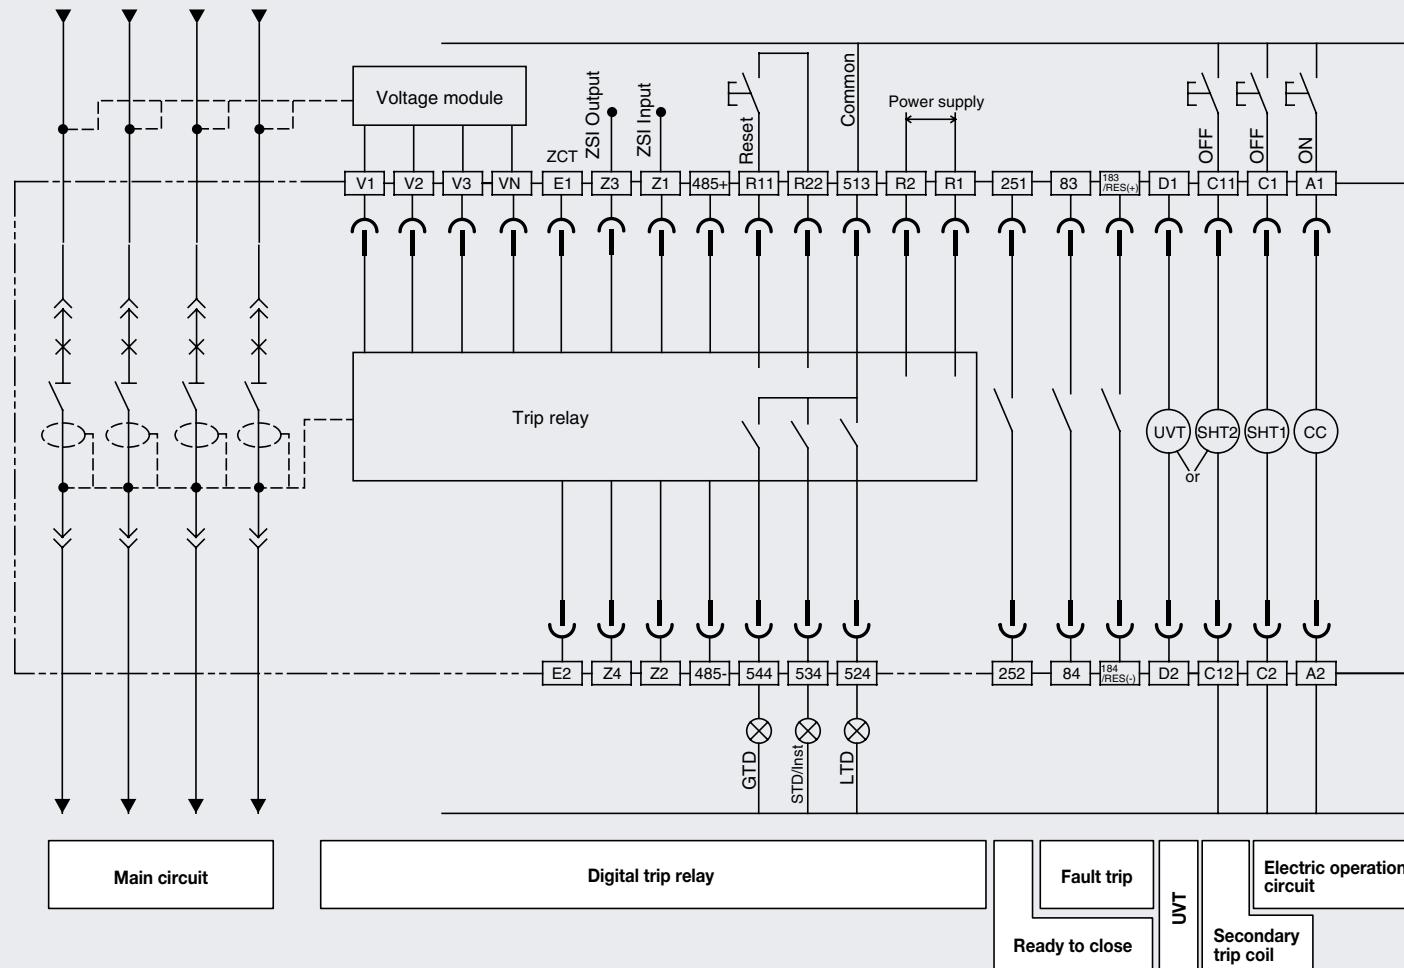


Terminal code description

13 14	~	63 64	Auxiliary switch “a”
11 12	~	61 62	Auxiliary switch “b”
413 414			Charged signal
423 424			Charged signal communication
U1 U2			Motor charging
A1 A2			Closing coil
C1 C2			Shunt trip
C11 C12			2nd shunt trip

D1 D2	Voltage input terminal of UVT
83 84	Alarm1 “a”
183 184	Alarm2 “a”
251 252	Ready to close switch
R1 R2	Control power
513 ~ 544	Alarm contact
R11 R22	Alarm reset (Trip cause LED, Alarm contact)
485+ 485-	RS-485 communication

- Note) 1. The diagram is shown with circuits de-energized, all devices open, connected and charged and relays in normal position
 2. Relay is normal condition and charging type is “OFF-Charging”
 3. The standard of auxiliary contact is 3a3b. The auxiliary switch in above diagram is composed of 5a5b. See 48 page for more detail on auxiliary switches.
 4. Option
 - Ready to close contact, Trip alarm contact, UVT coil, Fully charged contact, secondary trip coil
 - Cell switch, Temperature module, Voltage module, Remote close-open module, ZCT, ZSI
 5. Please consult us for the use of ZSI (Zone selective Interlocking).
 6. Refer to the page 33 for the connection of Trip relay and the page 43 for UVT.
 7. For connecting RS-485 verify if the polarity is correct

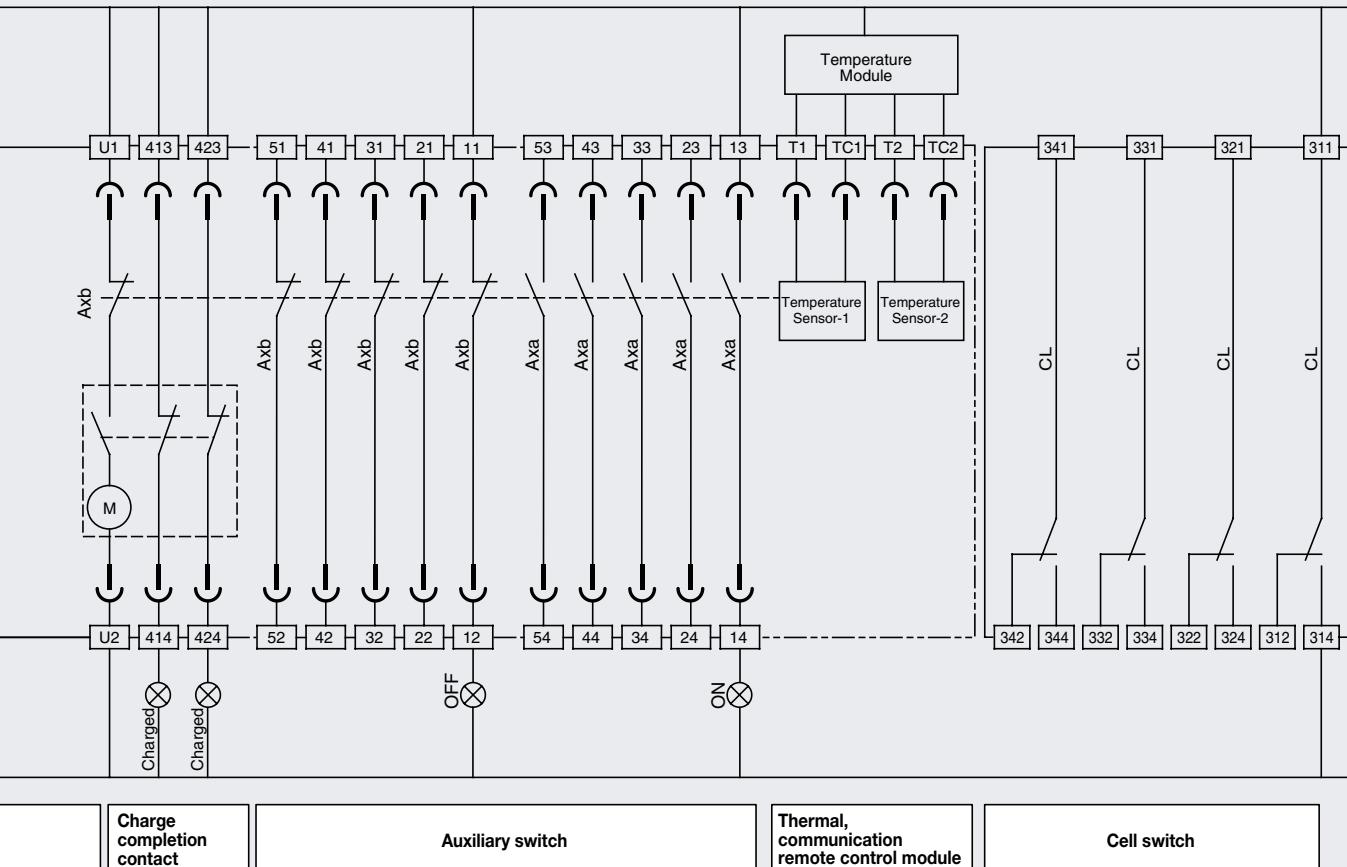

Accessory code description

Z1	Z2	ZSI input
Z3	Z4	ZSI output
E1	E2	ZCT
VN	~ V3	Voltage module
TC1	, TC2 ~ T1 , T2	Temperature module
311	~ 344	Position switch

Ax	Auxiliary switch
LTD	Long time delay trip indicator
STD/Inst	Short time delay/instantaneous
GTD	Ground fault trip indicator
CL	Cell switch
(M)	Motor
(CC)	Closing coil
(S1)	Shunt tripping device 1
(S2)	Shunt tripping device 2
(UVT)	UVT coil


—	Internal wiring
—	External wiring (by customer)
—	Connector of the control circuit terminal of drawout type
—	

Dimensions


Susol • Metasol

Fixed type 2000AF (630~1600A: AH/AN/AS-06~16D)


Front view

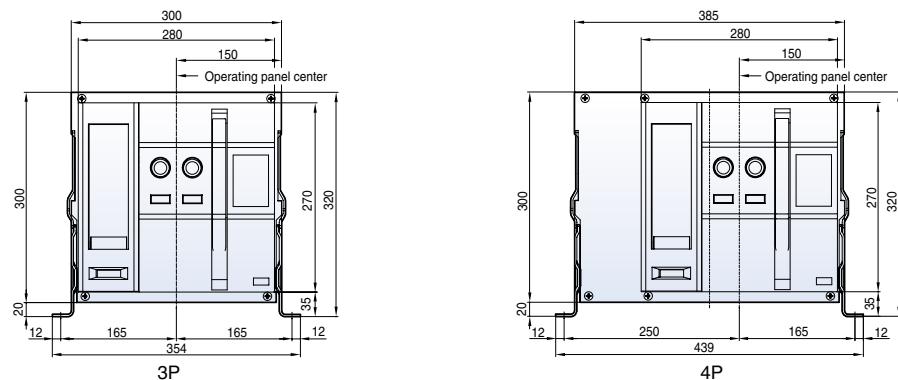


Vertical type

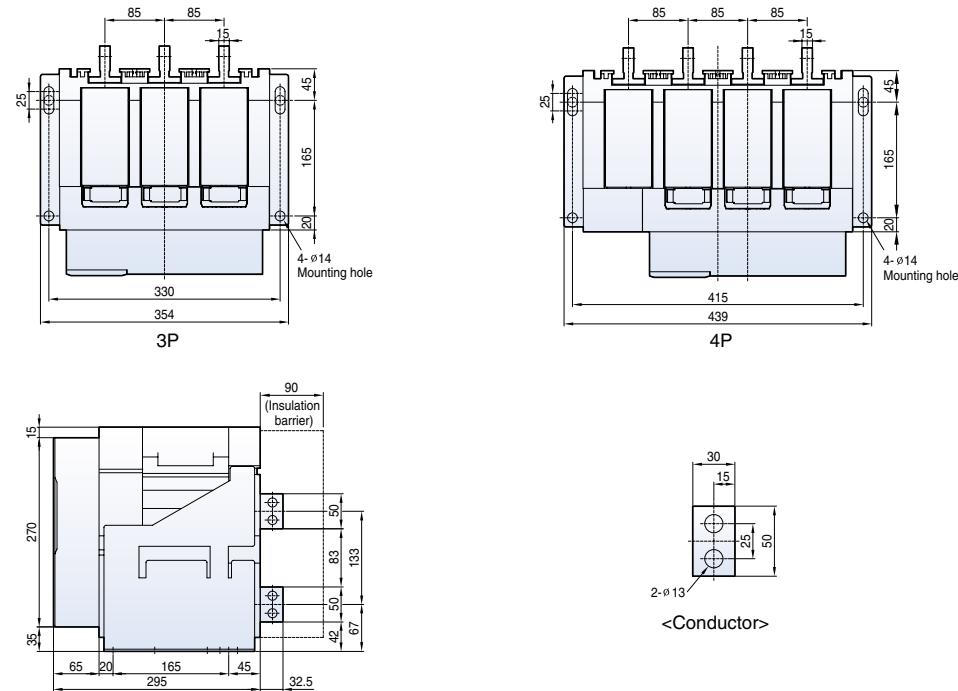


Door Frame: DF
(AH/AN/AS-D/E)

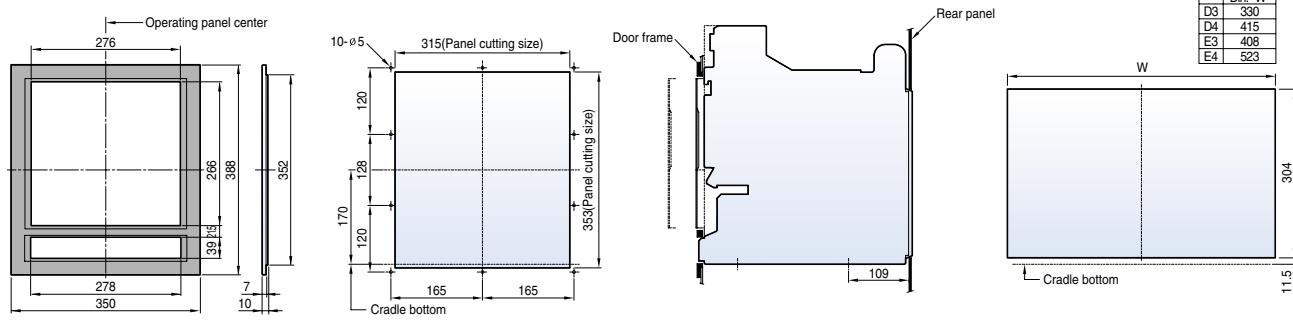

Horizontal type

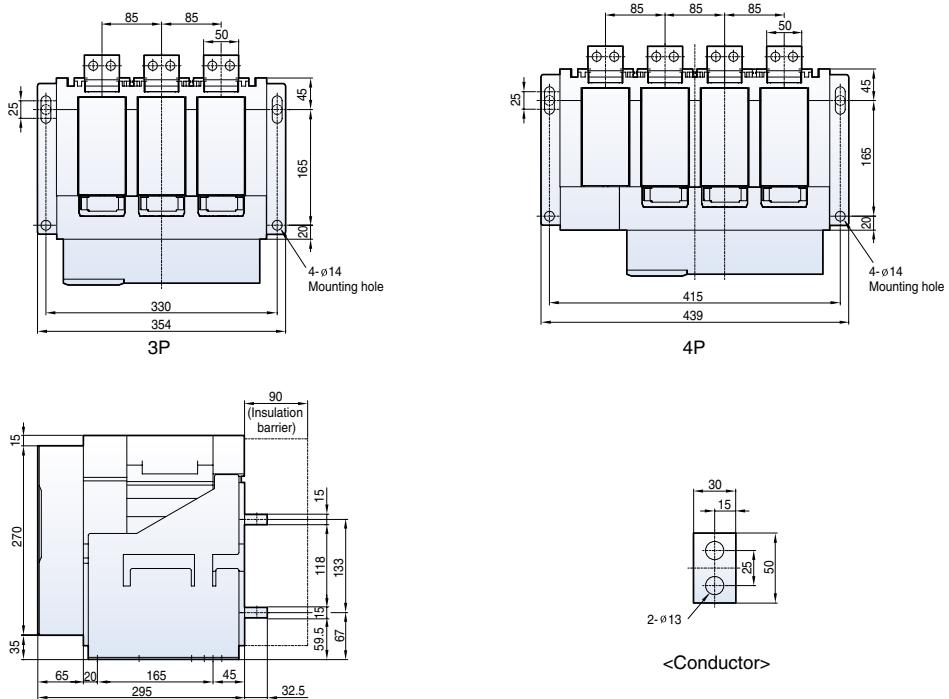

Front connection type

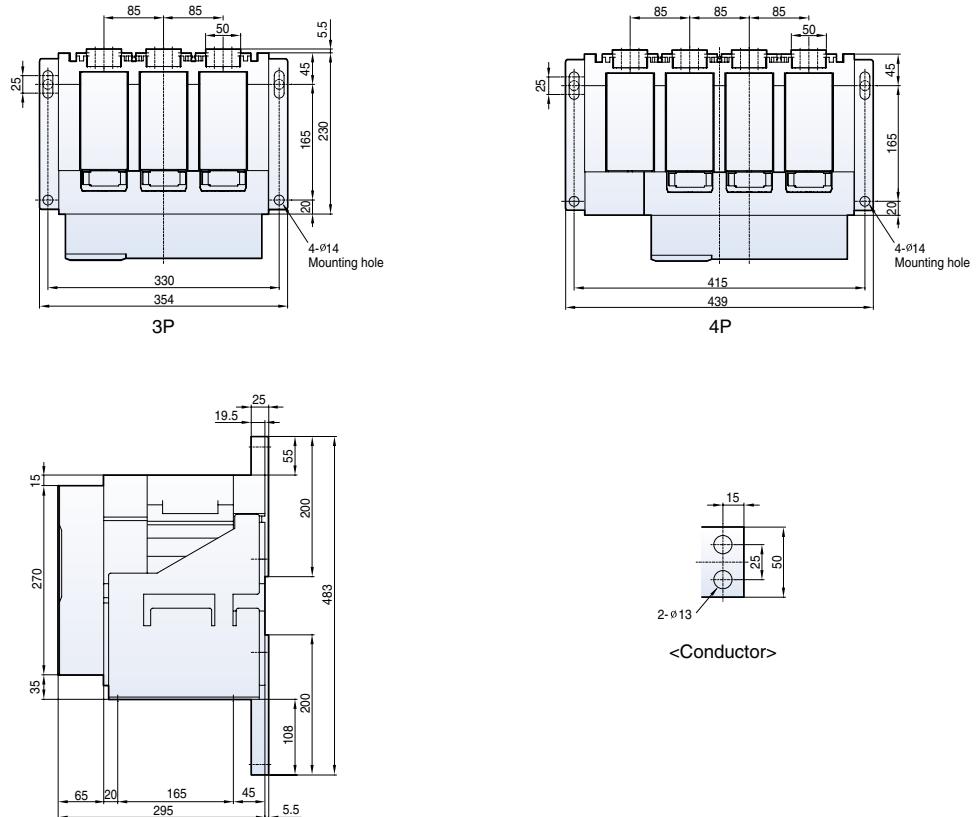


Dimensions



Susol • Metasol

Draw-out type 2000AF (630~1600A: AH/AN/AS-06~16D)


Front view

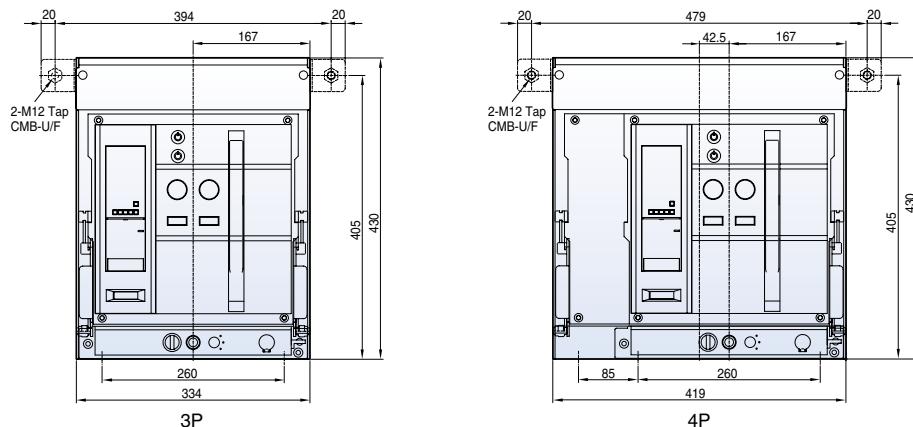


Vertical type

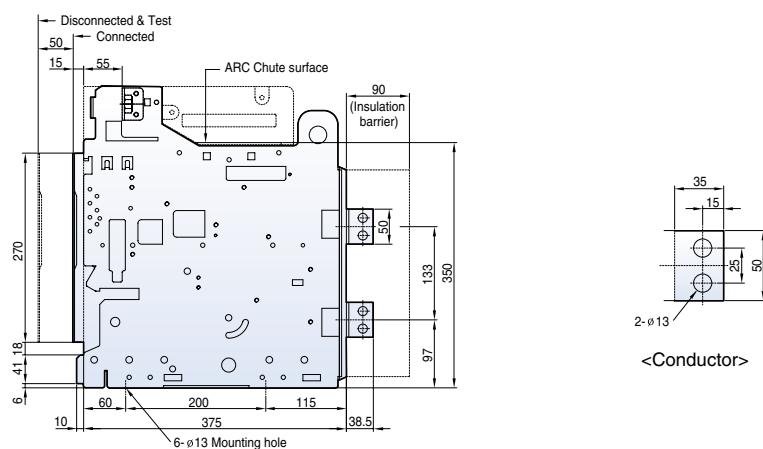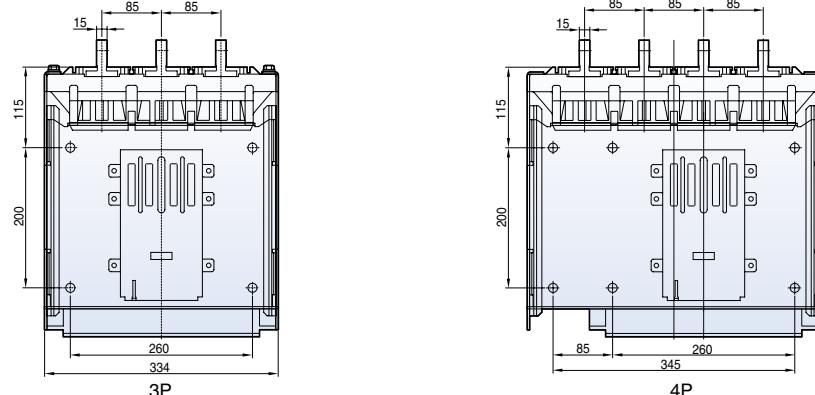

Horizontal type

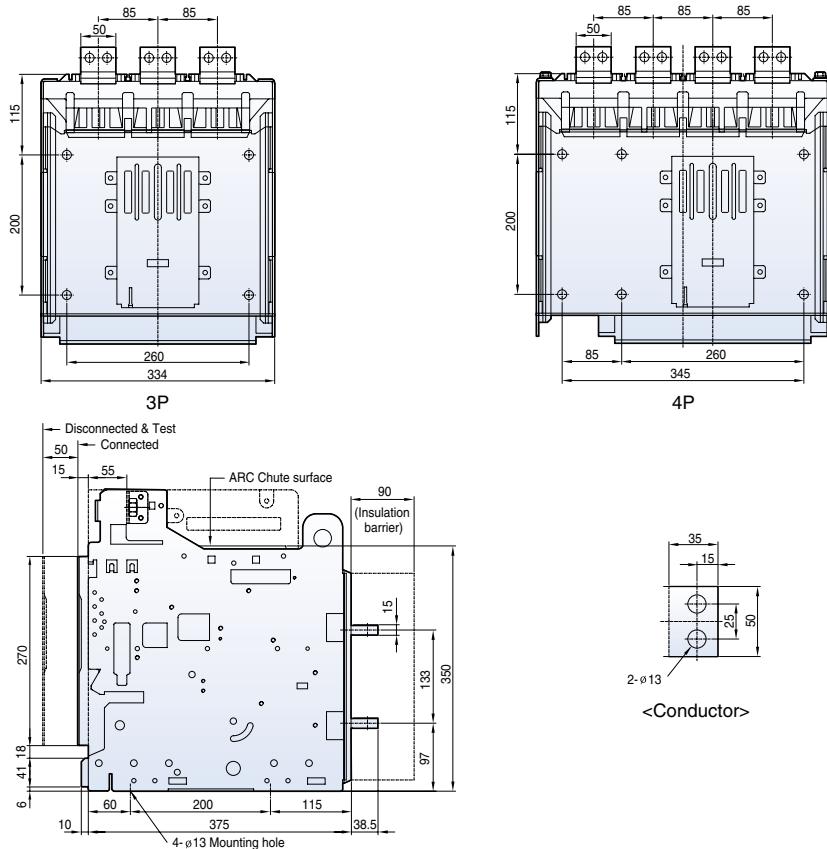

Front connection type

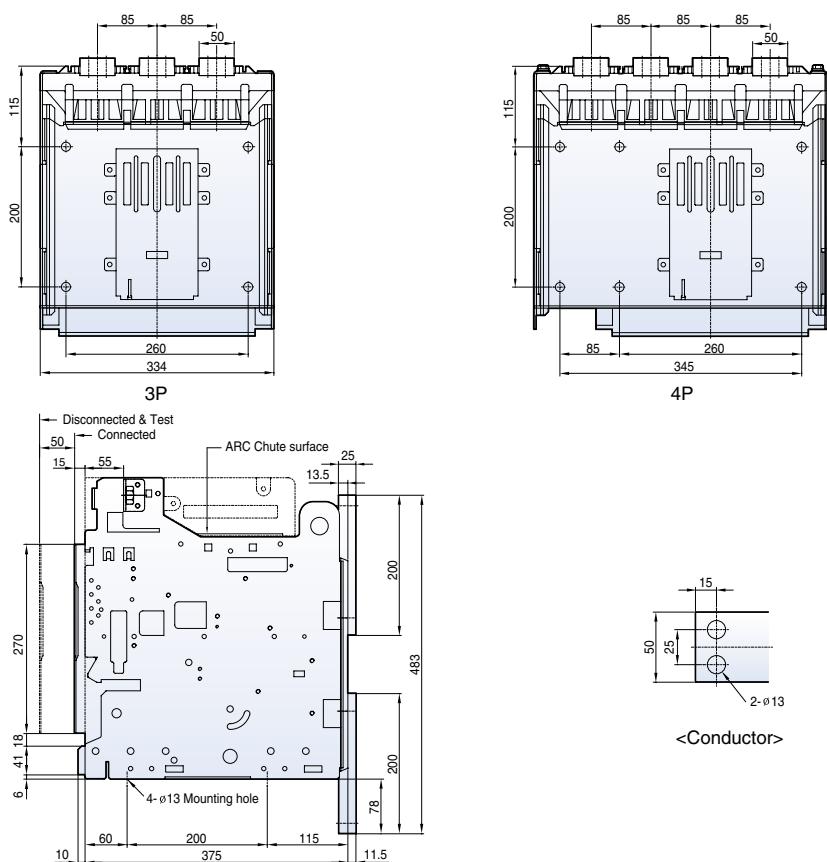


Dimensions



Susol • Metasol

Fixed type 2000AF (2000A: AH/AS-20D)

Front view

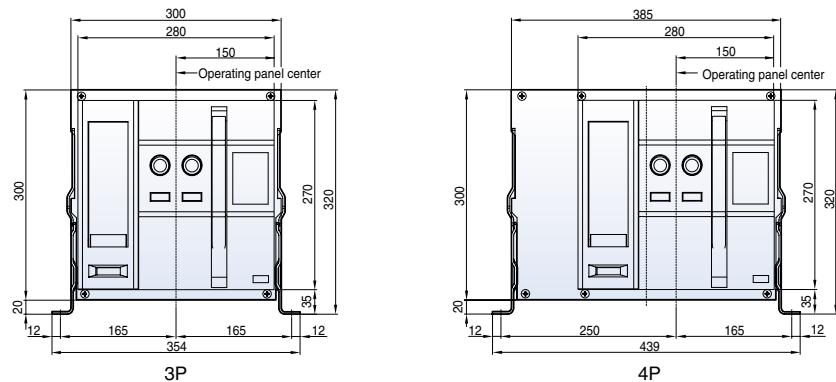


Vertical type

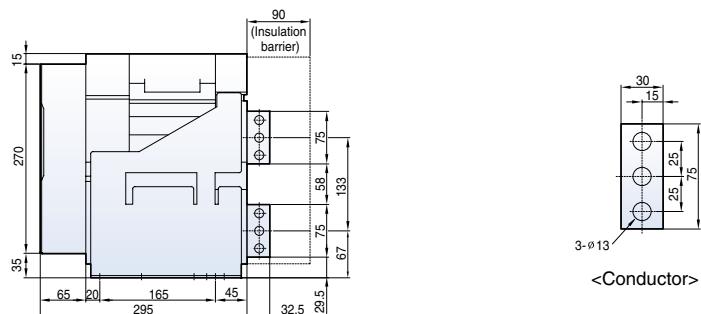
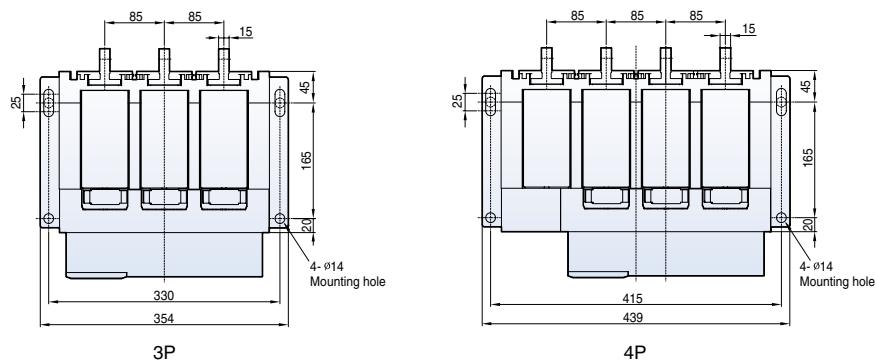


Draw-out type 2000AF (2000A: AH/AS-20D)

Front view

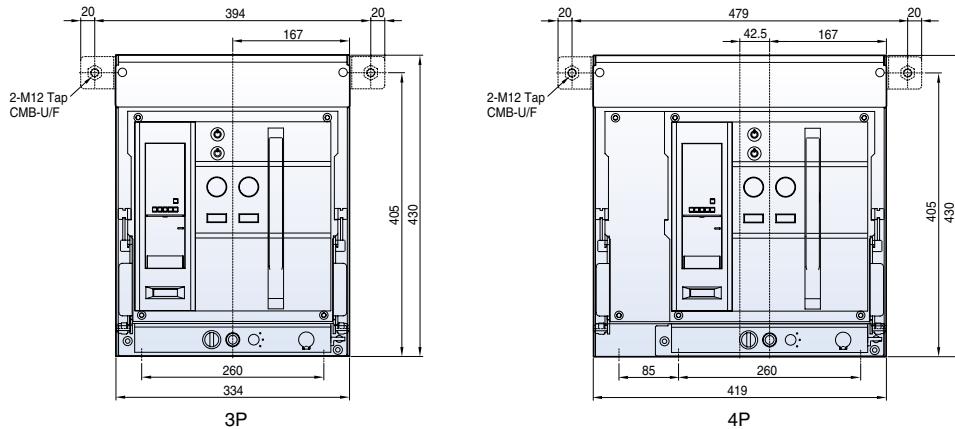

Vertical type

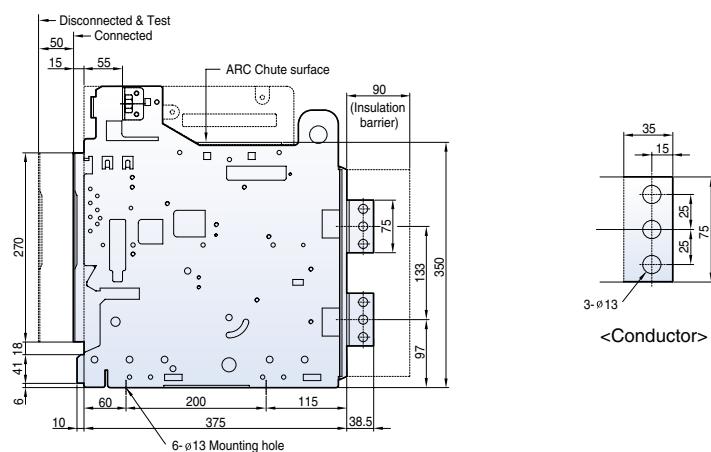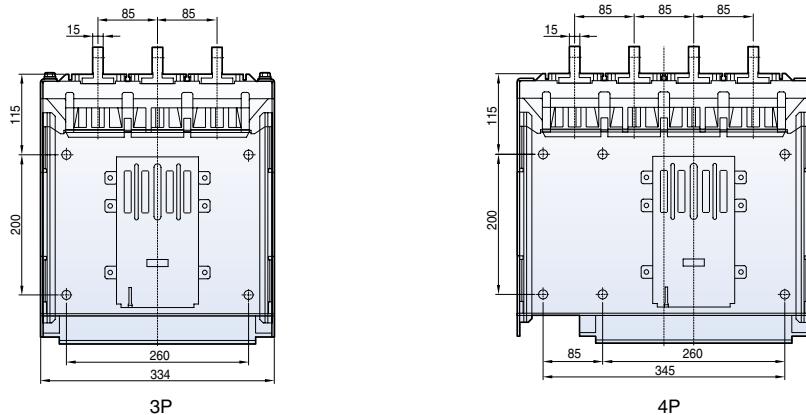


Dimensions



Susol • Metasol

Fixed type 4000AF (2000~3200A: AH/AN/AS-20~32E)


Front view

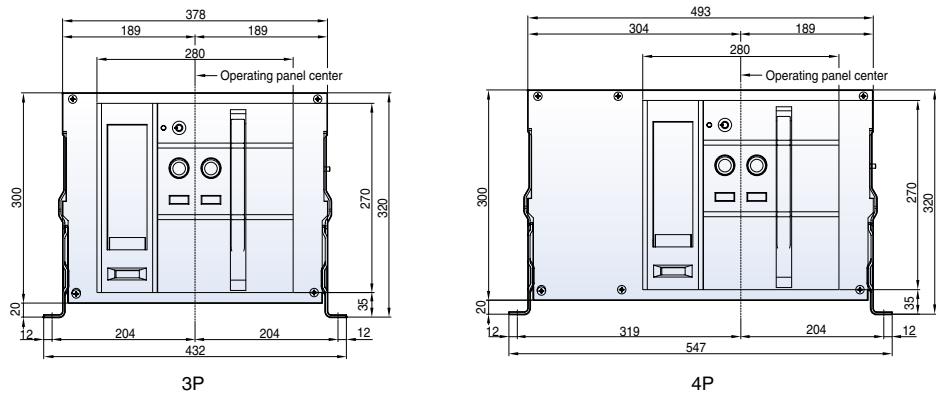


Vertical type

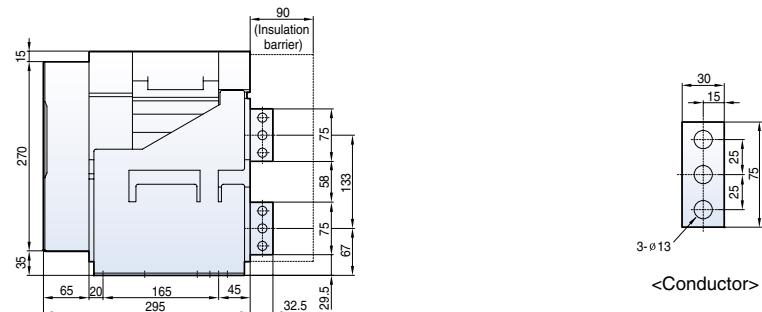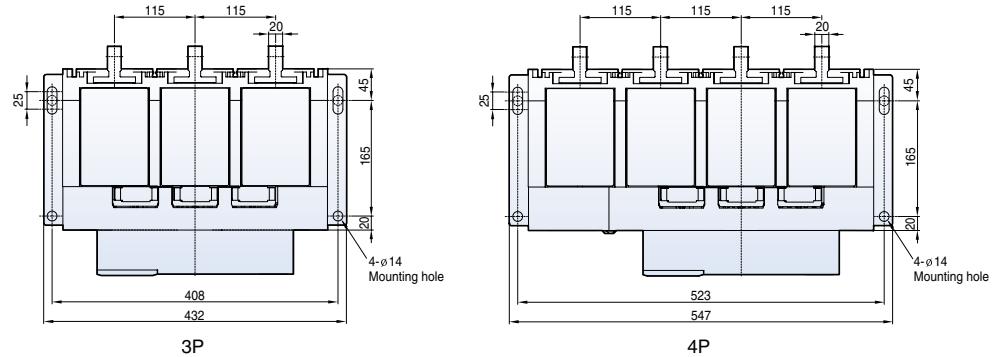

Horizontal type

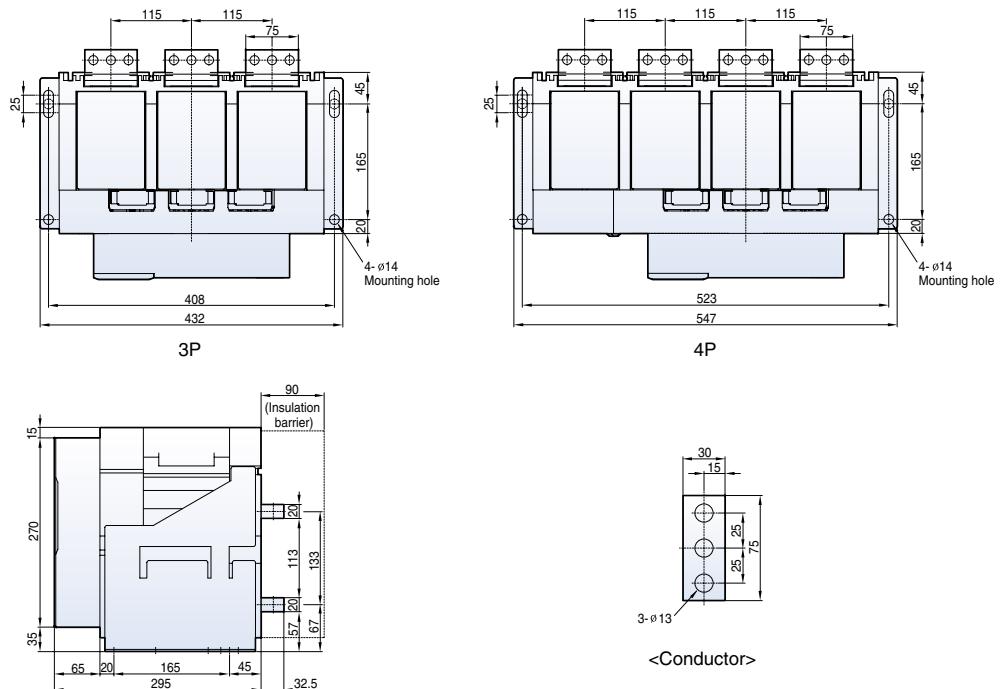

Front connection type

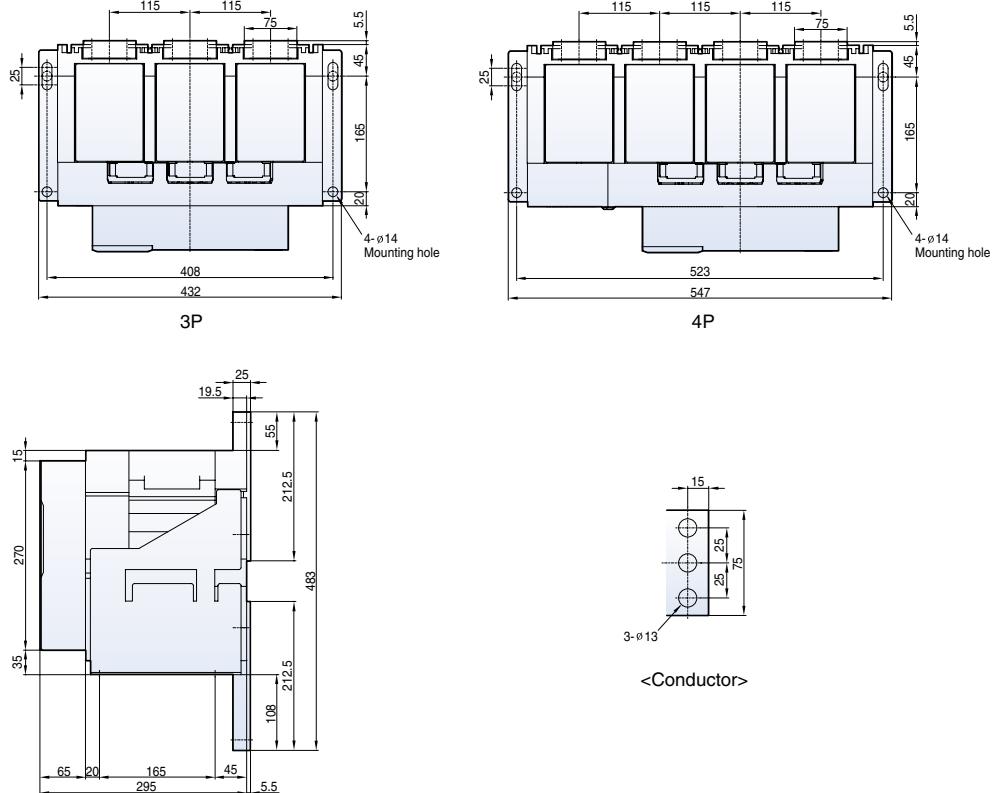


Dimensions



Susol • Metasol

Draw-out type 4000AF (2000~3200A: AH/AN/AS-20~32E)


Front view

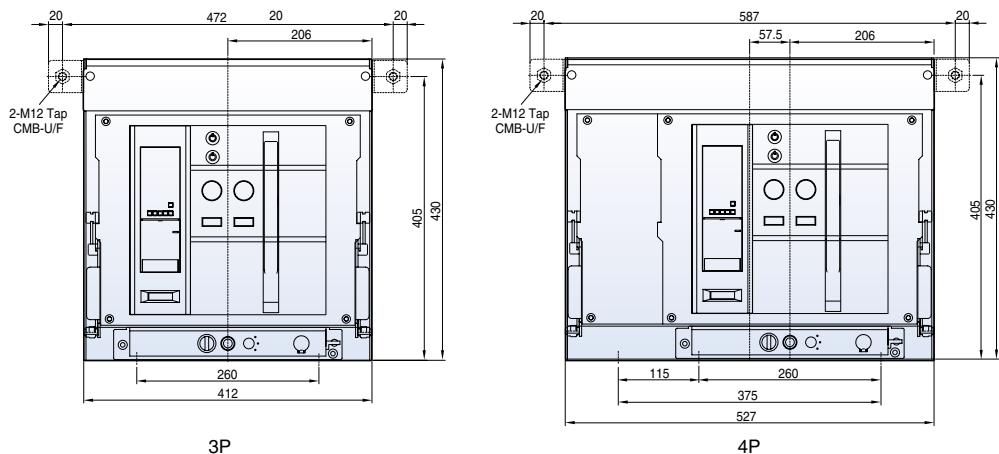


Vertical type

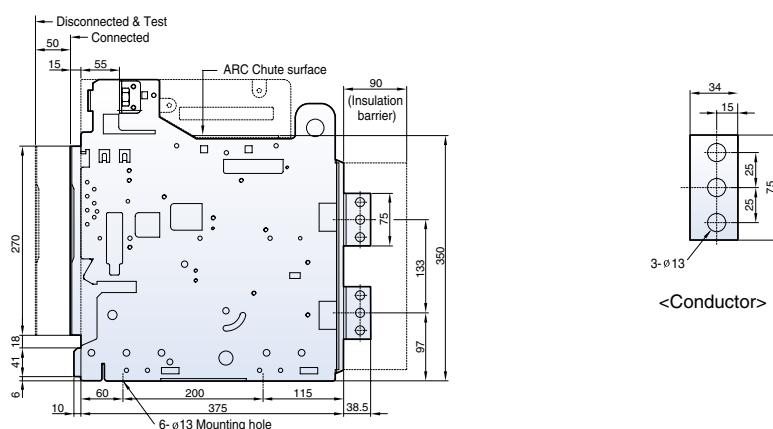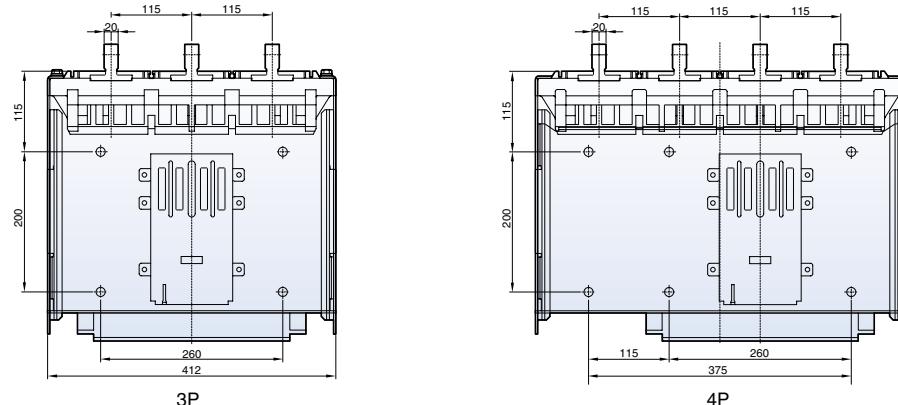

Horizontal type

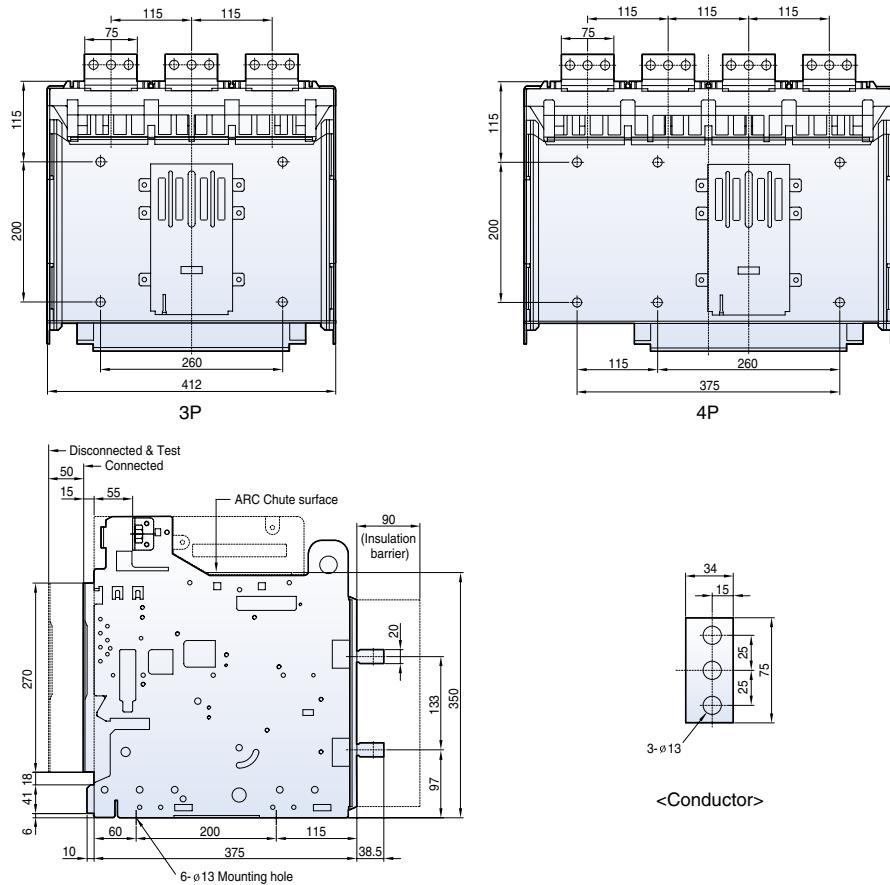

Front connection type

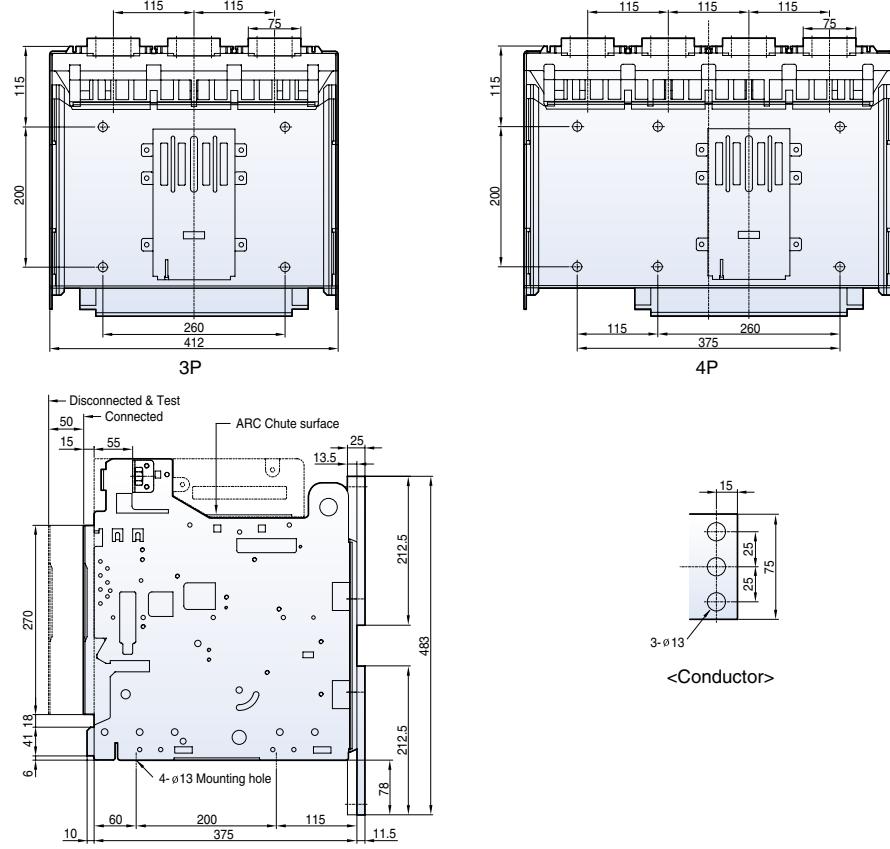


Dimensions



Susol • Metasol

Fixed type 4000AF (4000A: AH/AS-40E)


Front view

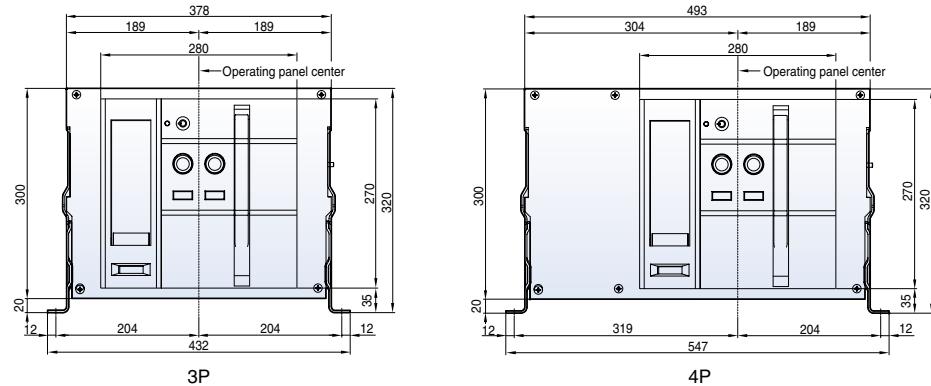

Vertical type

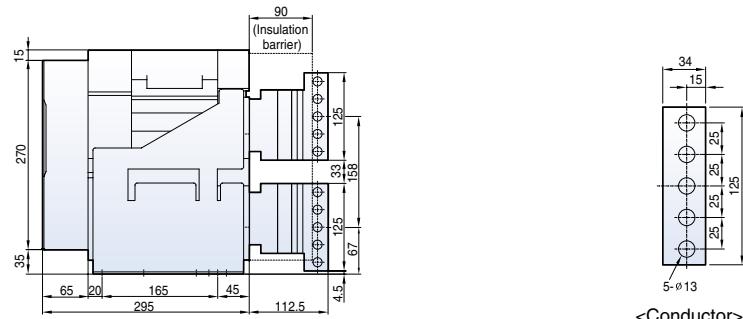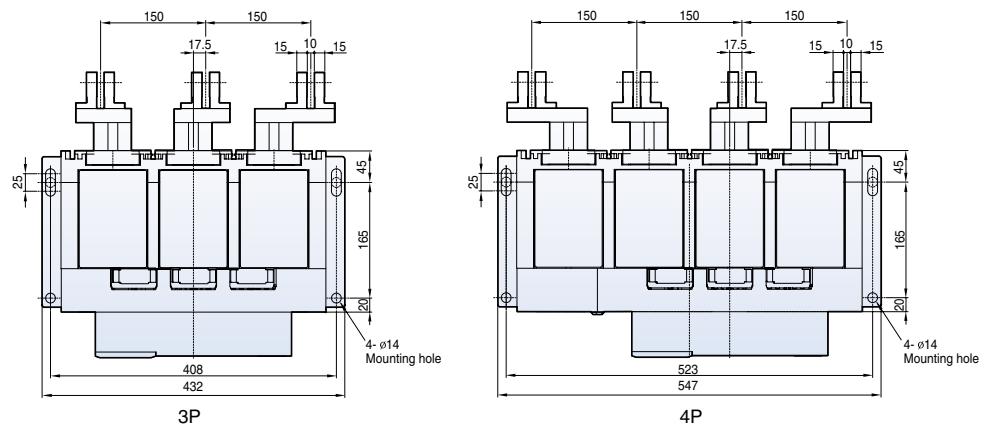

Horizontal type

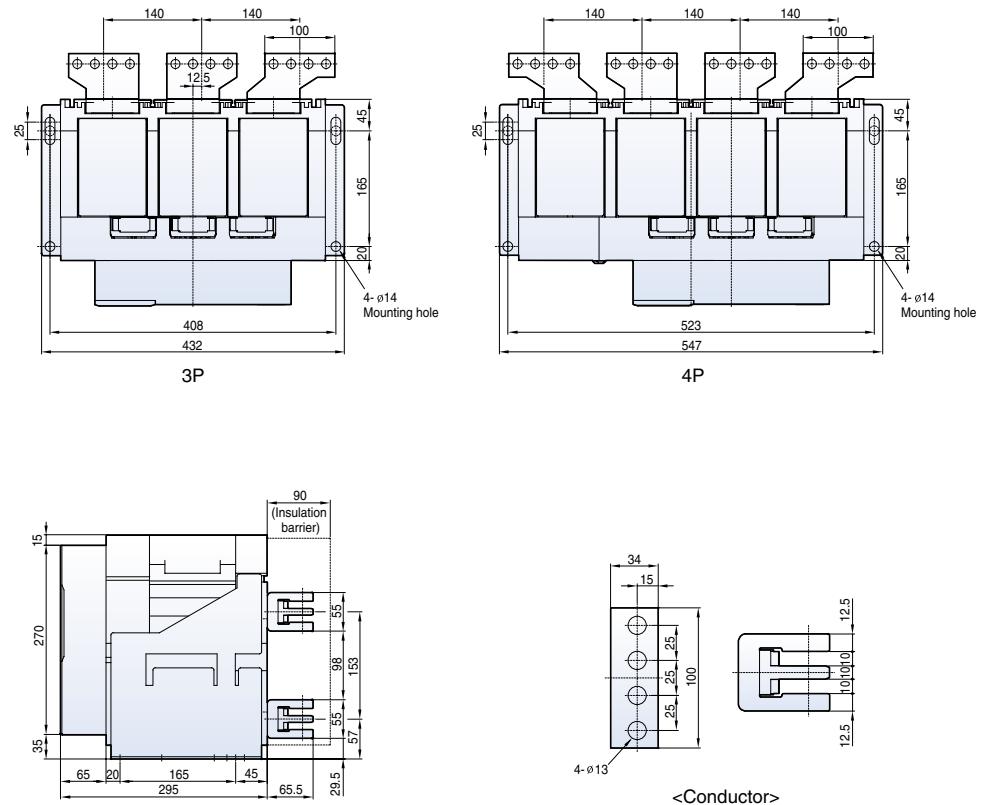


Dimensions



Susol • Metasol

Draw-out type 4000AF (4000A: AH/AS-40E)


Front view

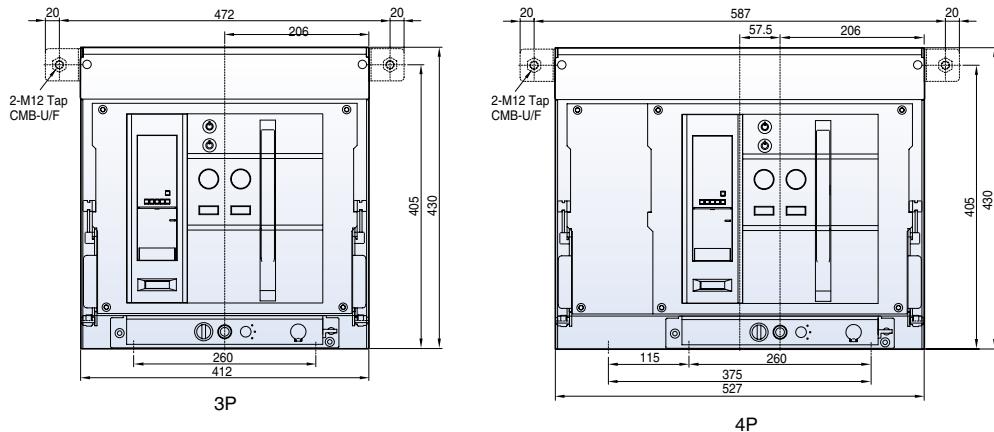

Vertical type

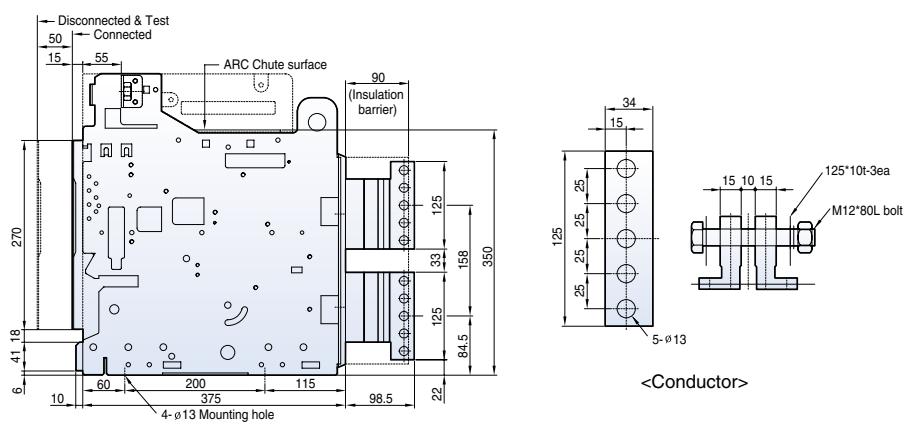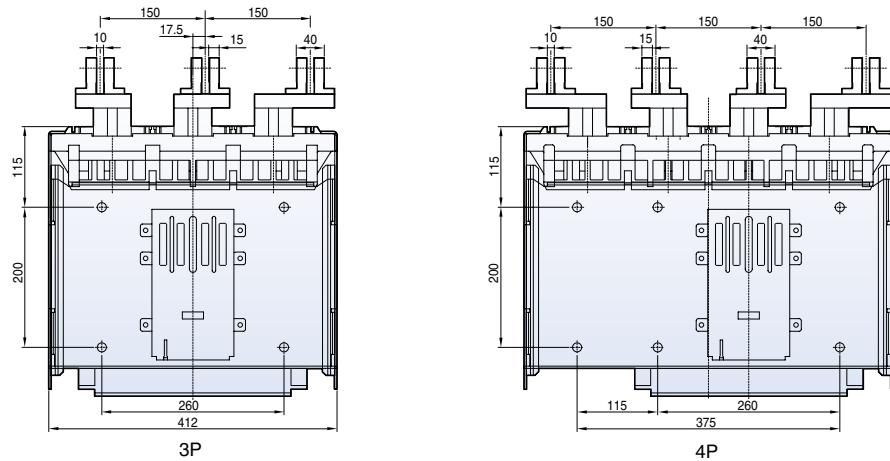

Horizontal type

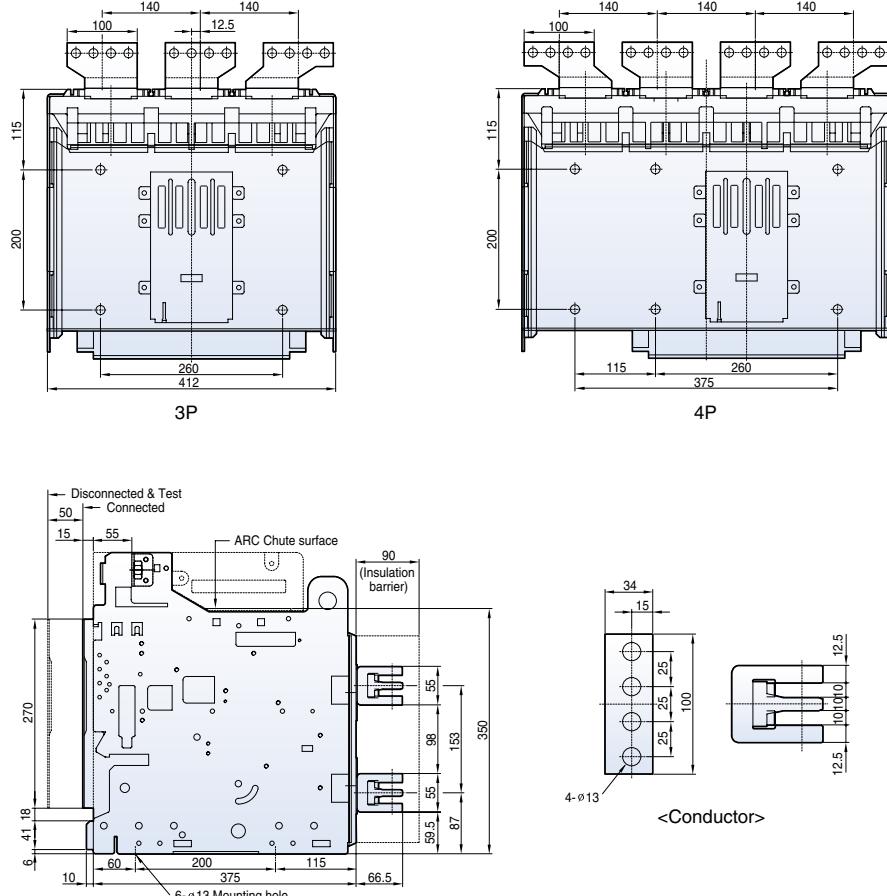


Dimensions


Susol • Metasol

Fixed type 5000AF (4000~5000A: AS-40~50F)



Front view

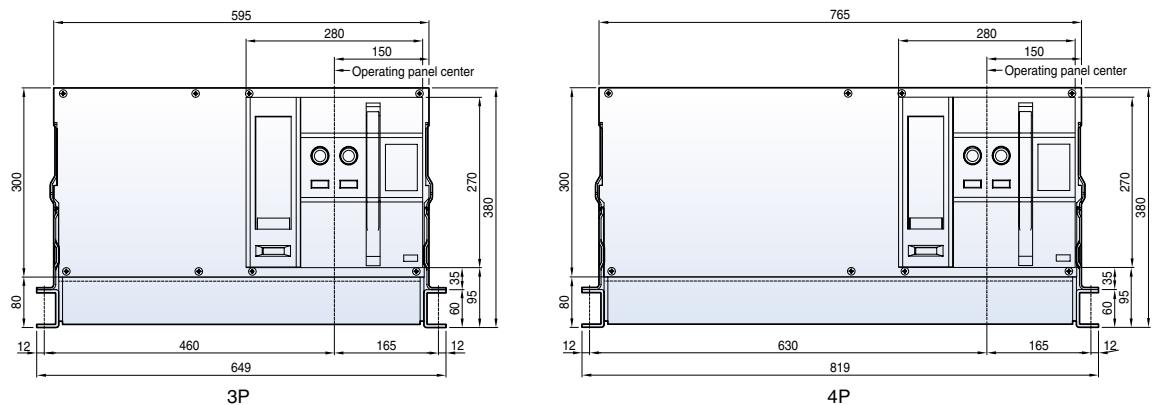





Vertical type

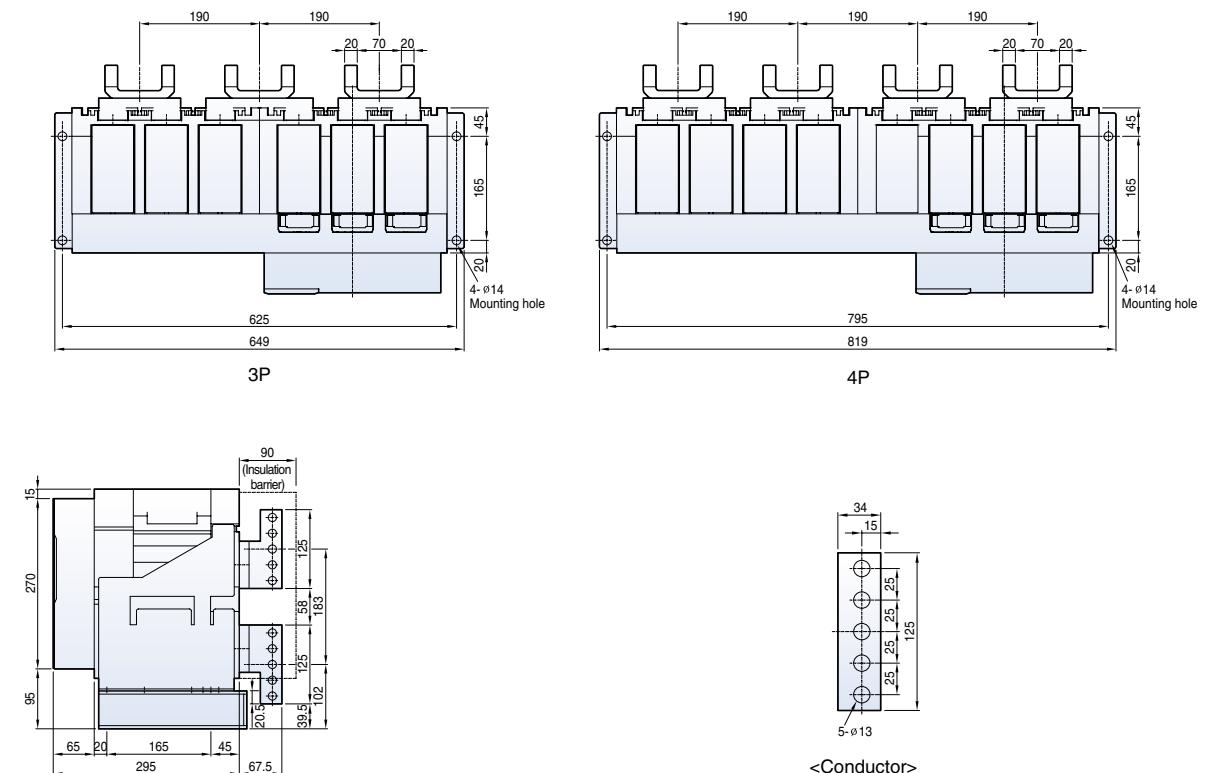

Horizontal type

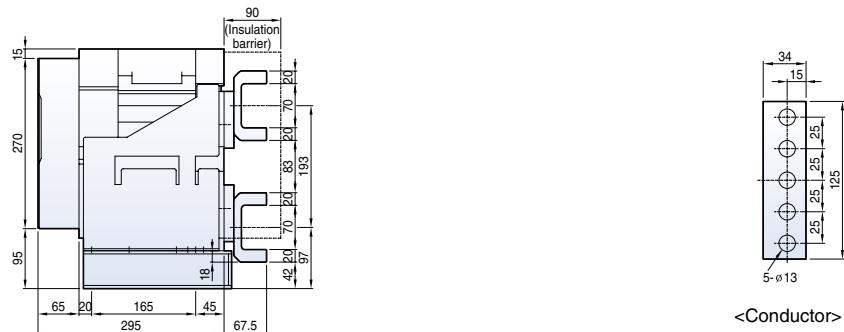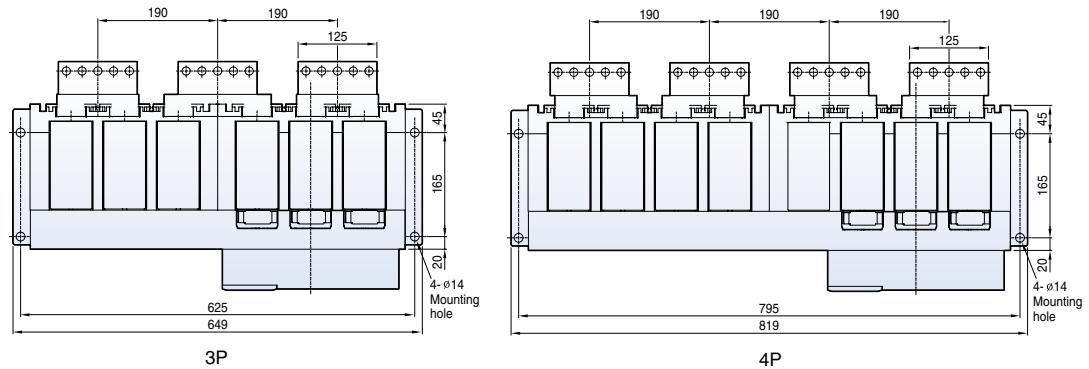

Door Frame: DF (AH-G, AS-F)

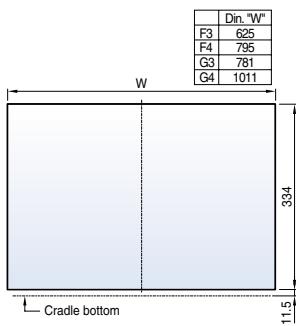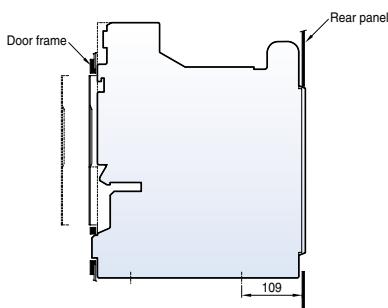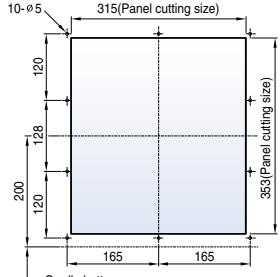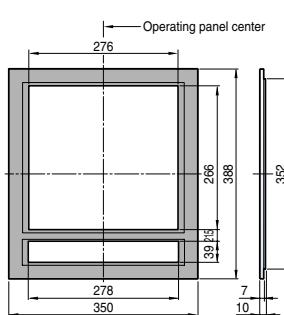

<External size>


Note) The dimensions are for drawout type.

Dimensions



Susol • Metasol

Draw-out type 5000AF (4000~5000A: AS-40~50F)


Front view

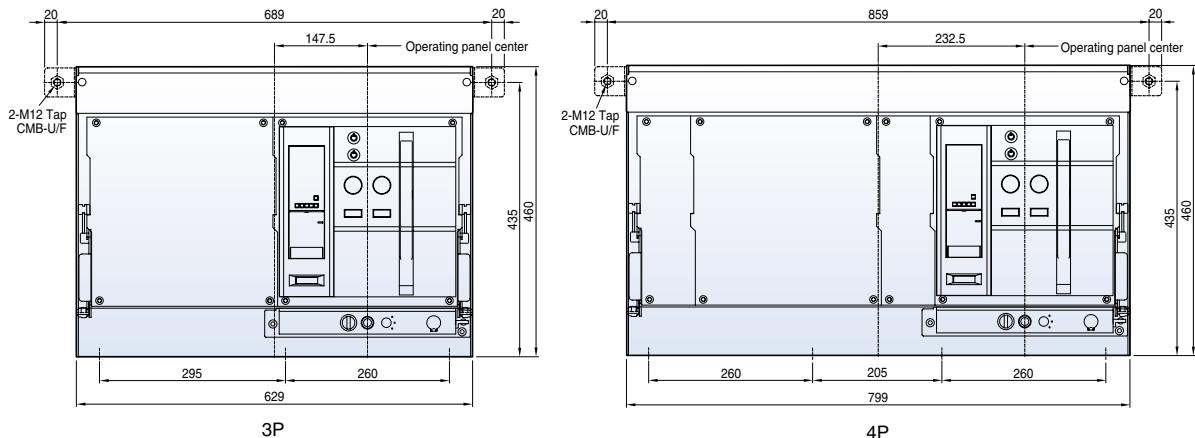

Vertical type

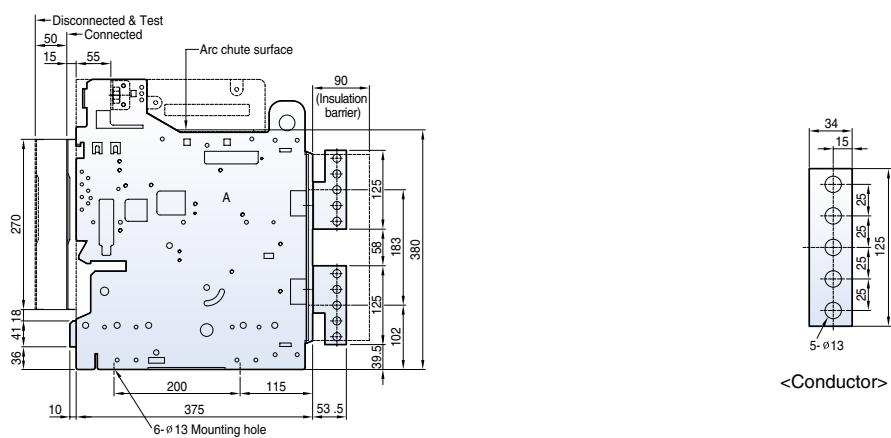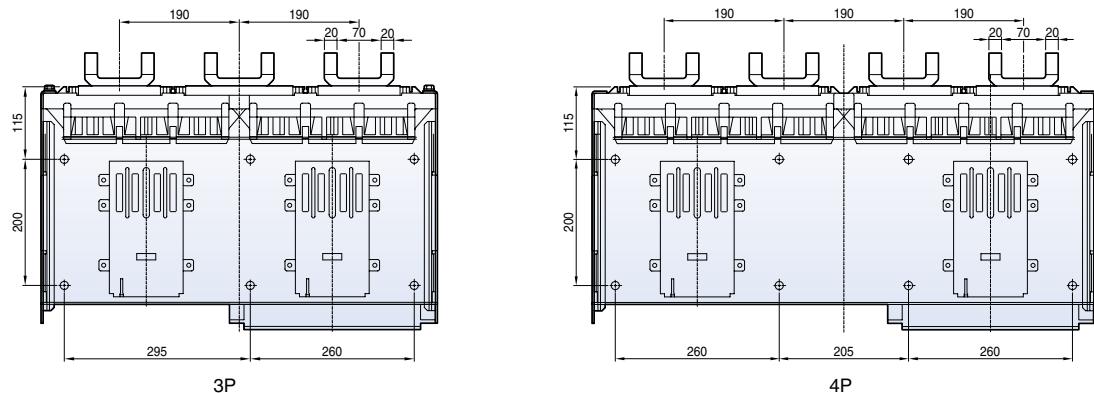

Horizontal type


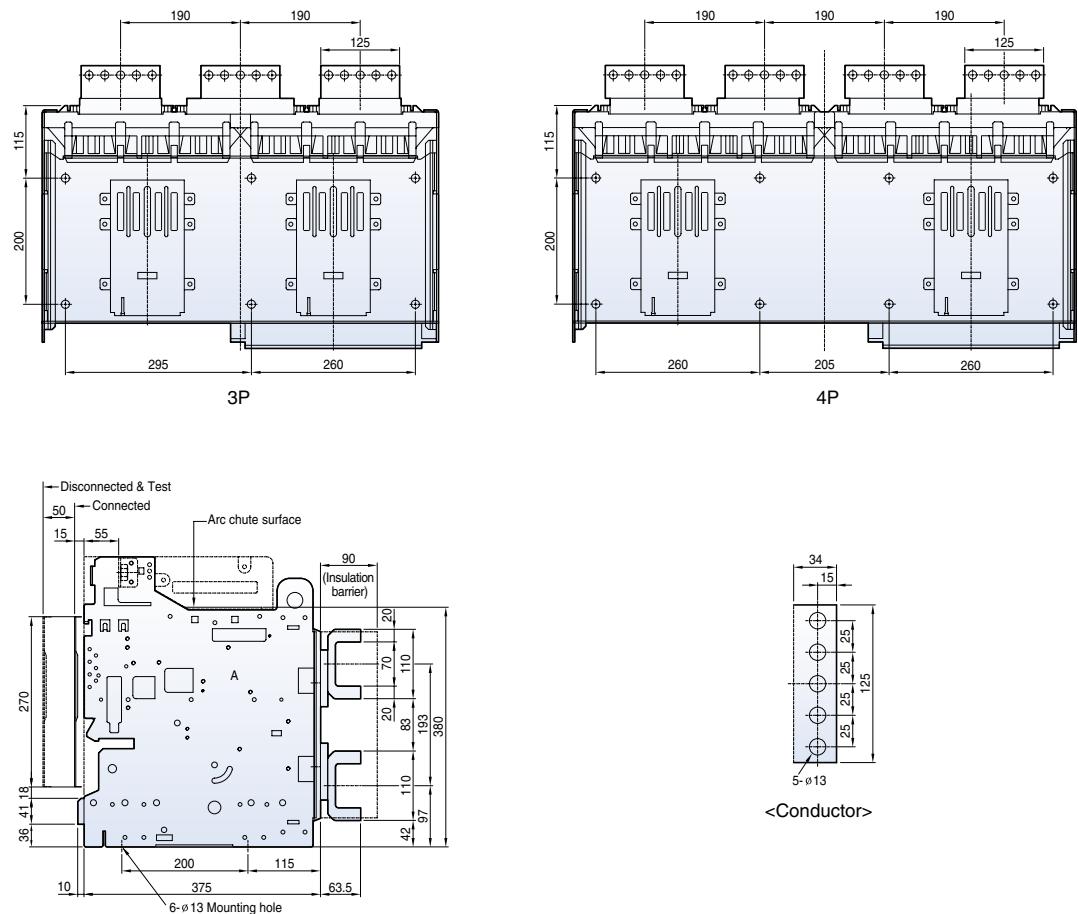


Dimensions


Susol • Metasol

Fixed type 6300AF (4000A~6300A: AH/AS-40~50G)


Front view

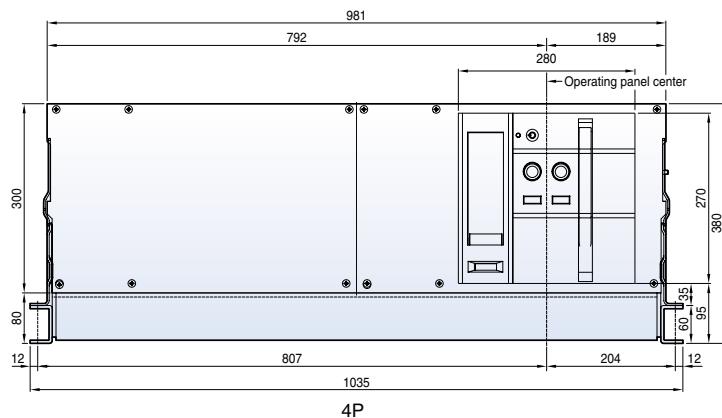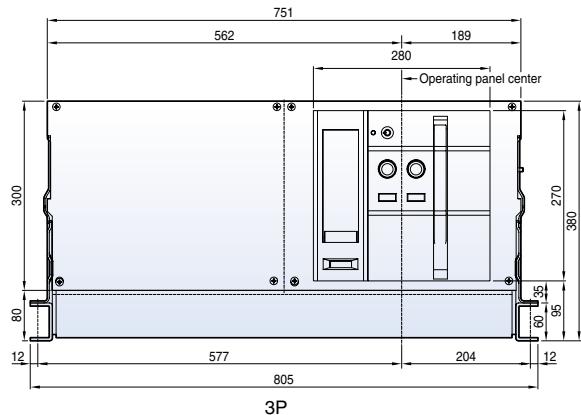



4000A~5000A




6300A




Vertical type

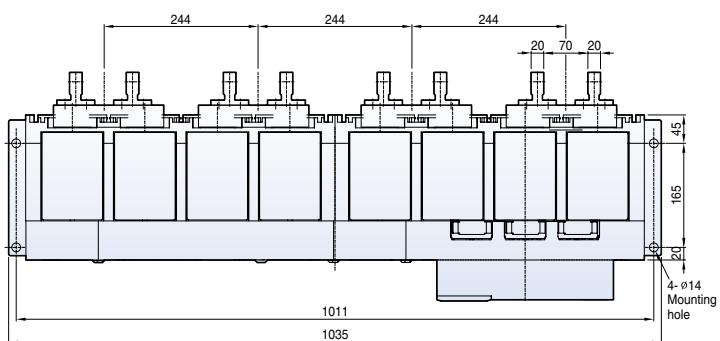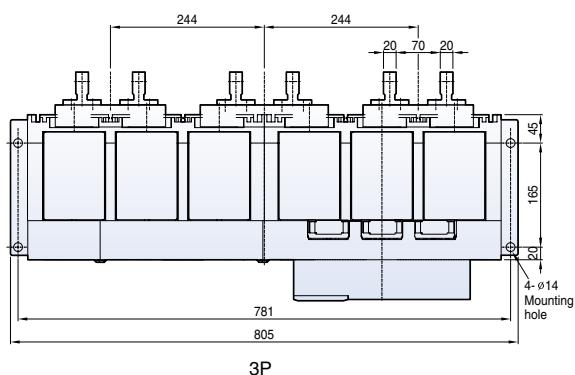

4000A~5000A

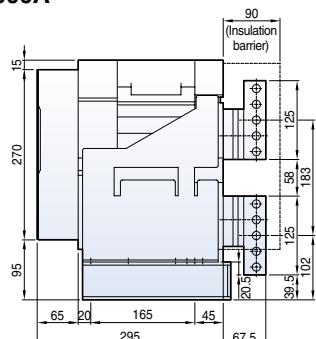


6300A


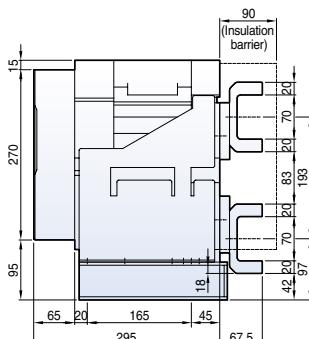


Horizontal type

4000A~5000A

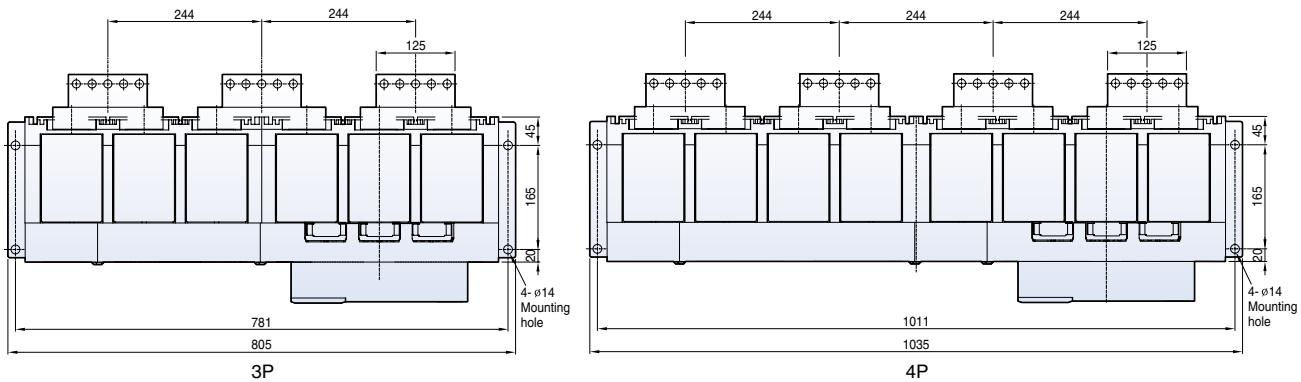

6300A

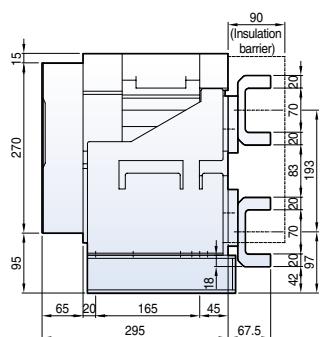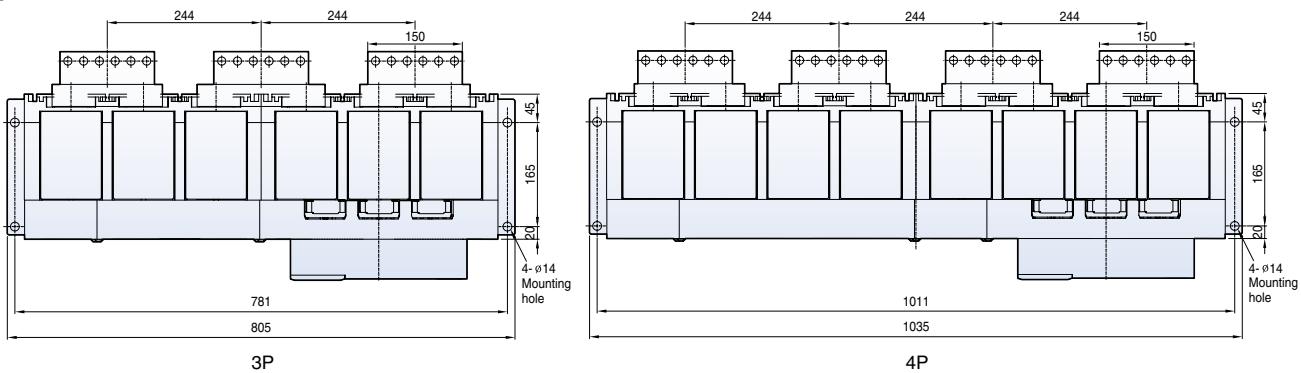


Dimensions


Susol • Metasol

Draw-out type 6300AF (4000A~6300A: AH/AS-40~50G)

Front view

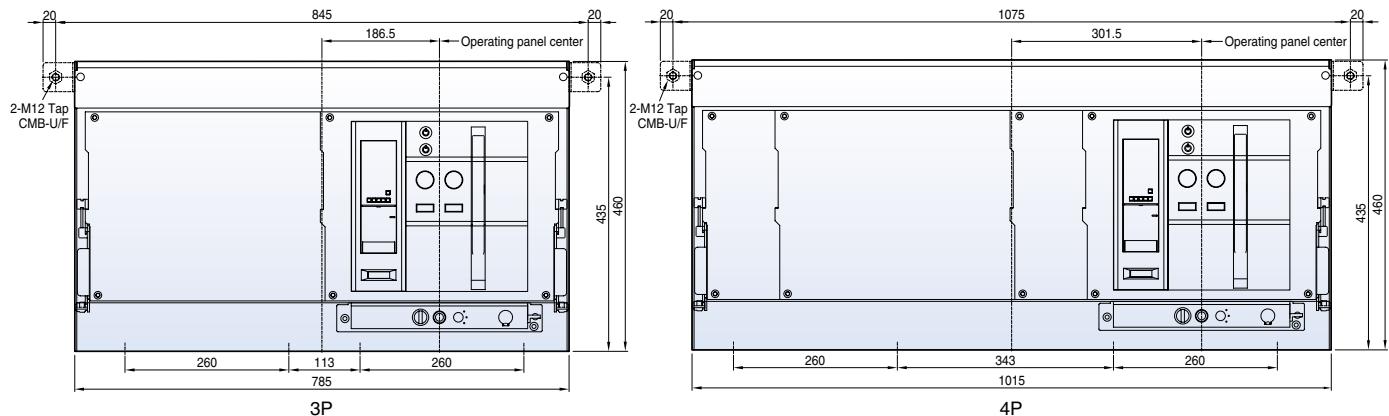


4000A~5000A




<Conductor>

6300A





<Conductor>


Vertical type

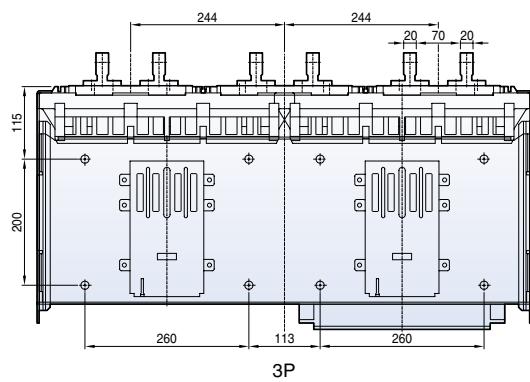

4000A~5000A

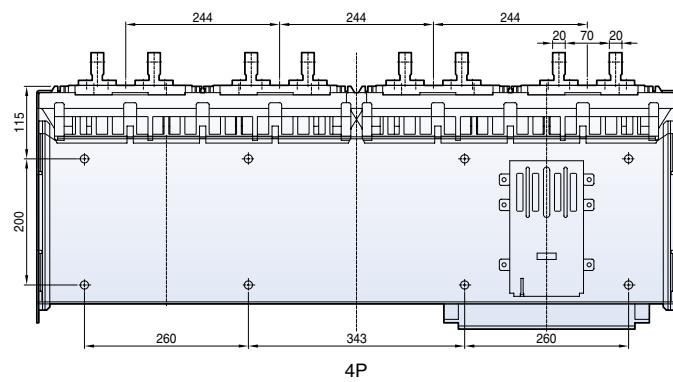
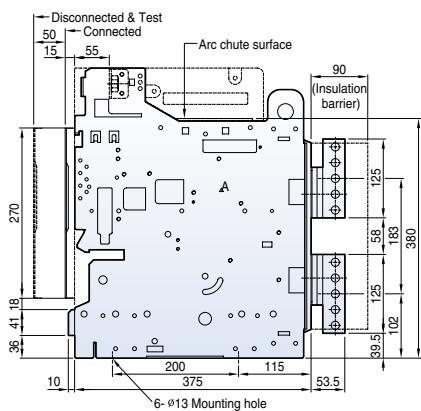


6300A



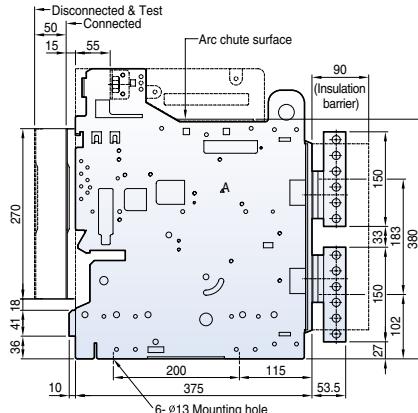


Horizontal type

4000A~5000A

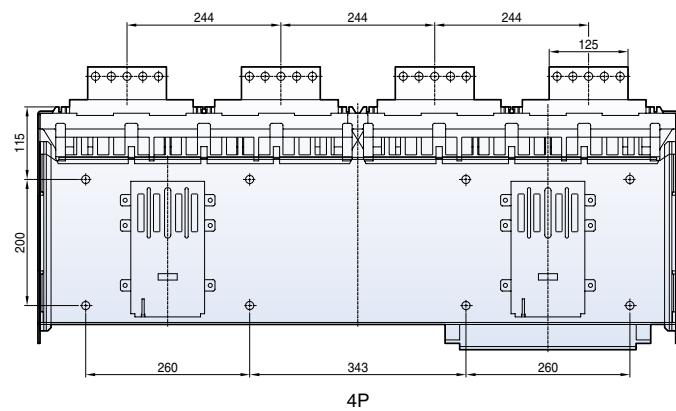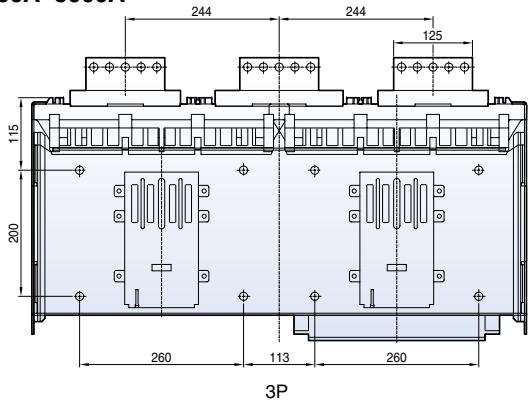

6300A

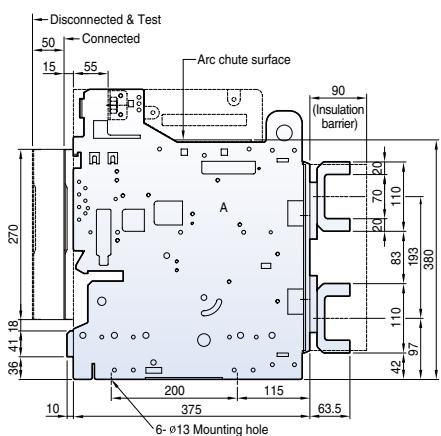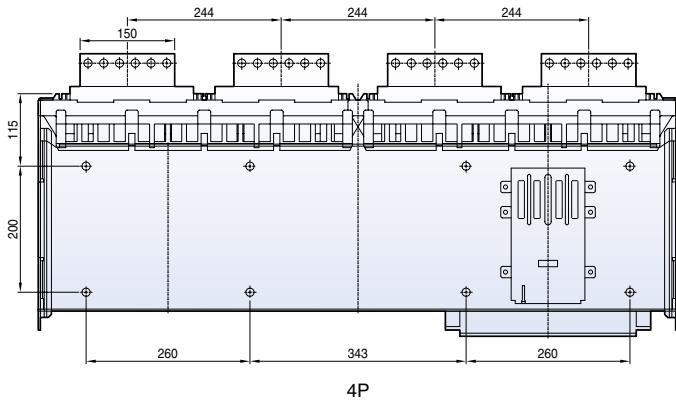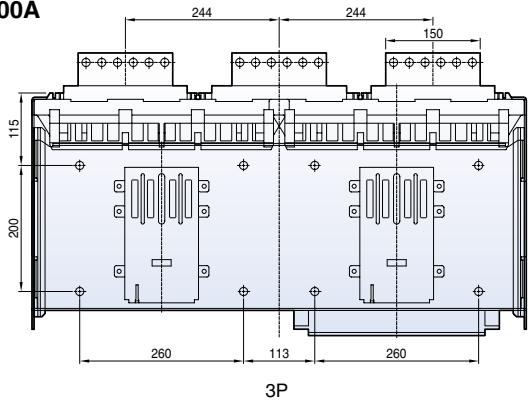


Technical information

Susol · Metasol

Insulation voltage

You should keep the isolation distance between ACB and panel as below table.

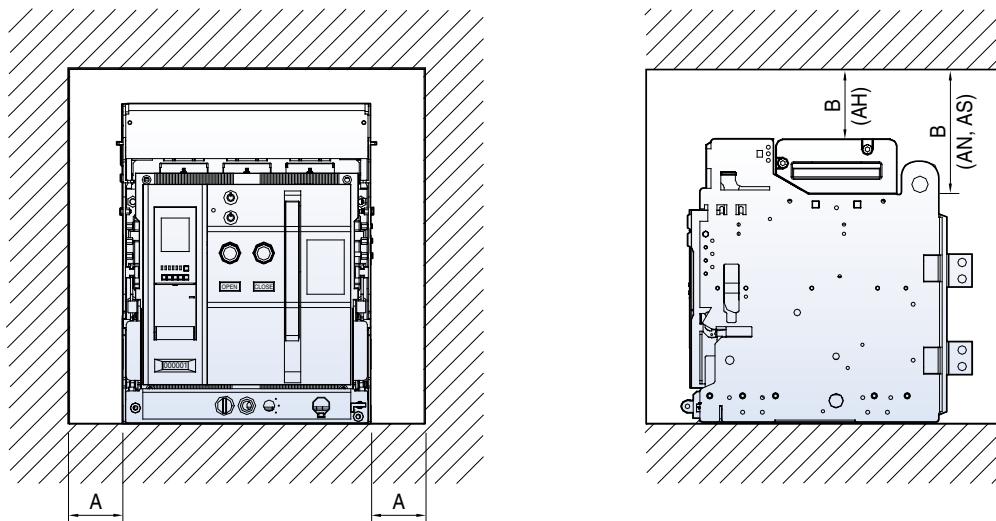


Type	A	B
Fixed	AN/AS	50
	AH	150
Draw out	AN/AS	50
	AH	0




Note) When drawing the distribution panel, it is available to use regardless of the distance between ACB and the wall of the panel because Susol ACB(draw-in/out type) extinguishes the arc in the Arc Chute and Arc Cover clearly.

Minimum isolation distance

For the safety, all the electric charging parts need to be installed over minimum isolation distance.

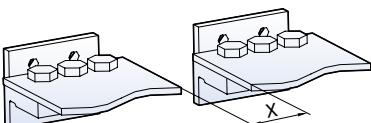

Insulating voltage (Ui)	Minimum isolation distance (X min)
600V	8 mm
1000V	14 mm

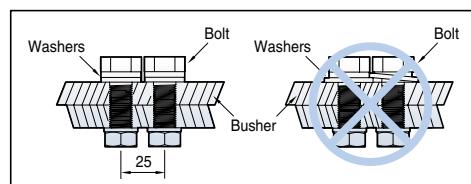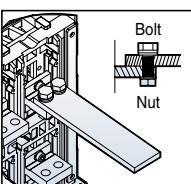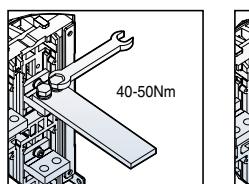

Screw type	Tightening torque			
	Standard(kgf · cm)	Tolerance	Standard(N.m)	Tolerance
M8	135	±16	13.3	±1.6
M10	270	±32	26.5	±3.2
M12	480	±57	46.6	±5.6

Temperature derating

The table below indicates the maximum current rating, for each connection type, as a function of the ambient temperature around the circuit breaker and the busbars. Circuit breakers with mixed connections have the same derating as horizontally connected breakers. For ambient temperatures greater than 60°C, consult us. Temperature inside the switchboard around the circuit breaker and its connection: T_i(IEC 60947-2)

Frame	Rated current	ACB terminal	Applicable busbar size										
				Horizontal type					Vertical type				
				40°C	45°C	50°C	55°C	60°C	40°C	45°C	50°C	55°C	60°C
1600AF AN-D AS-D AH-D	200A	15t × 50 × 1EA	5t × 50 × 1EA	200A	200A	200A	200A	200A	200A	200A	200A	200A	200A
	400A			400A	400A	400A	400A	400A	400A	400A	400A	400A	400A
	630A		5t × 50 × 2EA	630A	630A	630A	630A	630A	630A	630A	630A	630A	630A
	10t × 60 × 1EA			10t × 60 × 1EA									
	800A		6t × 50 × 2EA	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A
	10t × 60 × 1EA			10t × 60 × 1EA									
	1,000A		8t × 50 × 2EA	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A
	1,250A			6t × 75 × 2EA	-	-	-	-	-	1250A	1250A	1250A	1250A
	1,600A		8t × 60 × 2EA	1250A	1250A	1250A	1250A	1250A					
				10t × 50 × 2EA									
			6t × 75 × 3EA	-	-	-	-	-	1600A	1600A	1580A	1550A	1500A
				10t × 60 × 2EA	1600A	1600A	1520A	1480A					
			8t × 60 × 3EA	-									
				10t × 60 × 2EA	1600A	1600A	1520A	1480A					
2000AF AS/AH-D	2,000A	15t × 75 × 1EA	8t × 75 × 3EA	-	-	-	-	-	2000A	2000A	1940A	1860A	1780A
				10t × 100 × 2EA									
3200AF AN-E AS-E AH-E	630A	20t × 75 × 1EA	5t × 50 × 2EA	630A	630A	630A	630A	630A	630A	630A	630A	630A	630A
	800A			10t × 60 × 1EA									
	1,000A		6t × 50 × 2EA	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A
	1,250A			10t × 60 × 1EA									
	1,600A		8t × 50 × 2EA	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A
	2,000A			6t × 75 × 2EA	-	-	-	-	-	1250A	1250A	1250A	1250A
	2,500A		8t × 60 × 2EA	1250A	1250A	1250A	1250A	1250A					
	3,200A			10t × 50 × 2EA									
			6t × 75 × 3EA	-	-	-	-	-	1600A	1600A	1600A	1600A	1600A
				10t × 60 × 2EA	1600A	1600A	1600A	1600A					
			8t × 60 × 3EA	-									
				8t × 75 × 3EA	2000A	2000A	2000A	2000A					
4000AF AS/AH-E	4,000A	10t × 100 × 3EA	10t × 100 × 4EA	-	-	-	-	-	4000A	4000A	3950A	3800A	3680A
				10t × 75 × 5EA	4000A	4000A	3900A	3800A					
5000AF AS-F	4,000A	20t × 125 × 2EA	10t × 100 × 4EA	4000A	4000A	3920A	3860A	3800A	4000A	4000A	3960A	3900A	3880A
				10t × 125 × 4EA	5000A	5000A	4900A	4800A	4700A	5000A	5000A	4950A	4900A
6300AF AS-G AH-G	4,000A	20t × 125 × 2EA	10t × 100 × 4EA	4000A	4000A	4000A	4000A	4000A	4000A	4000A	4000A	4000A	4000A
				10t × 125 × 4EA	5000A	5000A	4900A	4820A	4750A	5000A	5000A	4950A	4870A
	6,300A	20t × 150 × 2EA	10t × 150 × 4EA	6300A	6300A	6170A	6040A	5900A	6300A	6300A	6220A	6160A	6100A

Technical information

Susol • Metasol

Operating conditions

Ambient temperature

ACB devices can operate under the following temperature conditions

- The electrical and mechanical characteristics are stipulated for an ambient temperature of -5°C to +40°C
- The average temperature should be within + 35°C
- Reduce the continuous conducting current when the temperature is over 45°C (refer to temperature derating)
- Storage condition : -20°C to + 60°C is recommended.

Altitude

Susol ACB is designed for operation at altitudes under 2000m. At altitudes higher than 2000m, emitting heat is lowered and operating voltage, continuous current capacity, and breaking capacity will be reduced. Durability of the insulation is also reduced according to the atmosphere pressure. According to the below table, change the ratings upon a service condition.

Item	Altitude [m]	2000m	3000m	4000m	5000m
Withstand voltage [V]		3500	3150	2500	2100
Average insulating voltage [v]		1000	900	700	600
Max. using voltage [V]		690	590	520	460
Current compensation constant		$1 \times In$	$0.99 \times In$	$0.96 \times In$	$0.94 \times In$

Environment

Under clean air;

Maximum temperature + 40°C (relative humidity should be under 85%)

Maximum temperature + 20°C (relative humidity should be under 90%)

Do not apply under corrosive or ammonia gas circumstances

(H₂S ≤ 0.01ppm, SO₂ ≤ 0.01ppm, NH₃ ≤ a few ppm)

* Extreme atmosphere conditions

Under high temperature and/or high humidity, the insulation durability, electrical and mechanical features could be deteriorated. At this conditions, increasing corrosion-resistant dealing needs. Corrosion-resistant parts need under this conditions.

Internal resistance and power consumption (per pole)

AF	Rated current (A)	Fixed type		Draw-out type	
		Inner resistance (mΩ)	Power consumption (W/3Phase)	Inner resistance (mΩ)	Power consumption (W/3Phase)
AN-16D	630	0.02	24	0.04	48
	800	0.02	38	0.04	77
	1,000	0.02	60	0.04	120
	1,250	0.02	94	0.04	188
	1,600	0.02	154	0.04	307
AH/AS-20D	630	0.015	18	0.03	36
	800	0.015	29	0.03	58
	1,000	0.015	45	0.03	90
	1,250	0.015	70	0.03	141
	1,600	0.015	115	0.03	230
	2,000	0.013	156	0.027	324
AH/AS-32E	2,000	0.01	120	0.02	240
	2,500	0.01	188	0.02	375
	3,200	0.01	307	0.02	614
AH/AS-40E	2,000	0.01	120	0.02	240
	2,500	0.01	188	0.02	375
	3,200	0.01	307	0.02	614
	4,000	0.008	384	0.011	528
AS-50F	4,000	0.008	384	0.011	528
	5,000	0.008	600	0.011	825
AH/AS-63G	4,000	0.006	288	0.009	432
	5,000	0.006	450	0.009	675
	6,300	0.005	595	0.007	833

Note) 1. Above power consumption is whole power consumption for each Rated current, 50/60Hz, 3/4pole.
2. This is inner assistant value per 1 pole.


3. Power factor = 1.0

Installation recommendation

BUS-BAR Connection

Cables connections


Make sure that no excessive mechanical force put on the rear terminals for cable connection.
Extension terminal is fixed such as B, C and cable is to fixed to the frame such as E

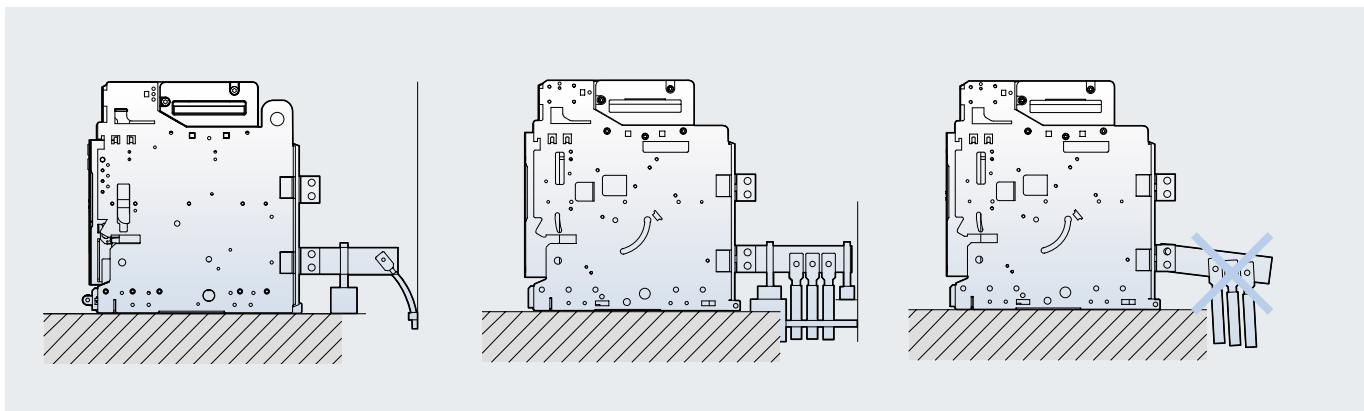

Bus-bar connection

For busbar connection, connect access parts with a provided torque and fix with parallel installing the support not to apply terminal weight to circuit breaker.

In order to prevent the spread safety or secondary accidents, secure maximum safe distance A (Table 1) from the access area to withstand the electrical force during the short circuit faults.

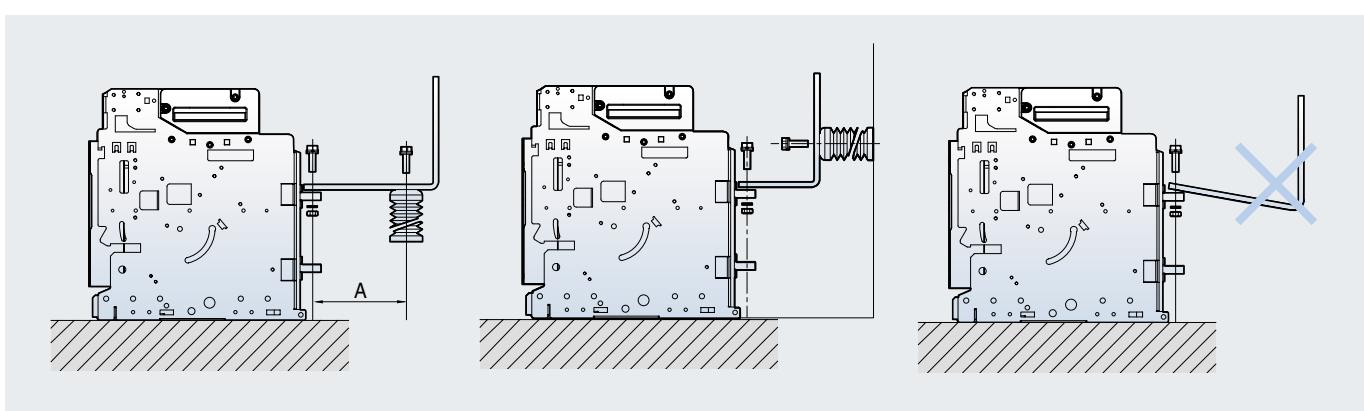

(Table 1) Maximum safe distance A

Short capacity (kA)	30	50	65	80	100	150
Length A (mm)	350	300	250	150	150	150


Technical information

Susol · Metasol

Installation recommendation

Protection degree provided by enclosures (IP Code) IEC 60529

IP



First characteristic numeral

	Degree of protection	
	Brief description	Definition
0	Non-protected	-
1	Protected against solid foreign objects of 50mm Ø and greater	The object probe sphere of 50mm Ø, shall not fully penetrate
2	Protected against solid foreign objects of 12.5mm Ø and greater	The object probe sphere of 12.5mm Ø, shall not fully penetrate
3	Protected against solid foreign objects of 2.5mm Ø and greater	The object probe sphere of 2.5mm Ø, shall not penetrate at all
4	Protected against solid foreign objects of 1.0mm Ø and greater	The object probe of 1.0mm Ø, shall not penetrate at all
5	Dust-protected	Ingress of dust is not totally prevented, but dust shall not penetrate in a quantity to interfere with satisfactory operation of the apparatus or to impair safety
6	Dust-tight	No ingress of dust

Second characteristic numeral

	Degree of protection	
	Brief description	Definition
0	Non-protected	-
1	Protected against vertically falling water drops	Vertically falling drops shall have no harmful effects
2	Protected against vertically falling water drops when enclosure tilted up to 15°	Vertically falling drops shall have no harmful effects when the enclosure is tilted at any angle up to 15° on either side of the vertical
3	Protected against spraying water	Water sprayed at an angle up to 60° on either side of the vertical shall have no harmful effects
4	Protected against spraying water	Water splashed against the enclosure from any direction shall have no harmful effects
5	Protected against spraying jets	Water projected in powerful jets against the enclosure from any direction shall have no harmful effects
6	Protected against powerful water jets	Water projected in powerful jets against the enclosure from any direction shall have no harmful effects
7	Protected against the effects of temporary immersion in water	Ingress of water in quantities causing harmful effects shall not be possible when the enclosure is temporarily immersed in water under standardized conditions of pressure and time
8	Protected against the effects of continuous immersion in water	Ingress of water in quantities causing harmful effects shall not be possible when the enclosure is continuously immersed in water under conditions which shall be agreed between manufacturer and user but which are more severe than for numeral 7

Derating table

ambient temperature outside of the switchboard: T_a (IEC 60439-1)

Switchboard compisition (2300×800×900)		Model type AS/AH-06/08E, AN-06/08D										AS/AH-10E, AN-10D			
Connection type		2EA-50×6					2EA-50×8								
Model type		2EA-50×6					2EA-50×8								
Busbar dimensions(mm)		2EA-50×6					2EA-50×8								
 Area of outlet vents: 350cm ² Area of intlet vents: 350cm ²	 $T_a=35^\circ\text{C}$	4					800 ↓								
		3					800 ↓	800 ↓					1000		
		2			800 ↓	800 ↓	800 ↓					1000	1000		
		1	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	1000	1000	1000	1000	1000	1000	
	 $T_a=45^\circ\text{C}$	4						800 ↓							
		3						800 ↓	800 ↓				1000		
		2			800 ↓	800 ↓	800 ↓					1000	1000		
		1	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	1000	1000	1000	1000	1000	
	 $T_a=55^\circ\text{C}$	4							800 ↓						
		3							800 ↓	800 ↓			1000		
		2			800 ↓	800 ↓	800 ↓					1000	1000		
		1	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	1000	1000	1000	1000	1000	
	 $T_a=35^\circ\text{C}$	4							800 ↓						
		3							800 ↓	800 ↓			1000		
		2			800 ↓	800 ↓	800 ↓					1000	1000		
		1	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	1000	1000	1000	1000	1000	
	 $T_a=45^\circ\text{C}$	4	800 ↓												
		3							800 ↓	800 ↓			1000		
		2			800 ↓	800 ↓	800 ↓					1000	1000		
		1	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	1000	1000	1000	1000	1000	
	 $T_a=55^\circ\text{C}$	4	800 ↓												
		3							800 ↓	800 ↓			1000		
		2			800 ↓	800 ↓	800 ↓					1000	1000		
		1	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	800 ↓	1000	1000	1000	1000	1000	

Technical information

Susol • Metasol

Installation recommendation

Derating table

ambient temperature outside of the switchboard:Ta (IEC 60439-1)

Switchboard compisition (2300×800×900)									
Connection type		1	2	3	4	1	2	3	4
Model type		AS/AH-13E, AN-13D					AS/AH-16E, AN-16D		
Busbar dimensions(mm)		2EA-75×6					2EA-60×10		
Ventilated switchboard(IP31) 	Ta=35 °C	4							
		3				1250			
		2			1250	1250			1600
		1	1250	1250	1250	1250	1600	1600	1600
	Ta=45 °C	4							
		3				1250			
		2			1250	1250			1600
		1	1250	1250	1250	1250	1600	1600	1600
	Ta=55 °C	4							
		3				1250			
		2			1250	1250			1470
		1	1250	1250	1250	1250	1500	1600	1600
Non Ventilated switchboard(IP41/54) 	Ta=35 °C	4							
		3				1250			
		2			1250	1250			1600
		1	1250	1250	1250	1250	1600	1600	1600
	Ta=45 °C	4							
		3				1250			
		2			1250	1250			1500
		1	1250	1250	1250	1250	1480	1600	1600
	Ta=55 °C	4							
		3				1250			
		2			1250	1250			1400
		1	1250	1250	1250	1250	1400	1520	1500

ambient temperature outside of the switchboard: T_a (IEC 60439-1)

Switchboard composition (2300 × 800 × 900)											
Connection type		4	3	2	1	4	3	2	1	4	3
Model type		AN/AS/AH-20E,				AN/AS/AH-25E		AN/AS/AH-32E		AS/AH-40E	
Busbar dimensions(mm)		2EA-75 × 10				3EA-75 × 10		4EA-75 × 10		4EA-75 × 10	
 Area of outlet vents: 350cm ² Area of intlet vents: 350cm ²	 $T_a=35^\circ\text{C}$	4									
		3			2000						
		2	2000	2000	2000	2400	2500	3100	3200	3400	3750
		1									
	 $T_a=45^\circ\text{C}$	4									
		3			2000						
		2	2000	2000	2000	2300	2400	2900	3100	3200	3550
		1									
	 $T_a=55^\circ\text{C}$	4									
		3			2000						
		2	2000	2000	2000	2200	2300	2700	2900	3000	3300
		1									
 Area of outlet vents: 350cm ² Area of intlet vents: 350cm ²	 $T_a=35^\circ\text{C}$	4									
		3			2000						
		2	2000	2000	2000	2115	2275	2650	2850	3040	3320
		1									
	 $T_a=45^\circ\text{C}$	4									
		3			1900						
		2	1900	1960	1960	2000	2150	2550	2700	2880	3120
		1									
	 $T_a=55^\circ\text{C}$	4									
		3			1780						
		2	1800	1920	1920	1900	2020	2370	2530	2720	2960
		1									

Technical information

Susol • Metasol


Installation recommendation

Derating table

ambient temperature outside of the switchboard:Ta (IEC 60439-1)

Switchboard compisition (2300×800×900)		AS-40F		AS-50F		AS/AH-63G		AS/AH-50G		AS/AH-63G	
Connection type		4EA-100×10	4EA-125×10	4EA-100×10	4EA-125×10	4EA-150×10	4EA-100×10	4EA-125×10	4EA-150×10	4EA-100×10	4EA-125×10
Ventilated switchboard(IP31)  Area of outlet vents: 500cm ² Area of intlet vents: 500cm ²	Ta=35 °C	4									
		3									
		2	3900	4000	4750	4800	4000	4000	4750	5000	5850
		1									6300
	Ta=45 °C	4									
		3									
		2	3850	3900	4350	4650	4000	4000	4450	4850	5670
		1									5850
	Ta=55 °C	4									
		3									
		2	3800	3850	4200	4400	4000	4000	4200	4600	5350
		1									5670
Non Ventilated switchboard(IP41/54) 	Ta=35 °C	4									
		3									
		2	3800	3900	4200	4550	4000	4000	4400	4650	5350
		1									5000
	Ta=45 °C	4									
		3									
		2	3650	3800	3950	4250	4000	4000	4100	4400	5040
		1									5350
	Ta=55 °C	4									
		3									
		2	3550	3650	3700	4050	3900	3950	3850	4150	4730
		1									5040

Protective coordination

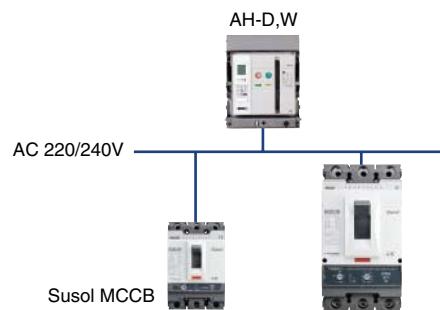

Rated voltage: AC 220/240V

Main breaker(Main ACB): Susol ACB

Downstream breaker(Downstream MCCB): Susol MCCB TD/TS series

Below protective coordination table is based on ACB equipped with OCR under arrangement of short time delay trip current as 10 times of rated current.

Susol MCCB

Downstream breaker	Upstream breaker	Product type	Susol AH series									
			AH-D,W									
			AH-06D			AH-08D			AH-10D	AH-13D	AH-16D	AH-20D
Model	Rated current [A]	Ultimate breaking capacity Icu [kA]	85									
Susol MCCB	TD100N	100	85	T	T	T	T	T	T	T	T	T
	TD100H	100	100	T	T	T	T	T	T	T	T	T
	TD100L	100	200	T	T	T	T	T	T	T	T	T
	TD160N	160	85	T	T	T	T	T	T	T	T	T
	TD160H	160	100	T	T	T	T	T	T	T	T	T
	TD160L	160	200	T	T	T	T	T	T	T	T	T
	TS100N	100	100	T	T	T	T	T	T	T	T	T
	TS100H	100	120	T	T	T	T	T	T	T	T	T
	TS100L	100	200	T	T	T	T	T	T	T	T	T
	TS160N	160	100	T	T	T	T	T	T	T	T	T
	TS160H	160	120	T	T	T	T	T	T	T	T	T
	TS160L	160	200	T	T	T	T	T	T	T	T	T
	TS250N	250	100		T	T	T	T	T	T	T	T
	TS250H	250	120		T	T	T	T	T	T	T	T
	TS250L	250	200		T	T	T	T	T	T	T	T
	TS400N	400	100			T		T	T	T	T	T
	TS400H	400	120			T		T	T	T	T	T
	TS400L	400	200			T		T	T	T	T	T
	TS630N	630	100					T	T	T	T	T
	TS630H	630	120					T	T	T	T	T
	TS630L	630	200					T	T	T	T	T
	TS800N	800	100						T	T	T	T
	TS800H	800	120						T	T	T	T
	TS800L	800	200						T	T	T	T

Note) 1. On table, protective coordination is not available for areas where number is missing.

2. On table, marked number is breaking capacity limit (Unit: kA) for protective coordination.

3. On table, areas that is marked as T are capable of total discrimination up to its Downstream breaker's rated short breaking capacity.

Technical information

Susol • Metasol


Protective coordination

Rated voltage: AC 220/240V

Main breaker(Main ACB): Susol ACB

Downstream breaker(Downstream MCCB): Susol MCCB TD/TS series

Below protective coordination table is based on ACB equipped with OCR under arrangement of short time delay trip current as 10 times of rated current.

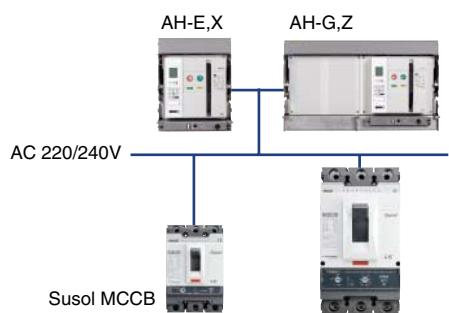


Upstream breaker		Product type	Susol AH series												
			AH-E,X										AH-G,Z		
			AH-06E	AH-08E	AH-10E	AH-13E	AH-16E	AH-20E	AH-25E	AH-32E	AH-40E	AH-40G	AH-50G	AH-63G	
Susol MCCB	TD100N	100	85	T	T	T	T	T	T	T	T	T	T	T	
	TD100H	100	100	T	T	T	T	T	T	T	T	T	T	T	
	TD100L	100	200	T	T	T	T	T	T	T	T	T	T	T	
	TD160N	160	85	T	T	T	T	T	T	T	T	T	T	T	
	TD160H	160	100	T	T	T	T	T	T	T	T	T	T	T	
	TD160L	160	200	T	T	T	T	T	T	T	T	T	T	T	
	TS100N	100	100	T	T	T	T	T	T	T	T	T	T	T	
	TS100H	100	120	T	T	T	T	T	T	T	T	T	T	T	
	TS100L	100	200	T	T	T	T	T	T	T	T	T	T	T	
	TS160N	160	100	T	T	T	T	T	T	T	T	T	T	T	
	TS160H	160	120	T	T	T	T	T	T	T	T	T	T	T	
	TS160L	160	200	T	T	T	T	T	T	T	T	T	T	T	
	TS250N	250	100	T	T	T	T	T	T	T	T	T	T	T	
	TS250H	250	120	T	T	T	T	T	T	T	T	T	T	T	
	TS250L	250	200	T	T	T	T	T	T	T	T	T	T	T	
	TS400N	400	100		T	T	T	T	T	T	T	T	T	T	
	TS400H	400	120		T	T	T	T	T	T	T	T	T	T	
	TS400L	400	200		T	T	T	T	T	T	T	T	T	T	
	TS630N	630	100			T	T	T	T	T	T	T	T	T	
	TS630H	630	120			T	T	T	T	T	T	T	T	T	
	TS630L	630	200			T	T	T	T	T	T	T	T	T	
	TS800N	800	100				T	T	T	T	T	T	T	T	
	TS800H	800	120				T	T	T	T	T	T	T	T	
	TS800L	800	200				T	T	T	T	T	T	T	T	

Note) 1. On table, protective coordination is not available for areas where number is missing.

2. On table, marked number is breaking capacity limit (Unit: kA) for protective coordination.

3. On table, areas that is marked as T are capable of total discrimination up to its Downstream breaker's rated short breaking capacity.

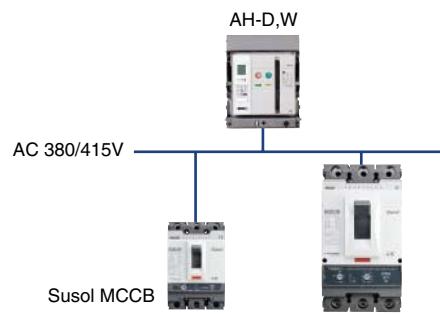

Rated voltage: AC 380/415V

Main breaker(Main ACB): Susol ACB

Downstream breaker(Downstream MCCB): Susol MCCB TD/TS series

Below protective coordination table is based on ACB equipped with OCR under arrangement of short time delay trip current as 10 times of rated current.

Susol MCCB

Downstream breaker	Upstream breaker	Product type	Susol AH series													
			AH-06D			AH-08D			AH-10D		AH-13D		AH-16D		AH-20D	
			Rated current [A]	200	400	630	400	630	800	1000	1250	1600	2000			
		Short time delay trip current (Max. 10In) Is [kA]		3	6	9.45	6	9.45	12	15	18.75	24	30			
Susol MCCB	Model	Rated current [A]	Ultimate breaking capacity Icu [kA]	85												
	TD100N	100	50	T	T	T	T	T	T	T	T	T	T			
	TD100H	100	85	T	T	T	T	T	T	T	T	T	T			
	TD100L	100	150	T	T	T	T	T	T	T	T	T	T			
	TD160N	160	50	T	T	T	T	T	T	T	T	T	T			
	TD160H	160	85	T	T	T	T	T	T	T	T	T	T			
	TD160L	160	150	T	T	T	T	T	T	T	T	T	T			
	TS100N	100	50	T	T	T	T	T	T	T	T	T	T			
	TS100H	100	85	T	T	T	T	T	T	T	T	T	T			
	TS100L	100	150	T	T	T	T	T	T	T	T	T	T			
	TS160N	160	50	T	T	T	T	T	T	T	T	T	T			
	TS160H	160	85	T	T	T	T	T	T	T	T	T	T			
	TS160L	160	150	T	T	T	T	T	T	T	T	T	T			
	TS250N	250	50		T	T	T	T	T	T	T	T	T			
	TS250H	250	85		T	T	T	T	T	T	T	T	T			
	TS250L	250	150		T	T	T	T	T	T	T	T	T			
	TS400N	400	65			T		T	T	T	T	T	T			
	TS400H	400	85			T		T	T	T	T	T	T			
	TS400L	400	150			T		T	T	T	T	T	T			
	TS630N	630	65					T	T	T	T	T	T			
	TS630H	630	85					T	T	T	T	T	T			
	TS630L	630	150					T	T	T	T	T	T			
	TS800N	800	65						T	T	T	T	T			
	TS800H	800	100						T	T	T	T	T			
	TS800L	800	150						T	T	T	T	T			

Note) 1. On table, protective coordination is not available for areas where number is missing.

2. On table, marked number is breaking capacity limit (Unit: kA) for protective coordination.

3. On table, areas that is marked as T are capable of total discrimination up to its Downstream breaker's rated short breaking capacity.

Technical information

Susol • Metasol


Protective coordination

Rated voltage: AC 380/415V

Main breaker(Main ACB): Susol ACB

Downstream breaker(Downstream MCCB): Susol MCCB TD/TS series

Below protective coordination table is based on ACB equipped with OCR under arrangement of short time delay trip current as 10 times of rated current.

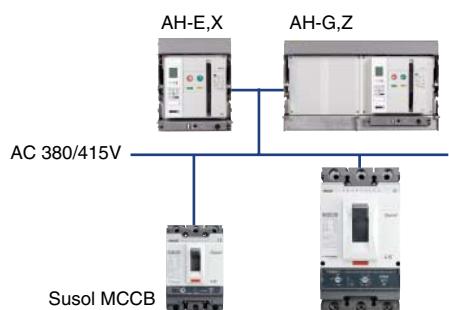


Upstream breaker		Product type	Susol AH series													
			AH-E,X										AH-G,Z			
			AH-06E	AH-08E	AH-10E	AH-13E	AH-16E	AH-20E	AH-25E	AH-32E	AH-40E	AH-40G	AH-50G	AH-63G		
Downstream breaker	Model	Rated current [A]	400	630	800	1000	1250	1600	2000	2500	3200	4000	4000	5000	6300	
		Short time delay trip current (Max. 10In) Is[kA]	6	9.45	12	15	18.75	24	30	37.5	48	60	60	75	94.5	
Model		Rated current [A]	Ultimate breaking capacity Icu [kA]												100	150
Susol MCCB	TD100N	100	50	T	T	T	T	T	T	T	T	T	T	T	T	
	TD100H	100	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TD100L	100	150	T	T	T	T	T	T	T	T	T	T	T	T	
	TD160N	160	50	T	T	T	T	T	T	T	T	T	T	T	T	
	TD160H	160	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TD160L	160	150	T	T	T	T	T	T	T	T	T	T	T	T	
	TS100N	100	50	T	T	T	T	T	T	T	T	T	T	T	T	
	TS100H	100	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TS100L	100	150	T	T	T	T	T	T	T	T	T	T	T	T	
	TS160N	160	50	T	T	T	T	T	T	T	T	T	T	T	T	
	TS160H	160	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TS160L	160	150	T	T	T	T	T	T	T	T	T	T	T	T	
	TS250N	250	50	T	T	T	T	T	T	T	T	T	T	T	T	
	TS250H	250	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TS250L	250	150	T	T	T	T	T	T	T	T	T	T	T	T	
	TS400N	400	65		T	T	T	T	T	T	T	T	T	T	T	
	TS400H	400	85		T	T	T	T	T	T	T	T	T	T	T	
	TS400L	400	150		T	T	T	T	T	T	T	T	T	T	T	
	TS630N	630	65			T	T	T	T	T	T	T	T	T	T	
	TS630H	630	85			T	T	T	T	T	T	T	T	T	T	
	TS630L	630	150			T	T	T	T	T	T	T	T	T	T	
	TS800N	800	65				T	T	T	T	T	T	T	T	T	
	TS800H	800	100				T	T	T	T	T	T	T	T	T	
	TS800L	800	150				T	T	T	T	T	T	T	T	T	

Note) 1. On table, protective coordination is not available for areas where number is missing.

2. On table, marked number is breaking capacity limit (Unit: kA) for protective coordination.

3. On table, areas that is marked as T are capable of total discrimination up to its Downstream breaker's rated short breaking capacity.

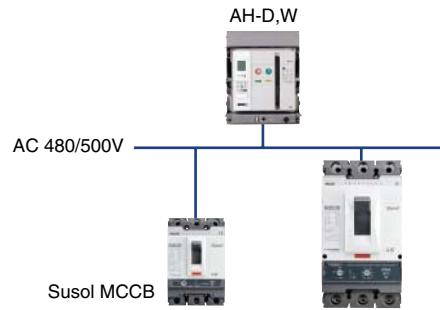

Rated voltage: AC 480/500V

Main breaker(Main ACB): Susol ACB

Downstream breaker(Downstream MCCB): Susol MCCB TD/TS series

Below protective coordination table is based on ACB equipped with OCR under arrangement of short time delay trip current as 10 times of rated current.

Susol MCCB

Downstream breaker	Upstream breaker	Product type	Susol AH series													
			AH-06D			AH-08D			AH-10D		AH-13D		AH-16D		AH-20D	
			Rated current [A]	200	400	630	400	630	800	1000	1250	1600	2000			
		Short time delay trip current (Max. 10In) Is [kA]		3	6	9.45	6	9.45	12	15	18.75	24	30			
Susol MCCB	Model	Rated current [A]	Ultimate breaking capacity Icu [kA]	85												
	TD100N	100	30	T	T	T	T	T	T	T	T	T	T			
	TD100H	100	50	T	T	T	T	T	T	T	T	T	T			
	TD100L	100	65	T	T	T	T	T	T	T	T	T	T			
	TD160N	160	30	T	T	T	T	T	T	T	T	T	T			
	TD160H	160	50	T	T	T	T	T	T	T	T	T	T			
	TD160L	160	65	T	T	T	T	T	T	T	T	T	T			
	TS100N	100	42	T	T	T	T	T	T	T	T	T	T			
	TS100H	100	65	T	T	T	T	T	T	T	T	T	T			
	TS100L	100	85	T	T	T	T	T	T	T	T	T	T			
	TS160N	160	42	T	T	T	T	T	T	T	T	T	T			
	TS160H	160	65	T	T	T	T	T	T	T	T	T	T			
	TS160L	160	85	T	T	T	T	T	T	T	T	T	T			
	TS250N	250	42		T	T	T	T	T	T	T	T	T			
	TS250H	250	65		T	T	T	T	T	T	T	T	T			
	TS250L	250	85		T	T	T	T	T	T	T	T	T			
	TS400N	400	42			T		T	T	T	T	T	T			
	TS400H	400	65			T		T	T	T	T	T	T			
	TS400L	400	85			T		T	T	T	T	T	T			
	TS630N	630	42					T	T	T	T	T	T			
	TS630H	630	65					T	T	T	T	T	T			
	TS630L	630	85					T	T	T	T	T	T			
	TS800N	800	42						T	T	T	T	T			
	TS800H	800	85						T	T	T	T	T			
	TS800L	800	100						T	T	T	T	T			

Note) 1. On table, protective coordination is not available for areas where number is missing.

2. On table, marked number is breaking capacity limit (Unit: kA) for protective coordination.

3. On table, areas that is marked as T are capable of total discrimination up to its Downstream breaker's rated short breaking capacity.

Technical information


Susol • Metasol

Rated voltage: AC 480/500V

Main breaker(Main ACB): Susol ACB

Downstream breaker(Downstream MCCB): Susol MCCB TD/TS series

Below protective coordination table is based on ACB equipped with OCR under arrangement of short time delay trip current as 10 times of rated current.

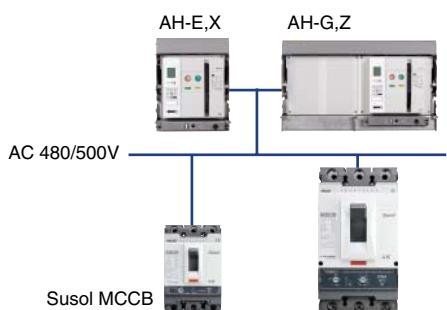

Upstream breaker		Product type	Susol AH series													
			AH-E,X										AH-G,Z			
			AH-06E	AH-08E	AH-10E	AH-13E	AH-16E	AH-20E	AH-25E	AH-32E	AH-40E	AH-40G	AH-50G	AH-63G		
Downstream breaker	Model	Rated current [A]	Ultimate breaking capacity Icu [kA]	6	9.45	12	15	18.75	24	30	37.5	48	60	60	75	94.5
Susol MCCB	TD100N	100	30	T	T	T	T	T	T	T	T	T	T	T	T	
	TD100H	100	50	T	T	T	T	T	T	T	T	T	T	T	T	
	TD100L	100	65	T	T	T	T	T	T	T	T	T	T	T	T	
	TD160N	160	30	T	T	T	T	T	T	T	T	T	T	T	T	
	TD160H	160	50	T	T	T	T	T	T	T	T	T	T	T	T	
	TD160L	160	65	T	T	T	T	T	T	T	T	T	T	T	T	
	TS100N	100	42	T	T	T	T	T	T	T	T	T	T	T	T	
	TS100H	100	65	T	T	T	T	T	T	T	T	T	T	T	T	
	TS100L	100	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TS160N	160	42	T	T	T	T	T	T	T	T	T	T	T	T	
	TS160H	160	65	T	T	T	T	T	T	T	T	T	T	T	T	
	TS160L	160	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TS250N	250	42	T	T	T	T	T	T	T	T	T	T	T	T	
	TS250H	250	65	T	T	T	T	T	T	T	T	T	T	T	T	
	TS250L	250	85	T	T	T	T	T	T	T	T	T	T	T	T	
	TS400N	400	42		T	T	T	T	T	T	T	T	T	T	T	
	TS400H	400	65		T	T	T	T	T	T	T	T	T	T	T	
	TS400L	400	85		T	T	T	T	T	T	T	T	T	T	T	
	TS630N	630	42			T	T	T	T	T	T	T	T	T	T	
	TS630H	630	65			T	T	T	T	T	T	T	T	T	T	
	TS630L	630	85			T	T	T	T	T	T	T	T	T	T	
	TS800N	800	42			T	T	T	T	T	T	T	T	T	T	
	TS800H	800	85			T	T	T	T	T	T	T	T	T	T	
	TS800L	800	100			T	T	T	T	T	T	T	T	T	T	

Note) 1. On table, protective coordination is not available for areas where number is missing.

2. On table, marked number is breaking capacity limit (Unit: kA) for protective coordination.

3. On table, areas that is marked as T are capable of total discrimination up to its Downstream breaker's rated short breaking capacity.

Standards & Approval

Susol • Metasol



AH, AS, AN series Air Circuit Breakers comply with the following international standard;

IEC 60947-1

Low-voltage switchgear and controlgear
- Part 1: General rules



IEC 60947-2

Low-voltage switchgear and controlgear
- Part 2: Circuit-breakers



The following certificates are available on a request.

- CE Declaration of conformity
- Certificate of conformance test (CB) - IEC 60947
- Full type test report issued by KEMA
- Letter of origin
- Taiwan TPC



CE conformity marking

The CE conformity marking shall indicate conformity to all the obligations imposed on the manufacturer, as regards his products, by virtue of the European Community directives providing for the affixing of the CE marking.

When the CE marking is affixed on a product, it represents a declaration of the manufacturer or of his authorized representative that the product in question conforms to all the applicable provisions including the conformity assessment procedures. This prevents the Member States from limiting the marketing and putting into service of products bearing the CE marking, unless this measure is justified by the proved non-conformity of the product.



IECEE CB SCHEME

The IECEE CB Scheme is the world's first truly international system for acceptance of test reports dealing with the safety of electrical and electronic products. It is a multilateral agreement among participating countries and certification organizations. A manufacturer utilizing a CB test report issued by one of these organizations can obtain national certification in all other member countries of the CB Scheme.



The Scheme is based on the use of international (IEC) Standards. If some members' national standards are not yet completely harmonized with IEC Standards, national differences are permitted if clearly declared to all other members. The CB Scheme utilizes CB Test Certificates to attest that product samples have successfully passed the appropriate tests and are in compliance with the requirements of the relevant IEC Standard and with the declared national differences of various member countries.



The main objective of the Scheme, is to facilitate trade by promoting harmonization of the national standards with international Standards and cooperation among product certifiers worldwide in order to bring product manufacturers a step closer to the ideal concept of "one product, one test, one mark, where applicable".



- LR, ABS, DNV, KR, BV, GL, RINA, NK
- GOST, TPC



Time chart

Susol • Metasol

Long time

xlr	tr	0.5	1	2	4	8	12	16	20
1.11	58806	117611	235223	470445	940890	1411335	1881780	2352225	
1.15	36041	72082	144163	288326	576652	864978	1153305	1441631	
1.20	26827	53654	107308	214615	429231	643846	858461	1073077	
1.25	21777	43553	87106	174212	348424	522636	696848	871060	
1.30	18408	36817	73634	147268	294535	441803	589071	736338	
1.35	15947	31895	63789	127579	255157	382736	510314	637893	
1.40	14049	28098	56197	112393	224787	337180	449573	561967	
1.45	12532	25063	50126	100252	200504	300756	401009	501261	
1.50	11286	22573	45145	90290	180580	270870	361160	451450	
1.55	10244	20488	40977	81954	163907	245861	327814	409768	
1.60	9359	18717	37434	74869	149737	224606	299474	374343	
1.65	8596	17193	34386	68771	137542	206313	275084	343855	
1.70	7934	15867	31734	63468	126936	190404	253873	317341	
1.75	7352	14704	29408	58815	117631	176446	235261	294077	
1.80	6838	13675	27351	54702	109404	164106	218808	273509	
1.85	6380	12760	25521	51041	102082	153123	204164	255205	
1.90	5970	11941	23882	47764	95528	143292	191056	238820	
1.95	5602	11204	22408	44815	89630	134446	179261	224076	
2.00	5269	10537	21075	42150	84299	126449	168598	210748	
2.05	4966	9932	19865	39730	79459	119189	158919	198649	
2.10	4691	9381	18762	37525	75049	112574	150099	187623	
2.15	4439	8877	17754	35508	71017	106525	142034	177542	
2.20	4207	8415	16829	33659	67318	100976	134635	168294	
2.25	3995	7989	15979	31957	63914	95871	127829	159786	
2.30	3798	7597	15194	30387	60775	91162	121550	151937	
2.35	3617	7234	14468	28936	57871	86807	115742	144678	
2.40	3449	6897	13795	27590	55180	82769	110359	137949	
2.45	3292	6585	13170	26339	52679	79018	105358	131697	
2.50	3147	6294	12588	25176	50351	75527	100702	125878	
2.55	3011	6022	12045	24090	48180	72269	96359	120449	
2.60	2884	5769	11538	23075	46151	69226	92301	115377	
2.65	2766	5531	11063	22126	44251	66377	88503	110628	
2.70	2654	5309	10618	21235	42471	63706	84941	106177	
2.75	2550	5100	10200	20399	40799	61198	81597	101997	
2.80	2452	4903	9807	19613	39226	58840	78453	98066	
2.85	2359	4718	9436	18873	37746	56619	75491	94364	
2.90	2272	4544	9087	18175	36350	54524	72699	90874	
2.95	2189	4379	8758	17516	35032	52547	70063	87579	
3.00	2112	4223	8446	16893	33786	50679	67572	84464	
3.05	2038	4076	8152	16303	32607	48910	65214	81517	
3.10	1968	3936	7872	15745	31490	47235	62980	78725	
3.15	1902	3804	7608	15215	30431	45646	60862	76077	
3.20	1839	3678	7356	14713	29425	44138	58851	73563	
3.25	1779	3559	7117	14235	28470	42705	56940	71175	
3.30	1723	3445	6890	13781	27561	41342	55122	68903	
3.35	1669	3337	6674	13348	26696	40044	53392	66741	
3.40	1617	3234	6468	12936	25872	38808	51744	64680	
3.45	1568	3136	6272	12543	25086	37629	50172	62715	
3.50	1521	3042	6084	12168	24336	36504	48672	60841	
3.55	1476	2952	5905	11810	23620	35430	47240	59050	
3.60	1433	2867	5734	11468	22935	34403	45871	57338	
3.65	1393	2785	5570	11140	22281	33421	44561	55702	
3.70	1353	2707	5413	10827	21654	32481	43308	54135	
3.75	1316	2632	5263	10527	21054	31581	42108	52634	
3.80	1280	2560	5120	10239	20479	30718	40957	51196	
3.85	1245	2491	4982	9963	19927	29890	39854	49817	
3.90	1212	2425	4849	9699	19398	29096	38795	48494	

xlr	tr	0.5	1	2	4	8	12	16	20
3.95	1181	2361	4722	9445	18889	28334	37779	47223	
4.00	1150	2300	4600	9201	18401	27602	36802	46003	
4.05	1121	2241	4483	8966	17932	26898	35864	44830	
4.10	1093	2185	4370	8740	17481	26221	34961	43701	
4.15	1065	2131	4262	8523	17046	25569	34092	42615	
4.20	1039	2079	4157	8314	16628	24942	33256	41570	
4.25	1014	2028	4056	8113	16225	24338	32451	40563	
4.30	990	1980	3959	7919	15837	23756	31674	39593	
4.35	966	1933	3866	7731	15463	23194	30926	38657	
4.40	944	1888	3776	7551	15102	22653	30204	37755	
4.45	922	1844	3688	7377	14754	22131	29507	36884	
4.50	901	1802	3604	7209	14417	21626	28835	36043	
4.55	881	1762	3523	7046	14093	21139	28185	35231	
4.60	861	1722	3445	6889	13779	20668	27557	34447	
4.65	842	1684	3369	6738	13475	20213	26951	33688	
4.70	824	1648	3295	6591	13182	19773	26364	32955	
4.75	806	1612	3225	6449	12898	19347	25796	32245	
4.80	789	1578	3156	6312	12624	18935	25247	31559	
4.85	772	1545	3089	6179	12358	18536	24715	30894	
4.90	756	1513	3025	6050	12100	18150	24200	30250	
4.95	741	1481	2963	5925	11851	17776	23701	29627	
5.00	726	1451	2902	5804	11609	17413	23218	29022	
5.05	711	1422	2844	5687	11374	17062	22749	28436	
5.10	697	1393	2787	5574	11147	16721	22294	27868	
5.15	683	1366	2732	5463	10927	16390	21853	27317	
5.20	670	1339	2678	5356	10713	16069	21425	26782	
5.25	657	1313	2626	5252	10505	15757	21010	26262	
5.30	644	1288	2576	5152	10303	15455	20607	25758	
5.35	632	1263	2527	5054	10107	15161	20215	25268	
5.40	620	1240	2479	4959	9917	14876	19834	24793	
5.45	608	1217	2433	4866	9732	14598	19464	24330	
5.50	597	1194	2388	4776	9552	14329	19105	23881	
5.55	586	1172	2344	4689	9378	14066	18755	23444	
5.60	575	1151	2302	4604	9207	13811	18415	23019	
5.65	565	1130	2261	4521	9042	13563	18084	22605	
5.70	555	1110	2220	4441	8881	13322	17762	22203	
5.75	545	1091	2181	4362	8724	13087	17449	21811	
5.80	536	1071	2143	4286	8572	12858	17144	21430	
5.85	526	1053	2106	4212	8423	12635	16847	21058	
5.90	517	1035	2070	4139	8279	12418	16557	20697	
5.95	509	1017	2034	4069	8138	12206	16275	20344	
6.00	500	1000	2000	4000	8000	12000	16000	20001	
6.05	492	983	1967	3933	7866	11799	15733	19666	
6.10	483	967	1934	3868	7736	11604	15471	19339	
6.15	476	951	1902	3804	7608	11413	15217	19021	
6.20	468	936	1871	3742	7484	11226	14968	18710	
6.25	460	920	1841	3682	7363	11045	14726	18408	
6.30	453	906	1811	3622	7245	10867	14490	18112	
6.35	446	891	1782	3565	7129	10694	14259	17823	
6.40	439	877	1754	3508	7017	10525	14034	17542	
6.45	432	863	1727	3453	6907	10360	13814	17267	
6.50	425	850	1700	3400	6799	10199	13599	16998	
6.55	418								

$\times \text{lr}$	tr	0.5	1	2	4	8	12	16	20
6.80	388	776	1551	3102	6205	9307	12410	15512	
6.85	382	764	1528	3057	6113	9170	12227	15283	
6.90	376	753	1506	3012	6024	9036	12048	15060	
6.95	371	742	1484	2968	5936	8905	11873	14841	
7.00	366	731	1463	2925	5851	8776	11702	14627	
7.05	360	721	1442	2884	5767	8651	11534	14418	
7.10	355	711	1421	2843	5685	8528	11371	14213	
7.15	350	701	1401	2803	5605	8408	11210	14013	
7.20	345	691	1382	2763	5527	8290	11053	13816	
7.25	341	681	1362	2725	5450	8175	10899	13624	
7.30	336	672	1344	2687	5374	8062	10749	13436	
7.35	331	663	1325	2650	5301	7951	10601	13252	
7.40	327	654	1307	2614	5229	7843	10457	13071	
7.45	322	645	1289	2579	5158	7737	10316	12895	
7.50	318	636	1272	2544	5089	7633	10177	12721	
7.55	314	628	1255	2510	5021	7531	10041	12552	
7.60	310	619	1239	2477	4954	7431	9908	12385	
7.65	306	611	1222	2444	4889	7333	9778	12222	
7.70	302	603	1206	2412	4825	7237	9650	12062	
7.75	298	595	1191	2381	4762	7143	9524	11906	
7.80	294	588	1175	2350	4701	7051	9401	11752	
7.85	290	580	1160	2320	4640	6961	9281	11601	
7.90	286	573	1145	2291	4581	6872	9163	11453	
7.95	283	565	1131	2262	4523	6785	9047	11308	
8.00	279	558	1117	2233	4466	6700	8933	11166	
8.05	276	551	1103	2205	4411	6616	8821	11026	
8.10	272	544	1089	2178	4356	6534	8712	10889	
8.15	269	538	1076	2151	4302	6453	8604	10755	
8.20	266	531	1062	2125	4249	6374	8498	10623	
8.25	262	525	1049	2099	4197	6296	8395	10494	
8.30	259	518	1037	2073	4147	6220	8293	10366	
8.35	256	512	1024	2048	4097	6145	8193	10242	
8.40	253	506	1012	2024	4048	6071	8095	10119	
8.45	250	500	1000	2000	3999	5999	7999	9998	
8.50	247	494	988	1976	3952	5928	7904	9880	
8.55	244	488	976	1953	3906	5858	7811	9764	
8.60	241	482	965	1930	3860	5790	7720	9650	
8.65	238	477	954	1908	3815	5723	7630	9538	
8.70	236	471	943	1886	3771	5657	7542	9428	
8.75	233	466	932	1864	3728	5592	7455	9319	
8.80	230	461	921	1843	3685	5528	7370	9213	
8.85	228	455	911	1822	3643	5465	7287	9108	
8.90	225	450	901	1801	3602	5403	7204	9005	
8.95	223	445	890	1781	3562	5343	7123	8904	
9.00	220	440	880	1761	3522	5283	7044	8805	
9.05	218	435	871	1741	3483	5224	6966	8707	
9.10	215	431	861	1722	3444	5167	6889	8611	
9.15	213	426	852	1703	3407	5110	6813	8516	
9.20	211	421	842	1685	3369	5054	6739	8423	
9.25	208	417	833	1666	3333	4999	6666	8332	
9.30	206	412	824	1648	3297	4945	6594	8242	
9.35	204	408	815	1631	3261	4892	6523	8153	
9.40	202	403	807	1613	3227	4840	6453	8066	
9.45	200	399	798	1596	3192	4788	6384	7981	
9.50	197	395	790	1579	3159	4738	6317	7896	
9.55	195	391	781	1563	3125	4688	6251	7813	
9.60	193	387	773	1546	3093	4639	6185	7732	

$\times \text{lr}$	tr	0.5	1	2	4	8	12	16	20
9.65	191	383	765	1530	3060	4591	6121	7651	
9.70	189	379	757	1514	3029	4543	6058	7572	
9.75	187	375	749	1499	2998	4496	5995	7494	
9.80	185	371	742	1483	2967	4450	5934	7417	
9.85	184	367	734	1468	2937	4405	5873	7342	
9.90	182	363	727	1453	2907	4360	5814	7267	
9.95	180	360	719	1439	2878	4316	5755	7194	
10.00	178	356	712	1424	2849	4273	5697	7122	

Short time

$\times \text{tsd}$	tr	0.1	0.2	0.3	0.4	$\times \text{tsd}$	tr	0.1	0.2	0.3	0.4
1.40	5102	10204	15306	20408		3.40	865	1730	2595	3460	
1.45	4756	9512	14269	19025		3.45	840	1680	2520	3361	
1.50	4444	8889	13333	17778		3.50	816	1633	2449	3265	
1.55	4162	8325	12487	16649		3.55	793	1587	2380	3174	
1.60	3906	7813	11719	15625		3.60	772	1543	2315	3086	
1.65	3673	7346	11019	14692		3.65	751	1501	2252	3002	
1.70	3460	6920	10381	13841		3.70	730	1461	2191	2922	
1.75	3265	6531	9796	13061		3.75	711	1422	2133	2844	
1.80	3086	6173	9259	12346		3.80	693	1385	2078	2770	
1.85	2922	5844	8766	11687		3.85	675	1349	2024	2699	
1.90	2770	5540	8310	11080		3.90	657	1315	1972	2630	
1.95	2630	5260	7890	10519		3.95	641	1282	1923	2564	
2.00	2500	5000	7500	10000		4.00	625	1250	1875	2500	
2.05	2380	4759	7139	9518		4.05	610	1219	1829	2439	
2.10	2268	4535	6803	9070		4.10	595	1190	1785	2380	
2.15	2163	4327	6490	8653		4.15	581	1161	1742	2323	
2.20	2066	4132	6198	8264		4.20	567	1134	1701	2268	
2.25	1975	3951	5926	7901		4.25	554	1107	1661	2215	
2.30	1890	3781	5671	7561		4.30	541	1082	1622	2163	
2.35	1811	3622	5432	7243		4.35	528	1057	1585	2114	
2.40	1736	3472	5208	6944		4.40	517	1033	1550	2066	
2.45	1666	3332	4998	6664		4.45	505	1010	1515	2020	
2.50	1600	3200	4800	6400		4.50	494	988	1481	1975	
2.55	1538	3076	4614	6151		4.55	483	966	1449	1932	
2.60	1479	2959	4438	5917		4.60	473	945	1418	1890	
2.65	1424	2848	4272	5696		4.65	462	925	1387	1850	
2.70	1372	2743	4115	5487		4.70	453	905	1358	1811	
2.75	1322	2645	3967	5289		4.75	443	886	1330	1773	
2.80	1276	2551	3827	5102		4.80	434	868	1302	1736	
2.85	1231	2462	3693	4925		4.85	425	850	1275	1700	
2.90	1189	2378	3567	4756		4.90	416	833	1249	1666	
2.95	1149	2298	3447	4596		4.95	408	816	1224	1632	
3.00	1111	2222	3333	4444		5.00	400	800	1200	1600	
3.05	1075	2150	3225	4300		5.05	392	784	1176	1568	
3.10	1041	2081	3122	4162		5.10	384	769	1153	1538	
3.15	1008	2016	3023	4031		5.15	377	754	1131	1508	
3.20	977	1953	2930	3906		5.20	370	740	1109	1479	
3.25	947	1893	2840	3787		5.25	363	726	1088	1451	
3.30	918	1837	2755	3673		5.30	356	712	1068	1424	
3.35	891	1782	2673	3564		5.35	349	699	1048	1398	

Time chart

Susol • Metasol

Short time

$\times I_r$	tsd	0.1	0.2	0.3	0.4
5.40	343	686	1029	1372	
5.45	337	673	1010	1347	
5.50	331	661	992	1322	
5.55	325	649	974	1299	
5.60	319	638	957	1276	
5.65	313	627	940	1253	
5.70	308	616	923	1231	
5.75	302	605	907	1210	
5.80	297	595	892	1189	
5.85	292	584	877	1169	
5.90	287	575	862	1149	
5.95	282	565	847	1130	
6.00	278	556	833	1111	
6.05	273	546	820	1093	
6.10	269	537	806	1075	
6.15	264	529	793	1058	
6.20	260	520	780	1041	
6.25	256	512	768	1024	
6.30	252	504	756	1008	
6.35	248	496	744	992	
6.40	244	488	732	977	
6.45	240	481	721	961	
6.50	237	473	710	947	
6.55	233	466	699	932	
6.60	230	459	689	918	
6.65	226	452	678	905	
6.70	223	446	668	891	
6.75	219	439	658	878	
6.80	216	433	649	865	
6.85	213	426	639	852	
6.90	210	420	630	840	
6.95	207	414	621	828	
7.00	204	408	612	816	
7.05	201	402	604	805	
7.10	198	397	595	793	
7.15	196	391	587	782	
7.20	193	386	579	772	
7.25	190	380	571	761	
7.30	188	375	563	751	
7.35	185	370	555	740	
7.40	183	365	548	730	
7.45	180	360	541	721	
7.50	178	356	533	711	
7.55	175	351	526	702	
7.60	173	346	519	693	
7.65	171	342	513	683	
7.70	169	337	506	675	
7.75	166	333	499	666	
7.80	164	329	493	657	
7.85	162	325	487	649	
7.90	160	320	481	641	
7.95	158	316	475	633	
8.00	156	312	469	625	
8.05	154	309	463	617	
8.10	152	305	457	610	
8.15	151	301	452	602	
8.20	149	297	446	595	

Ground fault

$\times I_n$	tg	0.1	0.2	0.3	0.4
0.20	2500	5000	7500	10000	
0.21	2268	4535	6803	9070	
0.22	2066	4132	6198	8264	
0.23	1890	3781	5671	7561	
0.24	1736	3472	5208	6944	
0.25	1600	3200	4800	6400	
0.26	1479	2959	4438	5917	
0.27	1372	2743	4115	5487	
0.28	1276	2551	3827	5102	
0.29	1189	2378	3567	4756	
0.30	1111	2222	3333	4444	
0.31	1041	2081	3122	4162	
0.32	977	1953	2930	3906	
0.33	918	1837	2755	3673	
0.34	865	1730	2595	3460	
0.35	816	1633	2449	3265	
0.36	772	1543	2315	3086	
0.37	730	1461	2191	2922	
0.38	693	1385	2078	2770	
0.39	657	1315	1972	2630	
0.40	625	1250	1875	2500	
0.41	595	1190	1785	2380	
0.42	567	1134	1701	2268	
0.43	541	1082	1622	2163	
0.44	517	1033	1550	2066	
0.45	494	988	1481	1975	
0.46	473	945	1418	1890	
0.47	453	905	1358	1811	
0.48	434	868	1302	1736	
0.49	416	833	1249	1666	
0.50	400	800	1200	1600	
0.51	384	769	1153	1538	
0.52	370	740	1109	1479	
0.53	356	712	1068	1424	
0.54	343	686	1029	1372	
0.55	331	661	992	1322	
0.56	319	638	957	1276	
0.57	308	616	923	1231	
0.58	297	595	892	1189	
0.59	287	575	862	1149	
0.60	278	556	833	1111	
0.61	269	537	806	1075	
0.62	260	520	780	1041	
0.63	252	504	756	1008	
0.64	244	488	732	977	
0.65	237	473	710	947	
0.66	230	459	689	918	
0.67	223	446	668	891	
0.68	216	433	649	865	
0.69	210	420	630	840	
0.70	204	408	612	816	
0.71	198	397	595	793	
0.72	193	386	579	772	
0.73	188	375	563	751	
0.74	183	365	548	730	
0.75	178	356	533	711	
0.76	173	346	519	693	

Ordering sheet

For faster quote processing, please use the following request for ordering sheet. For each section, check the applicable box or enter value corresponding to your choice.

Receipt	LS Industrial System co., Ltd				Order date					Distributor name																																																																																																																																																																																																																																																																																																																											
Project					Contractor																																																																																																																																																																																																																																																																																																																																
Delivery place					Delivery date					PNL Maker																																																																																																																																																																																																																																																																																																																											
ACB main body	Type of ACB	<input type="checkbox"/> AH <input type="checkbox"/> AN Note 1 <input type="checkbox"/> AS				Quantity																																																																																																																																																																																																																																																																																																																															
	Frame size	<input type="checkbox"/> D (630~2000AF) Note 1 <input type="checkbox"/> E (2000~4000AF)				<input type="checkbox"/> F (4000~5000AF)		<input type="checkbox"/> G (4000~6300AF)																																																																																																																																																																																																																																																																																																																													
	Ratings					AF																																																																																																																																																																																																																																																																																																																															
	Rated current (CT)					A																																																																																																																																																																																																																																																																																																																															
	Trip relay	Trip relay		<input type="checkbox"/> NO <input type="checkbox"/> YES																																																																																																																																																																																																																																																																																																																																	
		<table border="1"> <thead> <tr> <th colspan="2">Type</th> <th colspan="2">Frequency</th> <th colspan="2">Control voltage</th> <th colspan="2">Comm.</th> <th colspan="2">Optional function</th> <th colspan="2">Type</th> <th colspan="2">Frequency</th> <th colspan="2">Control voltage</th> <th colspan="2">Comm.</th> <th colspan="3">Optional function</th> </tr> <tr> <th>60Hz</th> <th>50Hz</th> <th>No</th> <th>AC/DC 100~250V</th> <th>DC 24~60V</th> <th>No</th> <th>Yes</th> <th>Earth leakage detection</th> <th>External CT ground fault</th> <th>60Hz</th> <th>50Hz</th> <th>AC/DC 100~250V</th> <th>DC 24~60V</th> <th>Comm.</th> <th>Earth leakage detection</th> <th>External CT ground fault</th> <th>Pre-Trip Alarm</th> </tr> </thead> <tbody> <tr> <td rowspan="7">N</td> <td>Normal</td> <td><input type="checkbox"/> NGO</td> <td><input type="checkbox"/> NG5</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td><input type="checkbox"/> PC1</td> <td><input type="checkbox"/> PC6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AGO</td> <td><input type="checkbox"/> AG5</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td><input type="checkbox"/> PC2</td> <td><input type="checkbox"/> PC7</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AG1</td> <td><input type="checkbox"/> AG6</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td><input type="checkbox"/> PK1</td> <td><input type="checkbox"/> PK6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AG2</td> <td><input type="checkbox"/> AG7</td> <td>-</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>-</td> <td><input type="checkbox"/> PK2</td> <td><input type="checkbox"/> PK7</td> <td>-</td> <td>●</td> <td>●</td> <td>●</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AZ0</td> <td><input type="checkbox"/> AZ5</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td><input type="checkbox"/> PX1</td> <td><input type="checkbox"/> PX6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AZ1</td> <td><input type="checkbox"/> AZ6</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td><input type="checkbox"/> PX2</td> <td><input type="checkbox"/> PX7</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AZ2</td> <td><input type="checkbox"/> AZ7</td> <td>-</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>●</td> <td><input type="checkbox"/> PA1</td> <td><input type="checkbox"/> PA6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> </tr> <tr> <td rowspan="3">A</td> <td>Ammeter</td> <td><input type="checkbox"/> AE0</td> <td><input type="checkbox"/> AE5</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td><input type="checkbox"/> PA2</td> <td><input type="checkbox"/> PA7</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AE1</td> <td><input type="checkbox"/> AE6</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td><input type="checkbox"/> SC1</td> <td><input type="checkbox"/> SC6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AE2</td> <td><input type="checkbox"/> AE7</td> <td>-</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>●</td> <td><input type="checkbox"/> SC2</td> <td><input type="checkbox"/> SC7</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AC1</td> <td><input type="checkbox"/> AC6</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> <td>-</td> <td><input type="checkbox"/> SK1</td> <td><input type="checkbox"/> SK6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AC2</td> <td><input type="checkbox"/> AC7</td> <td>-</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td><input type="checkbox"/> SK2</td> <td><input type="checkbox"/> SK7</td> <td>-</td> <td>●</td> <td>●</td> <td>●</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AK1</td> <td><input type="checkbox"/> AK6</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> <td>●</td> <td><input type="checkbox"/> SX1</td> <td><input type="checkbox"/> SX6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AK2</td> <td><input type="checkbox"/> AK7</td> <td>-</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>●</td> <td><input type="checkbox"/> SX2</td> <td><input type="checkbox"/> SX7</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AX1</td> <td><input type="checkbox"/> AX6</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> <td>●</td> <td><input type="checkbox"/> SA1</td> <td><input type="checkbox"/> SA6</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> </tr> <tr> <td></td> <td><input type="checkbox"/> AX2</td> <td><input type="checkbox"/> AX7</td> <td>-</td> <td>-</td> <td>●</td> <td>-</td> <td>●</td> <td>-</td> <td><input type="checkbox"/> SA2</td> <td><input type="checkbox"/> SA7</td> <td>-</td> <td>●</td> <td>●</td> <td>-</td> <td>-</td> <td>●</td> </tr> </tbody> </table>		Type		Frequency		Control voltage		Comm.		Optional function		Type		Frequency		Control voltage		Comm.		Optional function			60Hz	50Hz	No	AC/DC 100~250V	DC 24~60V	No	Yes	Earth leakage detection	External CT ground fault	60Hz	50Hz	AC/DC 100~250V	DC 24~60V	Comm.	Earth leakage detection	External CT ground fault	Pre-Trip Alarm	N	Normal	<input type="checkbox"/> NGO	<input type="checkbox"/> NG5	●	-	-	●	-	-	<input type="checkbox"/> PC1	<input type="checkbox"/> PC6	●	-	●	-	-	-		<input type="checkbox"/> AGO	<input type="checkbox"/> AG5	●	-	-	●	-	-	<input type="checkbox"/> PC2	<input type="checkbox"/> PC7	-	●	●	-	-	-		<input type="checkbox"/> AG1	<input type="checkbox"/> AG6	-	●	-	●	-	-	<input type="checkbox"/> PK1	<input type="checkbox"/> PK6	●	-	●	-	-	-		<input type="checkbox"/> AG2	<input type="checkbox"/> AG7	-	-	●	●	-	-	<input type="checkbox"/> PK2	<input type="checkbox"/> PK7	-	●	●	●	-	-		<input type="checkbox"/> AZ0	<input type="checkbox"/> AZ5	●	-	-	●	-	●	<input type="checkbox"/> PX1	<input type="checkbox"/> PX6	●	-	●	-	-	●		<input type="checkbox"/> AZ1	<input type="checkbox"/> AZ6	-	●	-	●	-	●	<input type="checkbox"/> PX2	<input type="checkbox"/> PX7	-	●	●	-	●	-		<input type="checkbox"/> AZ2	<input type="checkbox"/> AZ7	-	-	●	●	-	●	<input type="checkbox"/> PA1	<input type="checkbox"/> PA6	●	-	●	-	-	●	A	Ammeter	<input type="checkbox"/> AE0	<input type="checkbox"/> AE5	●	-	-	●	-	●	<input type="checkbox"/> PA2	<input type="checkbox"/> PA7	-	●	●	-	-	●		<input type="checkbox"/> AE1	<input type="checkbox"/> AE6	-	●	-	●	-	●	<input type="checkbox"/> SC1	<input type="checkbox"/> SC6	●	-	●	-	-	-		<input type="checkbox"/> AE2	<input type="checkbox"/> AE7	-	-	●	●	-	●	<input type="checkbox"/> SC2	<input type="checkbox"/> SC7	-	●	●	-	-	-		<input type="checkbox"/> AC1	<input type="checkbox"/> AC6	-	●	-	-	●	-	<input type="checkbox"/> SK1	<input type="checkbox"/> SK6	●	-	●	-	-	-		<input type="checkbox"/> AC2	<input type="checkbox"/> AC7	-	-	●	-	●	-	<input type="checkbox"/> SK2	<input type="checkbox"/> SK7	-	●	●	●	-	-		<input type="checkbox"/> AK1	<input type="checkbox"/> AK6	-	●	-	-	●	●	<input type="checkbox"/> SX1	<input type="checkbox"/> SX6	●	-	●	-	-	●		<input type="checkbox"/> AK2	<input type="checkbox"/> AK7	-	-	●	●	-	●	<input type="checkbox"/> SX2	<input type="checkbox"/> SX7	-	●	●	-	●	-		<input type="checkbox"/> AX1	<input type="checkbox"/> AX6	-	●	-	-	●	●	<input type="checkbox"/> SA1	<input type="checkbox"/> SA6	●	-	●	-	-	●		<input type="checkbox"/> AX2	<input type="checkbox"/> AX7	-	-	●	-	●	-	<input type="checkbox"/> SA2	<input type="checkbox"/> SA7	-	●	●	-	-	●	<p>Note) - Standard function: Ground fault detection - Communication function is not available under no control voltage - AN, AS type is not available for S Meter - P(Power), S(Supreme) Meter is also available for generator protection - P, S Meter needs the accessory(VDM) for voltage measurement</p>									
				Type		Frequency		Control voltage		Comm.		Optional function		Type		Frequency		Control voltage		Comm.		Optional function																																																																																																																																																																																																																																																																																																															
				60Hz	50Hz	No	AC/DC 100~250V	DC 24~60V	No	Yes	Earth leakage detection	External CT ground fault	60Hz	50Hz	AC/DC 100~250V	DC 24~60V	Comm.	Earth leakage detection	External CT ground fault	Pre-Trip Alarm																																																																																																																																																																																																																																																																																																																	
				N	Normal	<input type="checkbox"/> NGO	<input type="checkbox"/> NG5	●	-	-	●	-	-	<input type="checkbox"/> PC1	<input type="checkbox"/> PC6	●	-	●	-	-	-																																																																																																																																																																																																																																																																																																																
						<input type="checkbox"/> AGO	<input type="checkbox"/> AG5	●	-	-	●	-	-	<input type="checkbox"/> PC2	<input type="checkbox"/> PC7	-	●	●	-	-	-																																																																																																																																																																																																																																																																																																																
					<input type="checkbox"/> AG1	<input type="checkbox"/> AG6	-	●	-	●	-	-	<input type="checkbox"/> PK1	<input type="checkbox"/> PK6	●	-	●	-	-	-																																																																																																																																																																																																																																																																																																																	
					<input type="checkbox"/> AG2	<input type="checkbox"/> AG7	-	-	●	●	-	-	<input type="checkbox"/> PK2	<input type="checkbox"/> PK7	-	●	●	●	-	-																																																																																																																																																																																																																																																																																																																	
					<input type="checkbox"/> AZ0	<input type="checkbox"/> AZ5	●	-	-	●	-	●	<input type="checkbox"/> PX1	<input type="checkbox"/> PX6	●	-	●	-	-	●																																																																																																																																																																																																																																																																																																																	
					<input type="checkbox"/> AZ1	<input type="checkbox"/> AZ6	-	●	-	●	-	●	<input type="checkbox"/> PX2	<input type="checkbox"/> PX7	-	●	●	-	●	-																																																																																																																																																																																																																																																																																																																	
	<input type="checkbox"/> AZ2	<input type="checkbox"/> AZ7	-		-	●	●	-	●	<input type="checkbox"/> PA1	<input type="checkbox"/> PA6	●	-	●	-	-	●																																																																																																																																																																																																																																																																																																																				
A	Ammeter	<input type="checkbox"/> AE0	<input type="checkbox"/> AE5	●	-	-	●	-	●	<input type="checkbox"/> PA2	<input type="checkbox"/> PA7	-	●	●	-	-	●																																																																																																																																																																																																																																																																																																																				
		<input type="checkbox"/> AE1	<input type="checkbox"/> AE6	-	●	-	●	-	●	<input type="checkbox"/> SC1	<input type="checkbox"/> SC6	●	-	●	-	-	-																																																																																																																																																																																																																																																																																																																				
		<input type="checkbox"/> AE2	<input type="checkbox"/> AE7	-	-	●	●	-	●	<input type="checkbox"/> SC2	<input type="checkbox"/> SC7	-	●	●	-	-	-																																																																																																																																																																																																																																																																																																																				
	<input type="checkbox"/> AC1	<input type="checkbox"/> AC6	-	●	-	-	●	-	<input type="checkbox"/> SK1	<input type="checkbox"/> SK6	●	-	●	-	-	-																																																																																																																																																																																																																																																																																																																					
	<input type="checkbox"/> AC2	<input type="checkbox"/> AC7	-	-	●	-	●	-	<input type="checkbox"/> SK2	<input type="checkbox"/> SK7	-	●	●	●	-	-																																																																																																																																																																																																																																																																																																																					
	<input type="checkbox"/> AK1	<input type="checkbox"/> AK6	-	●	-	-	●	●	<input type="checkbox"/> SX1	<input type="checkbox"/> SX6	●	-	●	-	-	●																																																																																																																																																																																																																																																																																																																					
	<input type="checkbox"/> AK2	<input type="checkbox"/> AK7	-	-	●	●	-	●	<input type="checkbox"/> SX2	<input type="checkbox"/> SX7	-	●	●	-	●	-																																																																																																																																																																																																																																																																																																																					
	<input type="checkbox"/> AX1	<input type="checkbox"/> AX6	-	●	-	-	●	●	<input type="checkbox"/> SA1	<input type="checkbox"/> SA6	●	-	●	-	-	●																																																																																																																																																																																																																																																																																																																					
	<input type="checkbox"/> AX2	<input type="checkbox"/> AX7	-	-	●	-	●	-	<input type="checkbox"/> SA2	<input type="checkbox"/> SA7	-	●	●	-	-	●																																																																																																																																																																																																																																																																																																																					
No.of poles		<input type="checkbox"/> 3-pole						<input type="checkbox"/> 4-pole		<input type="checkbox"/> Standard type (R, S, T, N) <input type="checkbox"/> Reverse phase type (N, R, S, T)																																																																																																																																																																																																																																																																																																																											
Installation type		<input type="checkbox"/> Draw-out type						<input type="checkbox"/> Fixed type																																																																																																																																																																																																																																																																																																																													
Closing type		<input type="checkbox"/> Manual closing																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> Electrical closing						<ul style="list-style-type: none"> Charge method: Charging completion contact(1b) is basically installed Motor operating voltage <input type="checkbox"/> AC/DC 100V~130V <input type="checkbox"/> DC 125V <input type="checkbox"/> DC 24V~30V <input type="checkbox"/> AC 48V~60V <input type="checkbox"/> AC/DC 200V~250V <input type="checkbox"/> DC 380V~415V <input type="checkbox"/> DC 440V~480V <input type="checkbox"/> AC 48V																																																																																																																																																																																																																																																																																																																													
								<input type="checkbox"/> Standard type (OFF-Charge method) <input type="checkbox"/> Rapid auto-reclosing type (ON-Charge method)																																																																																																																																																																																																																																																																																																																													
Closing voltage		<input type="checkbox"/> AC/DC 100V~130V <input type="checkbox"/> DC 125V <input type="checkbox"/> AC/DC 200V~250V						<input type="checkbox"/> DC 24V~30V <input type="checkbox"/> DC 48V~60V <input type="checkbox"/> AC 380V~480V <input type="checkbox"/> AC 48V																																																																																																																																																																																																																																																																																																																													
Trip voltage		<input type="checkbox"/> AC/DC 100V~130V <input type="checkbox"/> DC 125V <input type="checkbox"/> AC/DC 200V~250V						<input type="checkbox"/> DC 24V~30V <input type="checkbox"/> DC 48V~60V <input type="checkbox"/> AC 380V~480V <input type="checkbox"/> AC 48V																																																																																																																																																																																																																																																																																																																													
ACB cradle	Cradle type	<input type="checkbox"/> No safety shutter (E class)						<input type="checkbox"/> Safety shutter attachment (F class)																																																																																																																																																																																																																																																																																																																													
	Terminal connection	<input type="checkbox"/> Manual connection						<input type="checkbox"/> Automatic connection																																																																																																																																																																																																																																																																																																																													
	Connections	<input type="checkbox"/> Horizontal			<input type="checkbox"/> Vertical			<input type="checkbox"/> Front connection			<input type="checkbox"/> Separate order/ User Installation																																																																																																																																																																																																																																																																																																																										
ACB accessory	ACB Main body	Standard accessory	<ul style="list-style-type: none"> Aux. contact(AX) Key Lock(K1, K3) Undervoltage trip device (UVT, Instantaneous) <input type="checkbox"/> AC/DC 100V~130V <input type="checkbox"/> AC/DC 200V~250V <input type="checkbox"/> DC 125V <input type="checkbox"/> DC 24V~30V <input type="checkbox"/> DC 48V~60V <input type="checkbox"/> AC/DC 380V~480V <input type="checkbox"/> AC 48V						<input type="checkbox"/> Extended type (5a5b) Note 3 <input type="checkbox"/> High capacity (5a5b) Note 3 <input type="checkbox"/> Single key, K1 (ON - Lock) <input type="checkbox"/> Double key, K3 (ON - Lock)																																																																																																																																																																																																																																																																																																																												
			<ul style="list-style-type: none"> Mechanical operation contact (MOC), Door Interlock (DI) Mechanical interlock (MI) Counter(C) Note 2 Miss insertion preventive device (MIP) Double shunt coil(SHT2) Ready-to-close switch(RCS) Trip alarm switch, Manual reset button(AL, MRB) Key interlock (K2, ON - Lock) 						<input type="checkbox"/> Non-attachment type <input type="checkbox"/> ON/OFF Button Lock																																																																																																																																																																																																																																																																																																																												
			<input type="checkbox"/> Safety shutter lock(STL) <input type="checkbox"/> Zero arc space(ZAS) Note 2																																																																																																																																																																																																																																																																																																																																		
			<input type="checkbox"/> Insulation barrier(IB) <input type="checkbox"/> Slow closing lever(SL)																																																																																																																																																																																																																																																																																																																																		
			<ul style="list-style-type: none"> Cell switch(CL) Door interlock(DI) Mechanical operation contact (MOC) Mechanical Interlock (MI) Shortening b-contact (SBC, 4b Max) Miss insertion preventive device (MIP) Cradle mounting block(CMB) Racking interlock(RI) UVT time delay controller(UDC) <input type="checkbox"/> 4c <input type="checkbox"/> 8c <input type="checkbox"/> 1b <input type="checkbox"/> 2b <input type="checkbox"/> 3b						<input type="checkbox"/> Standard type (10a10b) <input type="checkbox"/> High capacity(10a10b) <input type="checkbox"/> Wire type (2 terminals) <input type="checkbox"/> Wire type (3 terminals) <input type="checkbox"/> Non-attachment type <input type="checkbox"/> Non-attachment type <input type="checkbox"/> Non-attachment type <input type="checkbox"/> Non-attachment type																																																																																																																																																																																																																																																																																																																												
			<input type="checkbox"/> Condenser trip device (CTD) <input type="checkbox"/> Profibus-DP Comm.(PC)						<input type="checkbox"/> DC 48V~60V <input type="checkbox"/> AC 380V~480V <input type="checkbox"/> AC 48V <input type="checkbox"/> OCR tester																																																																																																																																																																																																																																																																																																																												
			<input type="checkbox"/> Dust cover(DC)						<input type="checkbox"/> Temperature alarm(TM) <input type="checkbox"/> Remote I/O(RCO)																																																																																																																																																																																																																																																																																																																												
			<input type="checkbox"/> Temperature Alarm																																																																																																																																																																																																																																																																																																																																		
	ACB Cradle		Standard accessory																																																																																																																																																																																																																																																																																																																																		
Separate purchase	Main body mounting	<input type="checkbox"/> Cell switch(CL) <input type="checkbox"/> Door interlock(DI) <input type="checkbox"/> Mechanical operation contact (MOC) <input type="checkbox"/> Mechanical Interlock (MI) <input type="checkbox"/> Shortening b-contact (SBC, 4b Max) <input type="checkbox"/> Miss insertion preventive device (MIP)						<input type="checkbox"/> Standard type (10a10b) <input type="checkbox"/> High capacity(10a10b) <input type="checkbox"/> Wire type (2 terminals) <input type="checkbox"/> Wire type (3 terminals) <input type="checkbox"/> Non-attachment type																																																																																																																																																																																																																																																																																																																													
		<input type="checkbox"/> 1b <input type="checkbox"/> 2b <input type="checkbox"/> 3b																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> Cradle mounting block(CMB) <input type="checkbox"/> Racking interlock(RI)																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> Insulation barrier(IB) Note 2																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> UVT time delay controller(UDC)																																																																																																																																																																																																																																																																																																																																			
	Cradle mounting		<input type="checkbox"/> AC/DC 100V~130V <input type="checkbox"/> AC/DC 200V~250V <input type="checkbox"/> DC 125V <input type="checkbox"/> DC 24V~30V <input type="checkbox"/> DC 48V~60V <input type="checkbox"/> AC 380V~480V <input type="checkbox"/> AC 48V																																																																																																																																																																																																																																																																																																																																		
			<input type="checkbox"/> Condenser trip device (CTD)																																																																																																																																																																																																																																																																																																																																		
			<input type="checkbox"/> Profibus-DP Comm.(PC)																																																																																																																																																																																																																																																																																																																																		
			<input type="checkbox"/> Temperature alarm(TM)																																																																																																																																																																																																																																																																																																																																		
			<input type="checkbox"/> Remote I/O(RCO)																																																																																																																																																																																																																																																																																																																																		
External mounting		<input type="checkbox"/> DC 125V																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> Condenser trip device (CTD)																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> Profibus-DP Comm.(PC)																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> Temperature alarm(TM)																																																																																																																																																																																																																																																																																																																																			
		<input type="checkbox"/> Remote I/O(RCO)																																																																																																																																																																																																																																																																																																																																			

Note) 1. In case of D type of Metasol (AN), frame size is in the range of 630~1600AF

2. The standard accessory for Susol (AH).

3. Aux. contact with extended/high capacity type adopts the rapid auto-reclosing method and available up to 6a6b.

Green Innovators of Innovation



Safety Instructions

- For your safety, please read user's manual thoroughly before operating.
- Contact the nearest authorized service facility for examination, repair, or adjustment.
- Please contact a qualified service technician when you need maintenance.
Do not disassemble or repair by yourself!
- Any maintenance and inspection shall be performed by the personnel having expertise concerned.

LSIS Co., Ltd.

© 2007.8 LSIS Co.,Ltd. All rights reserved.

www.lsisc.com

■ HEAD OFFICE

LS Tower 1026-6, Hogye-dong, Dongan-gu,
Anyang-si, Gyeonggi-do 431-848, Korea
Tel. (82-2)2034-4887, 4873, 4918, 4148
Fax. (82-2)2034-4648

■ CHEONG-JU PLANT

Cheong-Ju Plant #1, Song Jung Dong, Hung Duk Ku,
Cheong Ju, 361-720, Korea



Specifications in this catalog are subject to change without notice due to continuous product development and improvement.

■ Global Network

- **LSIS (Middle East) FZE >> Dubai, U.A.E.**
Address: LOB 19 JAFZA VIEW TOWER Room 205, Jebel Ali Freezone P.O. Box 114216, Dubai, United Arab Emirates
Tel: 971-4-886 5360 Fax: 971-4-886-5361 e-mail: jungyongl@lsis.biz
- **Dalian LSIS Co., Ltd. >> Dalian, China**
Address: No.15, Liaohexi 3-Road, Economic and Technical Development zone, Dalian 116600, China
Tel: 86-411-8273-7777 Fax: 86-411-8730-7560 e-mail: lixk@lsis.com.cn
- **LSIS (Wuxi) Co., Ltd. >> Wuxi, China**
Address: 102-A, National High & New Tech Industrial Development Area, Wuxi, Jiangsu, 214028, P.R.China
Tel: 86-510-8534-6666 Fax: 86-510-522-4078 e-mail: xuhg@lsis.com.cn
- **LSIS-VINA Co., Ltd. >> Hanoi, Vietnam**
Address: Nguyen Khe - Dong Anh - Ha Noi - Viet Nam
Tel: 84-4-882-0222 Fax: 84-4-882-0220 e-mail: srjo@lsisvina.com
- **LSIS-VINA Co., Ltd. >> Hochiminh , Vietnam**
Address: 41 Nguyen Thi Minh Khai Str. Yoco Bldg 4th Floor, Hochiminh City, Vietnam
Tel: 84-8-3822-7941 Fax: 84-8-3822-7942 e-mail: spark@lsisvina.com
- **LSIS Shanghai Office >> Shanghai, China**
Address: Room E-G, 12th Floor Huamin Empire Plaza, No.726, West Yan'an Road Shanghai 200050, P.R. China
Tel: 86-21-5237-9977 (609) Fax: 89-21-5237-7191 e-mail: jinhk@lsis.com.cn
- **LSIS Beijing Office >> Beijing, China**
Address: B-Tower 17FL,Beijing Global Trade Center B/D. No.36, BeiSanHuanDongLu, DongCheng-District, Beijing 100013, P.R. China
Tel: 86-10-5825-6025,7 Fax: 86-10-5825-6026 e-mail: cuixiaorong@lsis.com.cn
- **LSIS Guangzhou Office >> Guangzhou, China**
Address: Room 1403,14F,New Poly Tower,2 Zhongshan Liu Road,Guangzhou, P.R. China
Tel: 86-20-8326-6764 Fax: 86-20-8326-6287 e-mail: linsz@lsis.biz
- **LSIS Chengdu Office >> Chengdu, China**
Address: Room 1701 17Floor, huaminhanjian international Building, N01 Fuxing Road Chengdu, 610041, P.R. China
Tel: 86-28-8670-3101 Fax: 86-28-8670-3203 e-mail: yangcf@lsis.com.cn
- **LSIS Qingdao Office >> Qingdao, China**
Address: 7B40,Haixin Guangchang Shenyi Building B, No.9, Shandong Road, Qingdao 26600, P.R. China
Tel: 86-532-8501-6568 Fax: 86-532-583-3793 e-mail: lirj@lsis.com.cn
- **LSIS NETHERLANDS Co.Ltd >> Qingdao, Netherlands**
Address: 1st. Floor, Tupolevlaan 48, 1119NZ,Schiphol-Rijk, The Netherlands
Tel: 31-20-654-1420 Fax: 31-20-654-1429 e-mail: junshickp@lsis.biz
- **LSIS Gurgaon Office >> Gurgaon ,India**
Address: 109 First Floor, Park Central, Sector-30, Gurgaon- 122 002, Haryana, India